

## REMOVAL AND INSTALLATION

### Bumper Cover — Front

#### Removal and Installation

1. Remove the 6 pin-type retainers and the upper radiator sight shield.
2. Remove the 2 upper front bumper cover bolts.
3. Remove the 6 front fender splash shield-to-front bumper cover screws.
4. If equipped, remove the 6 front bumper cover-to-valance panel screws.
5. Position the front splash shield aside and remove the 4 front bumper cover-to-reinforcement nuts.
  - To install, tighten to 5 Nm (44 lb-in).
6. If equipped, disconnect the 2 fog lamp electrical connectors.
7. Disconnect the 4 side marker lamp electrical connectors and remove the front bumper cover.
8. To install, reverse the removal procedure.

