


### Safety Belt Buckle — Rear

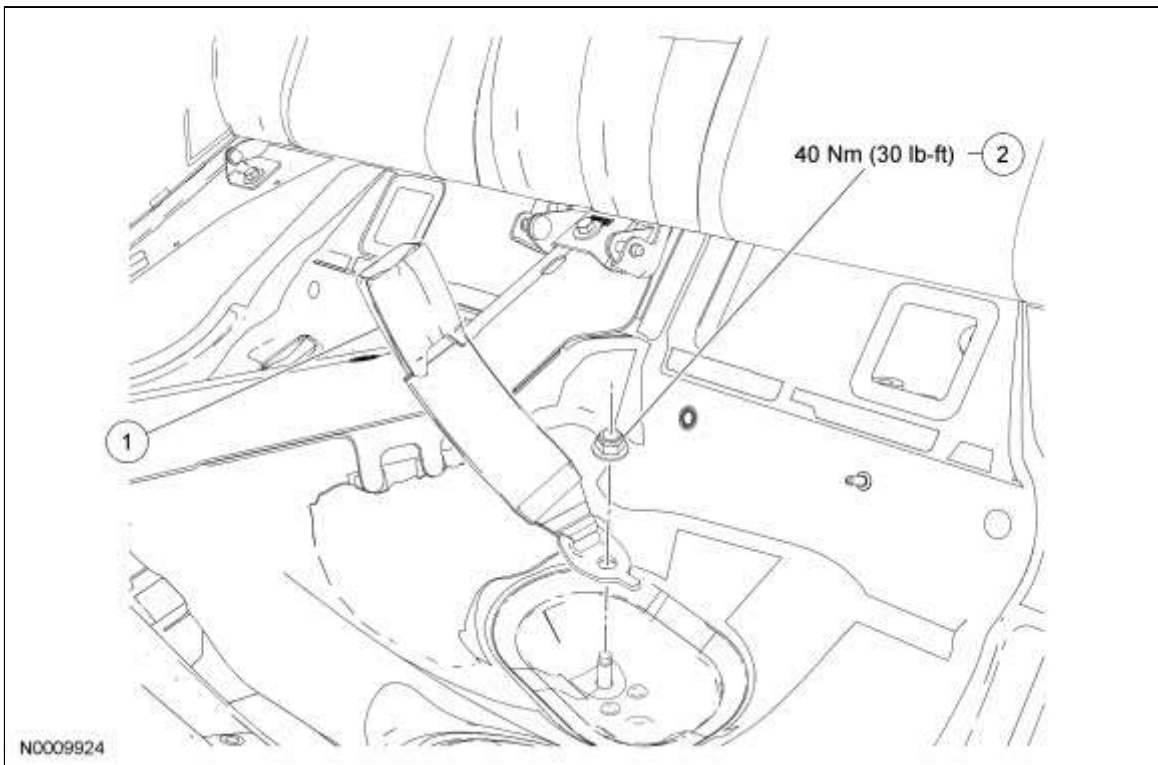

Item	Part Number	Description
1	60044 (RH/LH)	Safety belt buckle
2	W520113	Safety belt buckle nut

### Removal and Installation

**⚠ WARNING:** After any crash, all of the following safety belt assemblies and attaching hardware must be inspected by an authorized dealer to verify correct function:


- Retractors
- Buckles
- Belt tension sensor (BTS) (if equipped)
- Front safety belt buckle support assemblies (slide bar) (if equipped)
- Safety belt shoulder belt height adjusters (if equipped)
- Child safety seat tether bracket assemblies
- Automatic locking retractor (ALR) feature for child safety seats (passenger seating positions only)

If any safety belt assembly is damaged, does not operate correctly or does not pass all of the Functional Tests in the Diagnosis and Testing portion of this section, a new safety belt assembly must be installed. If any safety belt assembly attaching areas are damaged or distorted, the sheet metal must be restored to its original structural integrity and new safety belt assembly and attaching hardware must be installed. Failure to install new safety belt assemblies and attaching hardware may increase the risk of serious personal injury or death in a crash.

After any crash that results in deployment of the driver and/or front outboard passenger safety belt pretensioners, new driver and/or front outboard passenger safety belt systems (including retractors, buckles and height adjusters) must be installed. Failure to install new safety belt systems increases the risk of serious personal injury or death in a crash.

1. Remove the rear seat cushion. For additional information, refer to [Section 501-10](#).
2. Remove the nut and safety belt buckle.
  - When installing the safety belt buckle, align the locator tab between the dimples in the floor pan as shown for correct installation.

- To install, tighten to 40 Nm (30 lb-ft).

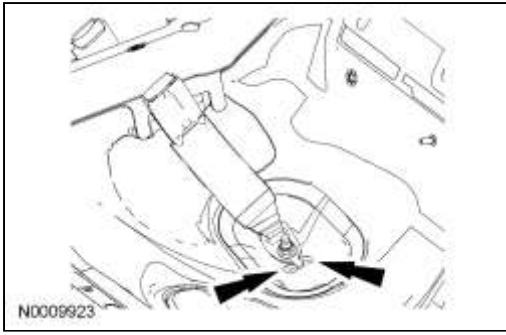

3. **NOTE:** Before installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.

To install, reverse the removal procedure.

4. Check the active restraint system for correct operation. For additional information, refer to the appropriate Functional Test procedure in [Safety Belt System](#) in this section.