


Instrument Panel Cluster (IPC) Lens

1. Remove the Instrument Panel Cluster (IPC) . Refer to [Instrument Panel Cluster \(IPC\)](#).
2. Release the clips and remove the IPC lens.

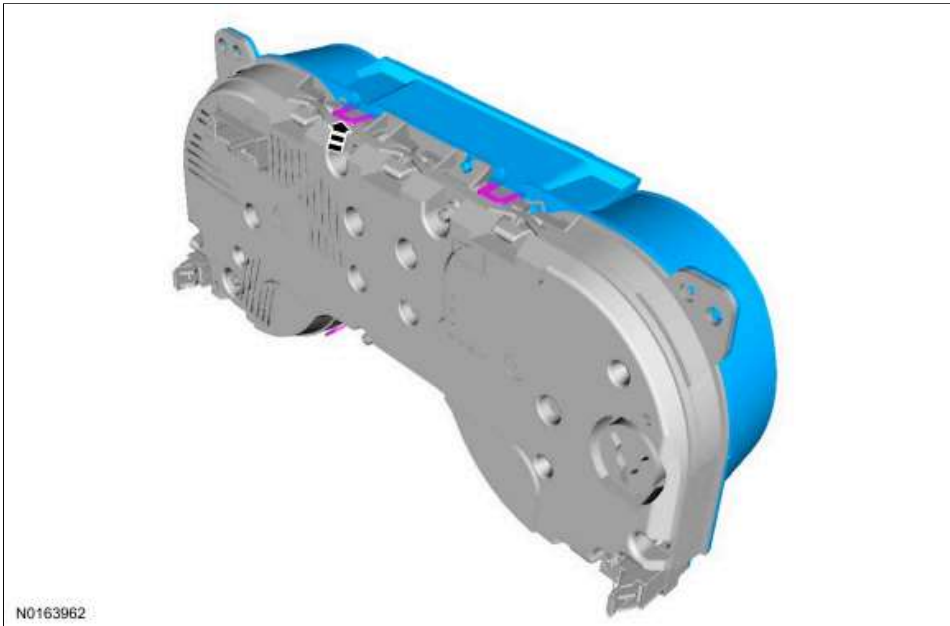

3. To install, reverse the removal procedure.