

## Transceiver


### Removal

1. Remove from steering column housing. Refer to [Section 11-04](#).
2. Remove both upper and lower steering column shrouds (three fasteners).
3. Remove screw retaining passive anti-theft (PATS) transceiver module to .
4. **NOTE: Only apply pressure or leverage below the key cylinder lower rib.**  
Locate rib on steering column lock cylinder housing. Use a small screwdriver to gently pry PATS transceiver module over the rib.
5. Disconnect the PATS transceiver module from steering column locators and wiring harness connector and remove transceiver from vehicle.

### Installation

1. Locate post on circular antenna and align to open slot of steering column key cylinder barrel.
2. Apply even pressure to top surface of the PATS transceiver and slide it onto the lock cylinder.
3. Position the rib on transceiver case within the two walls of the cavity on the steering column lock cylinder housing, to prevent movement.
4. **NOTE: Avoid pinching the transceiver wires with the retaining screw.**  
Install PATS transceiver module retaining screw to . Tighten to 2 Nm (18 lb-in).
5. Connect PATS transceiver module to steering column bracket, and connect harness connector.
6. Install the upper and lower steering column shrouds (three fasteners).
7. Install the ignition switch lock cylinder. Refer to [Section 11-04](#).
8. **NOTE: No key replacement or re-initialization needs to occur with the removal or installation of a new PATS transceiver module.**

Check the system for normal operation.

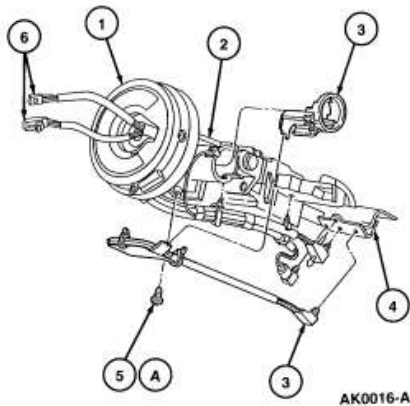

Item	Part Number	Description
1		
2		
3	15607	Passive Anti-Theft (PATS) Transceiver Module
4		
5	390345-S36	Screw
6	—	To Air Bag Module (Part of 14A664)
A	—	Tighten to 2 Nm (18 Lb-In)

