


## GENERAL PROCEDURES

### Door Window Glass Adjustment — Height Stop Adjustment

1. Remove the door trim panel. For additional information, refer to Section 501-05.
2. Close the door.
3. Raise the door window glass to the desired height.
4. **NOTE:** Door window front height adjustment shown. Door window rear height adjustment is similar.  
Lower the window to access the door window front and rear height stop adjustments.

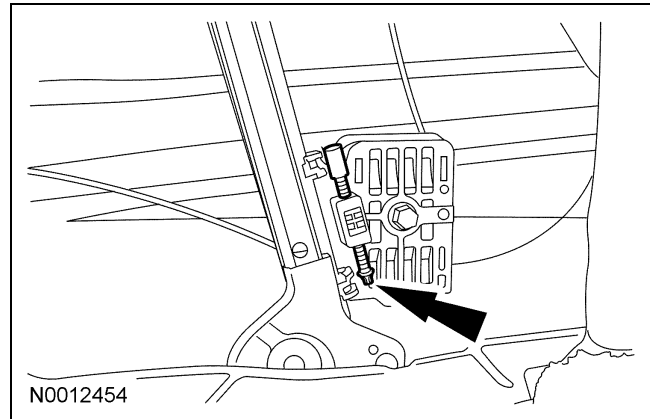

5. Adjust the door window front and rear height stop adjustments to achieve the desired door window height.
6. Install the door trim panel. For additional information, refer to Section 501-05.
7. If necessary, carry out the Door Window Motor Initialization in this section.