

2007 Ford Mustang

Driving Condition:	Normal Condition
Series:	GT
Cylinders:	8
Fuel:	Gasoline
Transmission:	Manual
Engine Displacement:	4.6 L

Recommended maintenance for your vehicle

Mileage	15k	30k	45k	60k	75k	90k	100k	105k	120k	135k	150k
Inspect PCV for flow (3V and 4V engines)											X
Replace fuel filter		X		X		X			X		X
Inspect brake pads/shoes/rotors/drums, brake lines and hoses, and parking brake system	X	X	X	X	X	X		X	X	X	X
Replace engine air filter		X		X		X			X		X
Inspect engine cooling system and hoses	X	X	X	X	X	X		X	X	X	X
Change Premium Gold engine coolant							X				X
Replace accessory drive belts (if not replaced within last 100,000 miles)											X
Inspect accessory drive belt(s)							X				
Replace spark plugs							X				
Inspect complete exhaust system and heat shields		X		X		X			X		X
Replace cabin air filter	X	X	X	X	X	X		X	X	X	X
Inspect and lubricate all non-sealed steering linkage, ball joints, suspension joints, half-shafts / drive-shafts, and u-joints	X	X	X	X	X	X		X	X	X	X



**EVERY
5,000
MILES**

- Rotate and inspect tires; check wheel end play and turning noise
- Perform multi-point inspection
- Change engine oil and replace oil filter (up to 5 quarts of oil)