

**SECTION 413-13 Parking Aid**

**CONTENTS**


**PAGE**

Parking Aid Sensor .....	413-13-2
--------------------------	----------

## Parking Aid Sensor

### Removal

1. Remove the rear bumper cover. Refer to Section 501-19.
- 2.

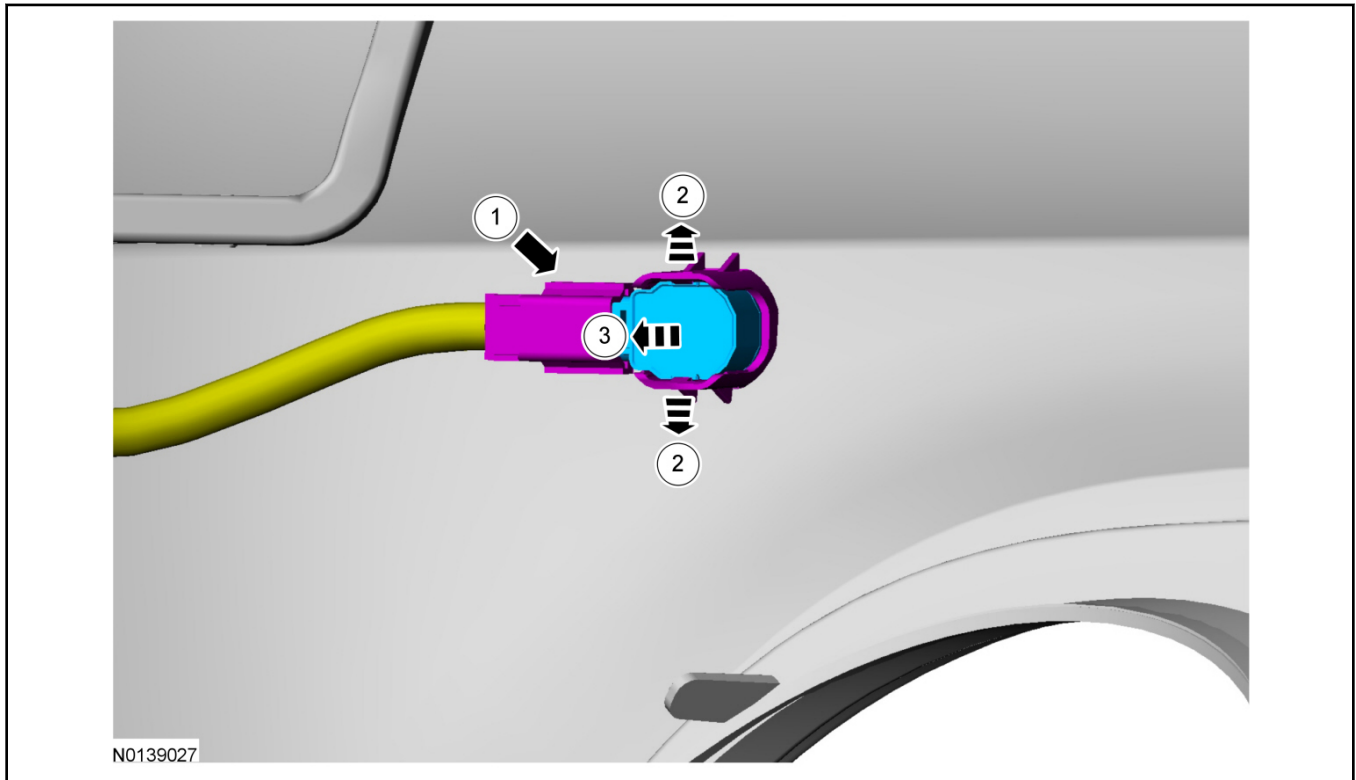

### Installation

1. To install, reverse the removal procedure.
  - Carry out the azimuth and elevation system check. For additional information, refer to Azimuth System Check and Elevation System Check.