

Brake Caliper - Vehicles With: 6-Piston Brake Caliper


Removal

NOTICE: Make sure that all openings are sealed.


NOTICE: Do not spill brake fluid on painted or plastic surfaces or damage to the surface may occur. If brake fluid is spilled onto a painted or plastic surface, immediately wash the surface with water.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the brake pads.
Refer to: [Brake Pads - Vehicles With: 6-Piston Brake Caliper](#) (206-03 Front Disc Brake, Removal and Installation).
2. Remove the bolt and disconnect the brake hose. Discard the washers.
Torque: 35 lb.ft (48 Nm)

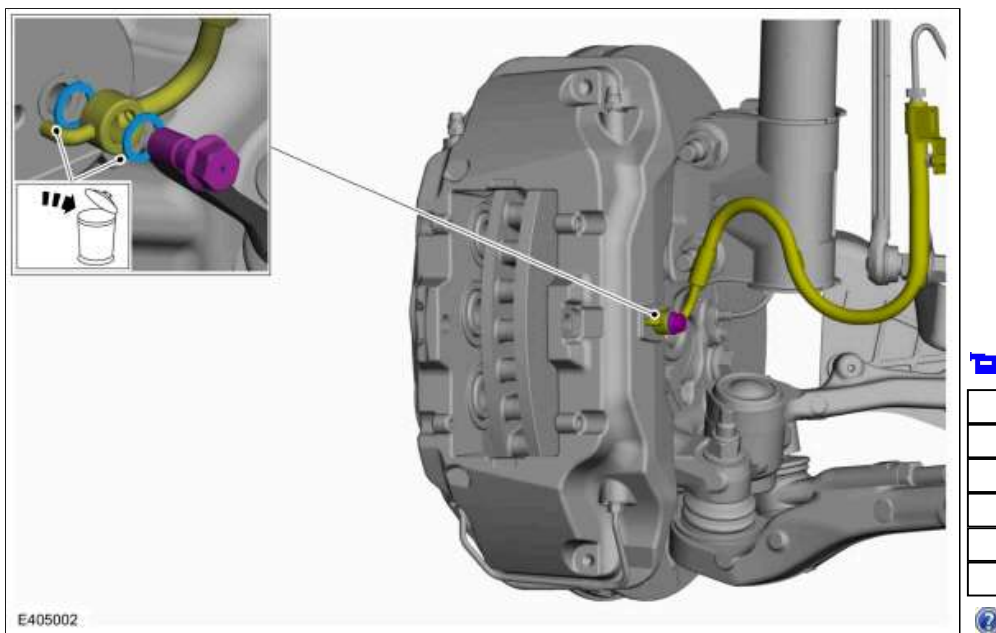

3. Remove the bolts and the brake caliper. Discard the bolts.
Torque: 81 lb.ft (110 Nm)

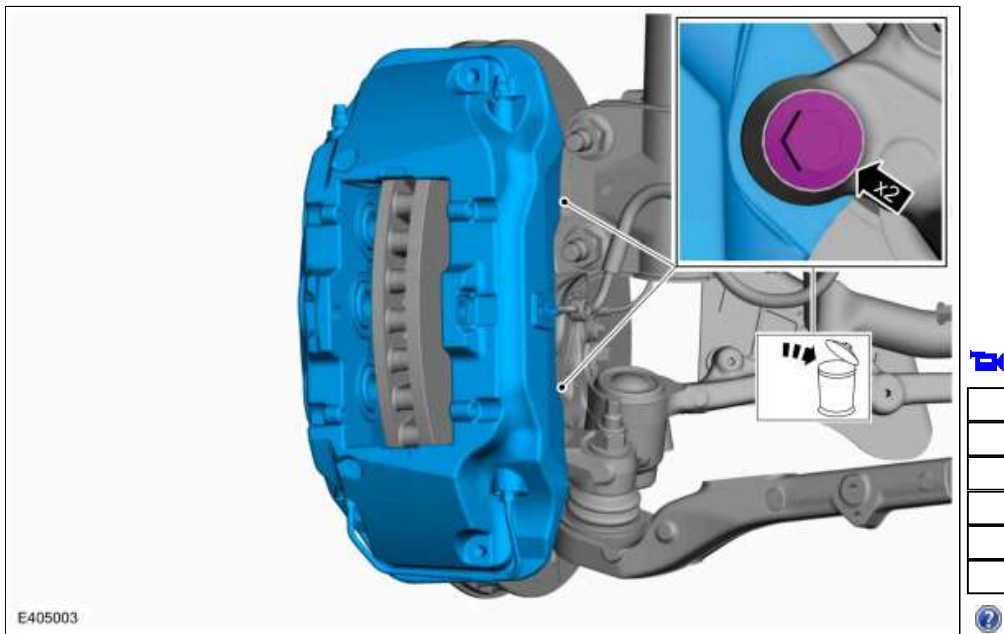

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** For vehicles equipped with 4 or 6 piston brake calipers, bleed the inner bleeder screw first, followed by the outer bleeder screw.

Bleed the brake system.

Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).

© Copyright 2025, Ford Motor Company.