


REMOVAL AND INSTALLATION

Exterior Mirrors — Exploded View

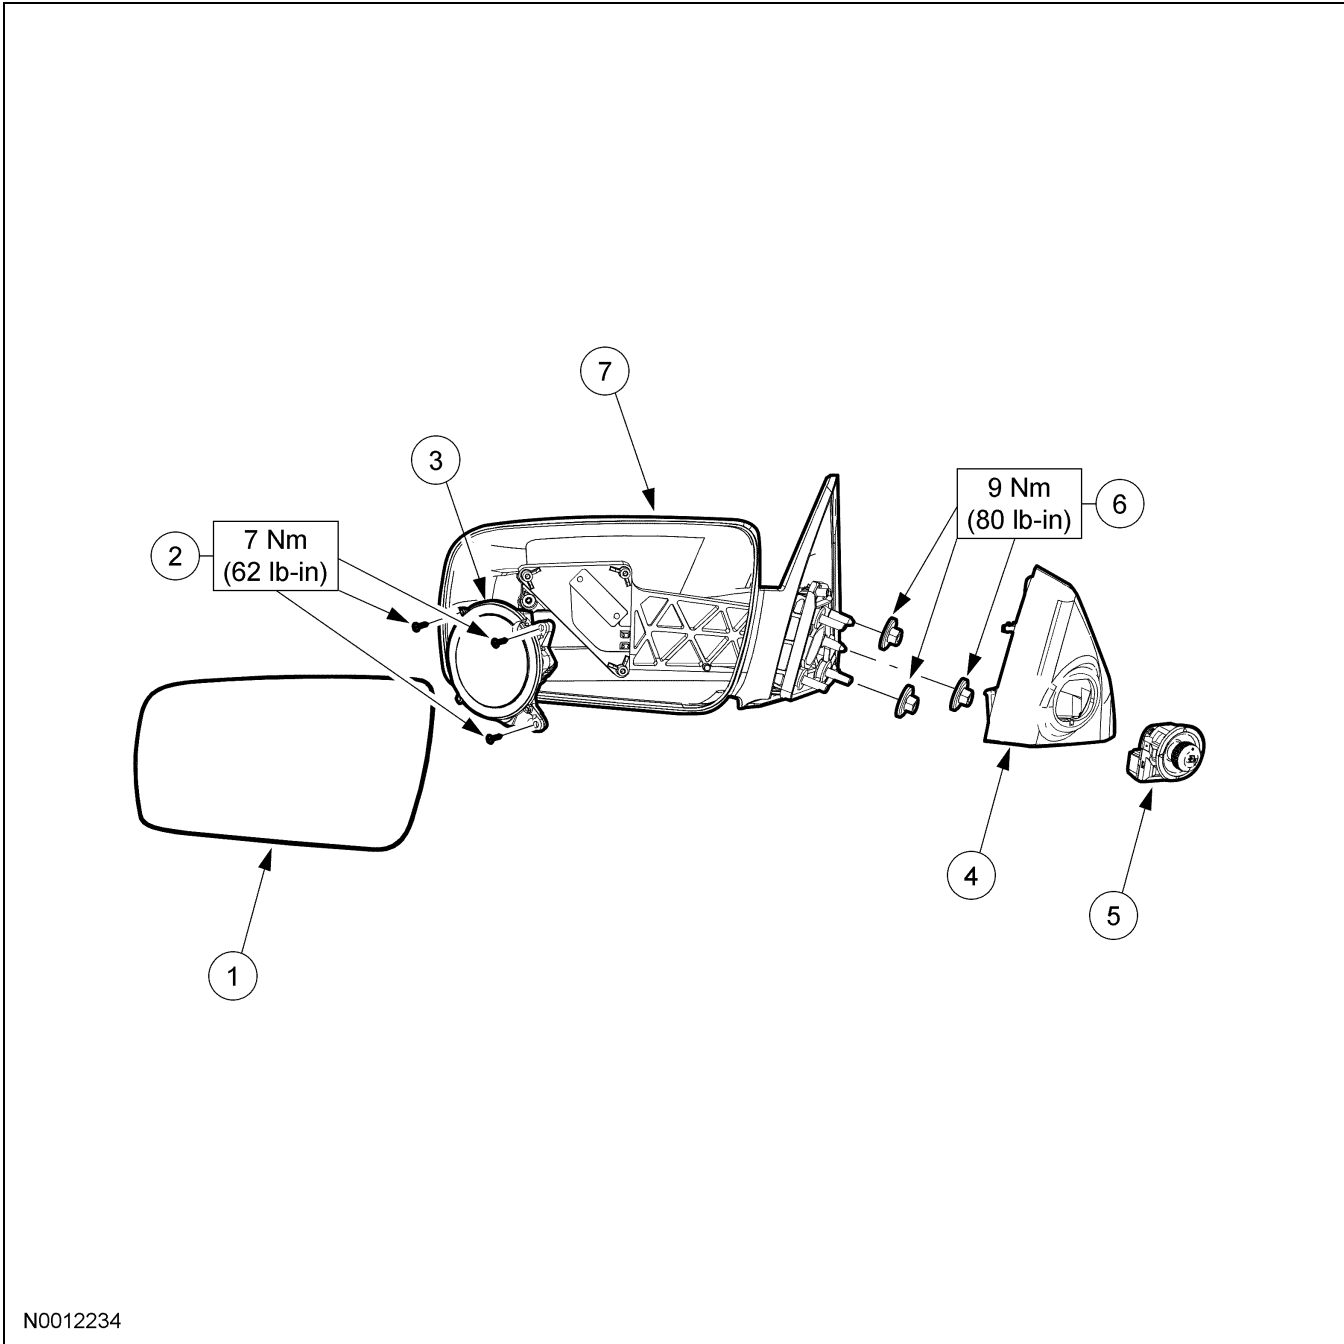

N0012234

Item	Part Number	Description
1	17K707 (RH), 17T675-A (LH)	Exterior mirror glass
2	—	Exterior mirror motor screws (3 per side required)
3	17D696-B	Exterior mirror motor

(Continued)

Item	Part Number	Description
4	17D698-B (RH), 17D699-B (LH)	Sail panel
5	17B676-A	Exterior mirror control switch
6	N621907-S	Exterior mirror mounting nuts (3 per side required)
7	17682-A (RH), 17683-A (LH)	Exterior mirror housing

REMOVAL AND INSTALLATION (Continued)

1. For additional information, refer to the procedures in this section.
-