


## REMOVAL AND INSTALLATION

### Luggage Compartment Lid Latch

#### Material

Item	Specification
Multi-Purpose Grease Spray XL-5	ESB-M1C93B

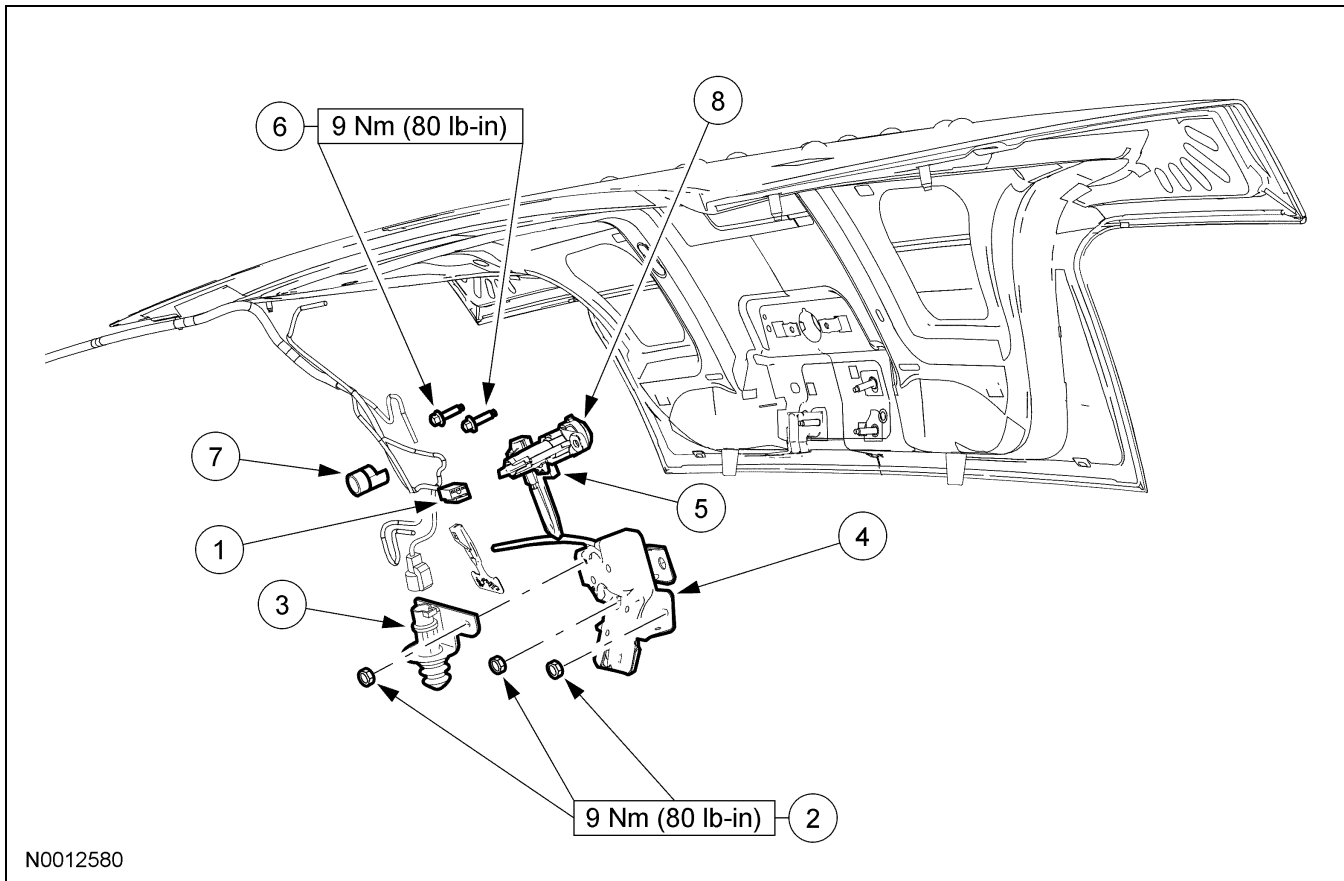

Item	Part Number	Description
1	—	Luggage compartment lid latch electrical connector (part of 19B516)
2	N807260	Luggage compartment lid latch nuts (3 required)
3	19A434	Luggage compartment lid ajar switch
4	43200	Luggage compartment lid latch
5	—	Luggage compartment lid anti-theft inhibit switch electrical harness (if equipped) (part of 6343262)

(Continued)

Item	Part Number	Description
6	W500614	Luggage compartment lid lock cylinder bolts (2 required)
7	—	Luggage compartment lid release cable (part of 43200)
8	43262	Luggage compartment lid lock cylinder


#### Removal and Installation

1. Remove the luggage compartment lid trim panel.

**REMOVAL AND INSTALLATION (Continued)**

2. Disconnect the luggage compartment lid latch actuator cable from the luggage compartment lid lock cylinder.
3. Disconnect the luggage compartment lid latch electrical connector.
4. **NOTE:** Mark the location of the luggage compartment lid latch to aid installation.  
Remove the 3 luggage compartment lid latch nuts.

- To install, tighten to 9 Nm (80 lb-in).

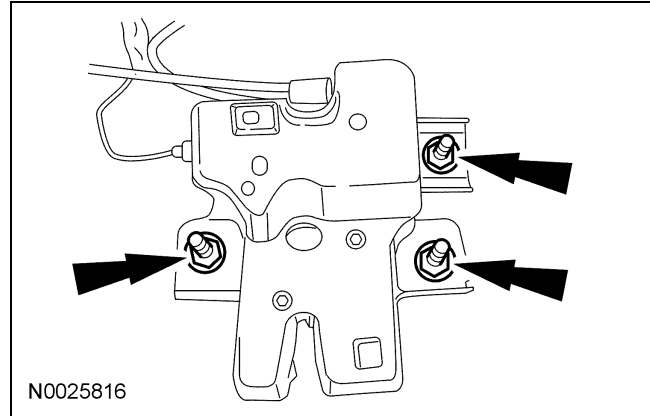

5. Position the luggage compartment lid ajar switch aside.
6. Remove the luggage compartment lid latch.
7. To install, reverse the removal procedure.
  - Lubricate the luggage compartment lid latch after installation.