


REMOVAL AND INSTALLATION

Door Window Glass

NOTE: The RH side is shown, the LH side is similar.

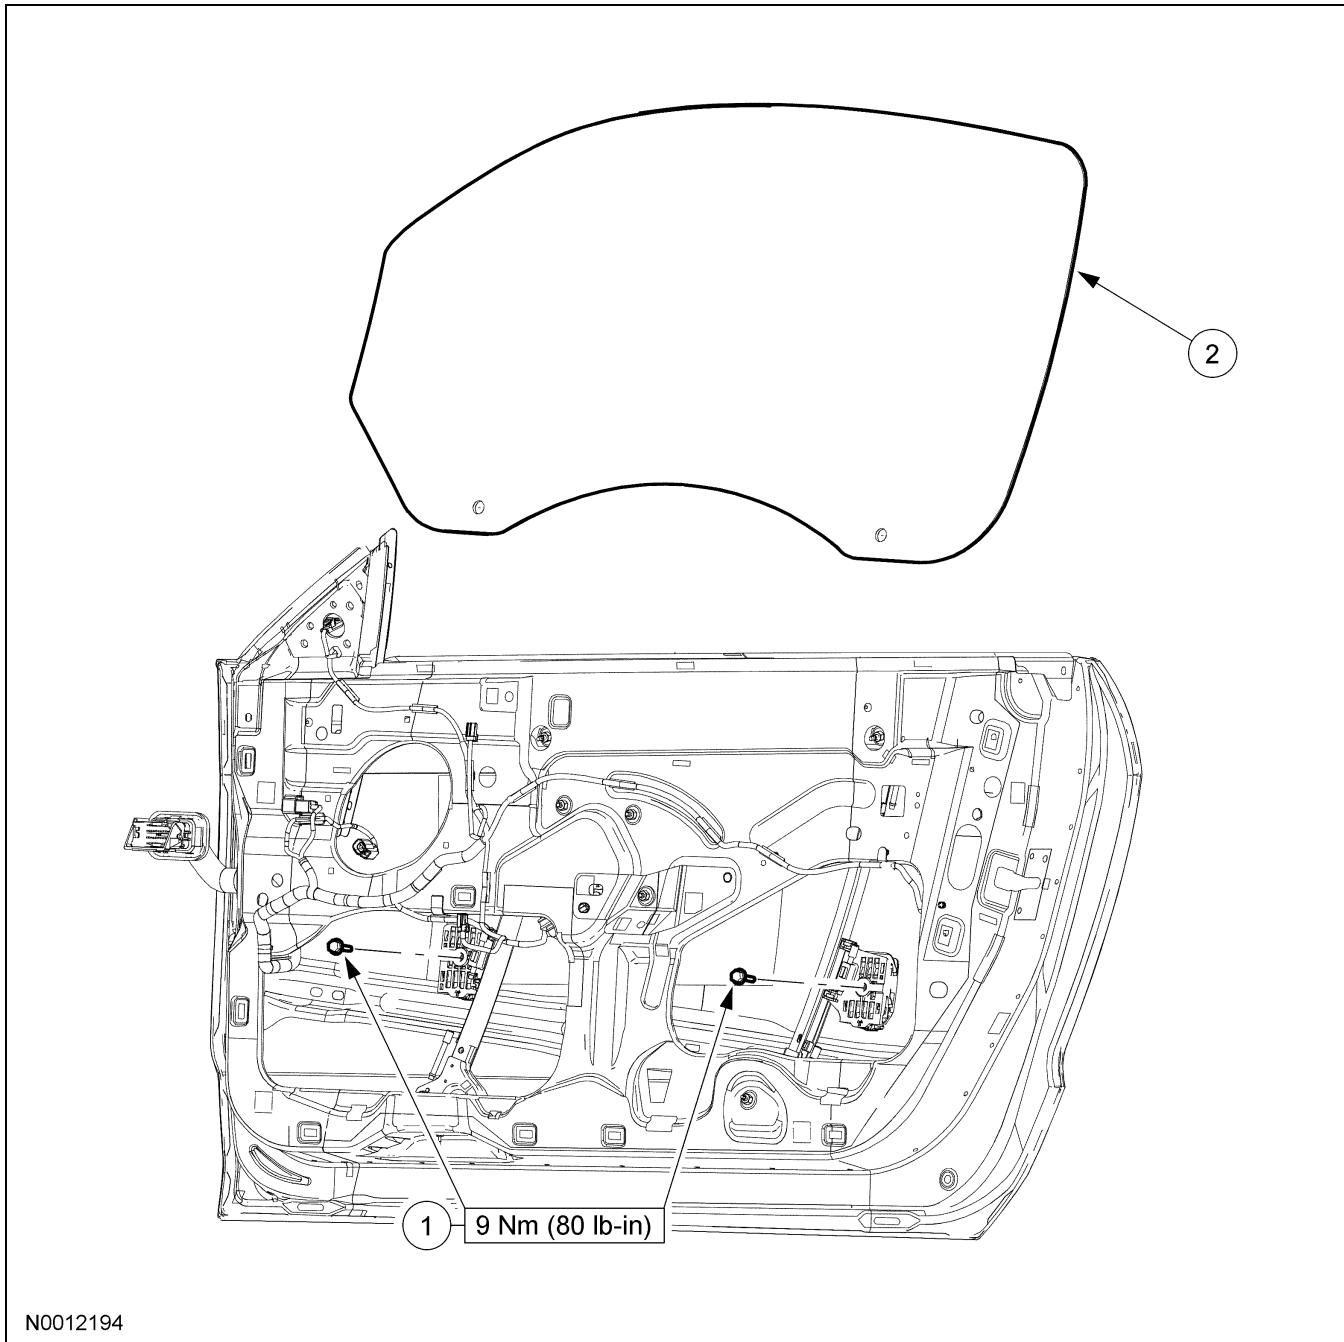

N0012194

Item	Part Number	Description
1	76231A06	Door window glass bolts and sleeves (2 required)
2	6321410/ 6321411	Door window glass (RH/LH)

Removal and Installation

1. Remove the door trim panel. For additional information, refer to Section 501-05.
2. Position the watershield aside.

REMOVAL AND INSTALLATION (Continued)

3. Remove the 2 door window glass bolts and sleeves.
 - To install, tighten to 9 Nm (80 lb-in).
 4. Tip the front of the glass down to clear the door filler and remove the door window glass.
 5. To install, reverse the removal procedure.
 - Make sure the window glass is correctly seated into the window glass clamps during installation.
 - Adjust the door window glass as necessary. For additional information, refer to Door Window Glass Adjustment — Height Stop Adjustment and Door Window Glass Adjustment — Stabilizer in this section.
-