


### Body Control Module B (BCM-B)

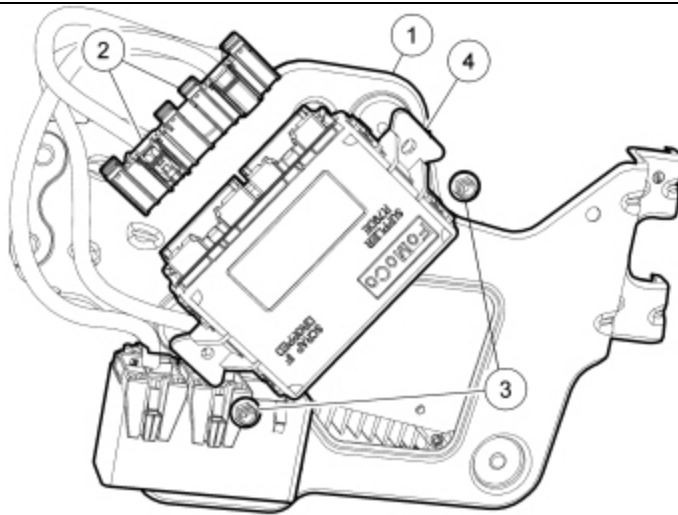

Item	Part Number	Description
1	14D644	Body Control Module B (BCM-B) bracket assembly
2	—	<u>BCM-B</u> electrical connectors (part of 14A005)
3	W707142	<u>BCM-B</u> nuts (2 required)
4	18T805	<u>BCM-B</u>

#### Removal

**NOTE:** Prior to the removal of the module, it is necessary to upload the module configuration information to a scan tool. This information must be downloaded into the new Body Control Module B (BCM-B) after installation. For additional information, refer to [Section 418-01](#).

- NOTE:** If the BCM-B is being replaced, follow this step. If the BCM-B is not being replaced, go to Step 2.

Upload the module configuration information from the BCM-B into the scan tool. For additional information, refer to [Section 418-01](#).

- From the right side of the luggage compartment, remove the pushpin and position aside the RH luggage compartment trim cover.
- Remove the 4 BCM-B bracket assembly nuts and position the assembly for access to the BCM-B.
- Disconnect the 2 BCM-B electrical connectors.
- Remove the 2 nuts and the BCM-B.

#### Installation

- Position the BCM-B on the BCM-B bracket and install the 2 nuts.
- Connect the 2 BCM-B electrical connectors.
- Position the BCM-B bracket assembly in place and install the 4 nuts, tightening the rear nuts first.
- Position the RH luggage compartment trim cover and install the pushpin.
- NOTE:** If the BCM-B is being replaced, follow this step. If the BCM-B is not being replaced, the procedure is complete.

Download the module configuration information from the scan tool into the BCM-B. For additional information, refer to [Section 418-01](#).

6. Carry out the BCM-B self-test (must include an on-demand self-test) and then repeat the self-test to confirm all BCM-B DTCs have been cleared.