
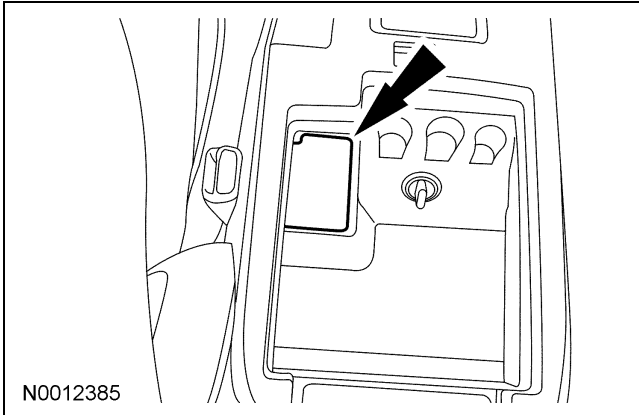


## GENERAL PROCEDURES

### Parking Brake Cable Tension Release

 **CAUTION:** Do not overtighten the parking brake cable adjustment nut. Overtightening will cause the brakes to drag or lock up.

1. Remove the access cover inside the floor console bin.



2. Position the parking brake control handle at the fourth notch to access the parking brake cable adjuster nut.
3. **NOTE:** The rod is notched to prevent the removal of the nut.  
Loosen but do not remove the parking brake cable adjuster nut.
4. Lower the parking brake control handle.
5. To adjust the parking brake cable tension, refer to Parking Brake Cable Adjustment in this section.