
GENERAL PROCEDURES

Parking Brake Cable Adjustment


CAUTION: Do not overtighten the parking brake cable adjustment nut. Overtightening will cause the brakes to drag or lock up.

 Remove the access cover inside the floor console bin.

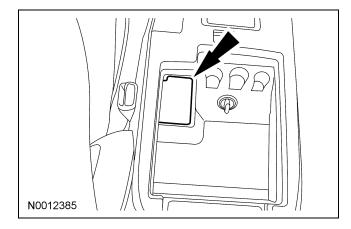

- 2. Position the parking brake handle up at the fourth notch to access the adjuster nut.
- 3. **NOTE:** The rod is staked to prevent the removal of the nut.

Loosen but do not remove the parking brake cable adjuster nut.

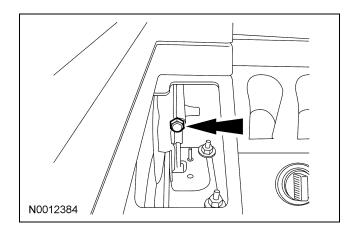

- 4. Apply the tension by tightening the parking brake cable adjustment nut until there is no lash in the system with the handle in the lowered position.
- 5. Cycle the parking brake control 4 times and adjust as necessary.
- 6. Lower the parking brake handle and install the access cover.
- 7. Test the parking brake system for proper operation.