

REMOVAL AND INSTALLATION

Parking Brake Control

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the floor console. For additional information, refer to Section 501-12.
3. Release the tension on the parking brake cable. For additional information, refer to Parking Brake Cable Tension Release in this section.
4. Disconnect the front parking brake cable from the 2 rear parking brake cables at the equalizer and release the front cable from the body bracket.
5. Disconnect the parking brake switch electrical connector.
6. Remove the 2 nuts from the parking brake control.
 - To install, tighten to 17 Nm (13 lb-ft).
7. Remove the 2 bolts from the parking brake control.
 - To install, tighten to 30 Nm (22 lb-ft).
8. Remove the parking brake control.
 - Position the cable and equalizer through the floorpan.
9. To install, reverse the removal procedure.
 - Adjust the parking brake cable tension. For additional information, refer to Parking Brake Cable Adjustment in this section.

