

REMOVAL AND INSTALLATION

Accessory Drive Belt — 4.6L (3V)

Removal and Installation

1. Using a suitable belt tensioner release tool, rotate the accessory drive belt tensioner clockwise and remove the accessory drive belt.
2. **NOTE:** Refer to the illustration for correct drive belt routing.
To install, reverse the removal procedure.

