

**REMOVAL AND INSTALLATION****Wiper Mounting Arm and Pivot Shaft****Removal and Installation**

1. Remove the RH and LH cowl vent screens. For additional information, refer to Section 501-02.
  2. Remove the 3 bolts and the windshield wiper mounting arm and pivot shaft.
    - To install, tighten to 7 Nm (62 lb-in).
  3. Disconnect the windshield wiper motor electrical connector.
  4. To install, reverse the removal procedure.
-