

## REMOVAL AND INSTALLATION

### Wiper Pivot Arm

#### Removal

- NOTE:** New wiper pivot arms need to be installed as an assembly.  
Remove the 2 wiper pivot arm nut covers.
- Remove the 2 nuts and the 2 wiper pivot arms.

#### Installation

- Cycle and park the windshield wipers.
- Install the wiper blade and pivot arm onto the pivot shaft.
  - Align the wiper blades to 33-45 mm (1.29-1.77 inches) for the RH wiper blade, and 39-52 mm (1.53-2.05 inches) for the LH wiper blade.
- Install the 2 wiper pivot arm nuts.
  - Tighten to 20 Nm (15 lb-ft).
  - If necessary, adjust the wiper pivot arms. For additional information, refer to Wiper Blade and Pivot Arm Adjustment in this section.
- Install the 2 wiper pivot arm nut covers.

