

---

## REMOVAL AND INSTALLATION

### Brake Caliper Support Bracket

#### Removal and Installation

1. Remove the rear axle shaft. For additional information, refer to Section 205-02A or Section 205-02B.
  2. Remove the 3 bolts and the brake disc shield.
    - To install, tighten to 20 Nm (15 lb-ft).
  3. **NOTE:** Make sure the anti-moan bracket holes, the brake caliper support bracket, and the brake caliper anchor plate holes line up during installation.  
Remove the anti-moan bracket.
    - To install, tighten to 35 Nm (26 lb-ft).
  4. Remove the 4 brake caliper support bracket nuts, bolts and the bracket.
    - To install, tighten to 68 Nm (50 lb-ft).
  5. To install, reverse the removal procedure.
-