

REMOVAL AND INSTALLATION

Ignition Coil-On-Plug

Material

Item	Specification
Silicone Brake Caliper Grease and Dielectric Compound XG-3-A or equivalent	ESE-M1C171-A

Removal and Installation

1. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
2. Disconnect the ignition coil electrical connectors.
3. Remove the ignition coil bolts.
 - To install, tighten to 5 Nm (44 lb-in).
4. **NOTE:** When removing the ignition coils, a slight twisting motion will break the seal and ease removal.
Remove the ignition coils.
5. To install, reverse the removal procedure.
 - Apply a light film of silicone brake caliper grease and dielectric compound to the inside of the coil boots before installation.