

## REMOVAL AND INSTALLATION

### Exterior Mirror

#### Removal and Installation

1. Remove the sail panel.
    - If equipped, disconnect the exterior mirror control switch electrical connector.
  2. Remove the 3 nuts and the exterior mirror.
    - To install, tighten to 9 Nm (80 lb-in).
  3. To install, reverse the removal procedure.
-