


## REMOVAL AND INSTALLATION

### Exterior Mirror Glass


#### Removal

1. Position the inner edge of the exterior mirror glass to its maximum travel.

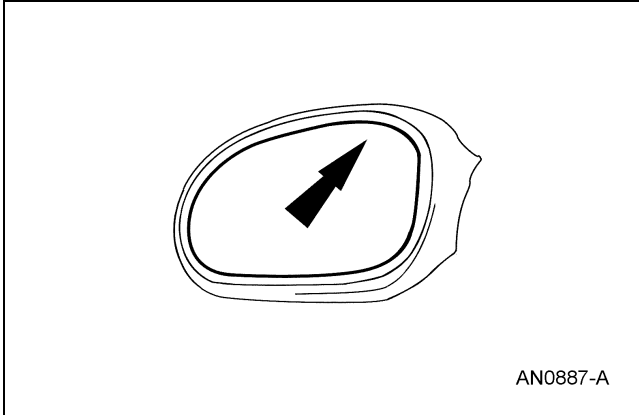

2. **⚠ WARNING: Place a shop towel between the exterior mirror glass and the hand to avoid personal injury in the instance of glass breakage. Failure to follow these instructions may result in personal injury.**

Grasp the outer edge of the exterior mirror glass and pull outward to remove the exterior mirror glass.

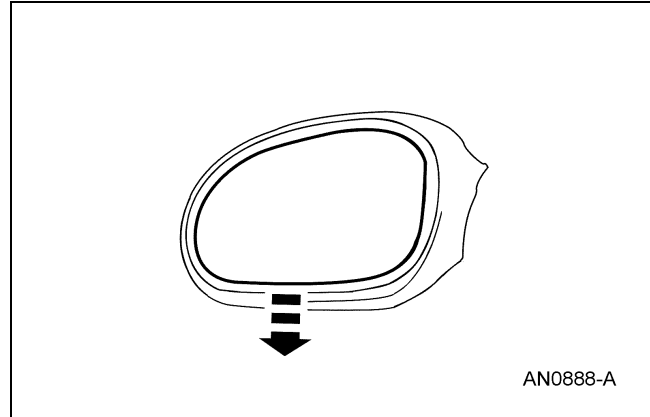

#### Installation

1. **⚠ WARNING: Place a shop towel between the exterior mirror glass and the hand to avoid personal injury in the instance of glass breakage. Failure to follow these instructions may result in personal injury.**

**NOTE:** An audible click will be heard during installation.

Install the exterior mirror glass by pressing firmly in the center of the exterior glass until it snaps onto the exterior mirror motor.