

REMOVAL AND INSTALLATION

Exterior Mirror Motor

Removal and Installation

1. Remove the exterior mirror glass. For additional information, refer to Exterior Mirror Glass in this section.
 2. Remove the 3 exterior mirror motor screws.
 - To install, tighten to 7 Nm (62 lb-in).
 3. Disconnect the exterior mirror motor electrical connector.
 4. Remove the exterior mirror motor.
 5. To install, reverse the removal procedure.
-