
REMOVAL AND INSTALLATION

Fog Lamp Bulb

NOTE: V6 fog lamp shown, V8 fog lamp similar.

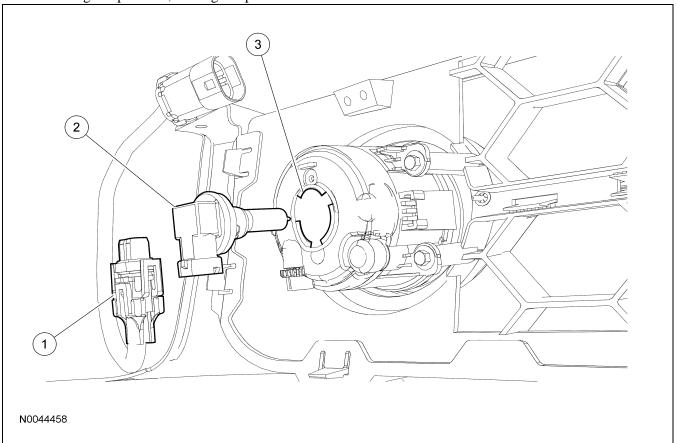

Item	Part Number	Description
1	15A211	Fog lamp electrical connector
2	13N021	Fog lamp bulb
3	15200	Fog lamp assembly (RH/LH)

Removal and Installation

WARNING: The fog lamp bulb contains gas under pressure. The bulb may shatter if the glass envelope is scratched or if the bulb is dropped. Handle the bulb carefully. Grasp the bulb only by its base. Avoid touching the glass envelope. Failure to follow these instructions may result in personal injury.

NOTE: The fog lamp bulb should not be removed from the fog lamp until just before a new bulb is installed. Removing the bulb for an extended period of time may affect fog lamp bulb performance. Contaminants may enter the fog lamp where they can settle on the lens and reflector. Never turn on the fog lamps with the bulb removed.

NOTE: Make sure the headlamp switch and the ignition switch are in the OFF position.

REMOVAL AND INSTALLATION (Continued)

- 1. Remove the front bumper cover. For additional information, refer to Section 501-19.
- 3. To install, reverse the removal procedure.
- 2. Disconnect the electrical connector and remove the fog lamp bulb.