

## REMOVAL AND INSTALLATION

### Hood Latch

#### Material

Item	Specification
Multi-Purpose Grease Spray XL-5	ESR-M1C159-A

#### Removal and Installation

1. Remove the 6 pin-type retainers and the upper radiator sight shield.
  2. Remove the front bumper cover. For additional information, refer to Section 501-19.
  3. **NOTE:** Mark the location of the hood latch to aid installation.  
Remove the 2 hood latch bolts.
    - To install, tighten to 12 Nm (9 lb-ft).
  4. Disconnect the hood release cable.
  5. Remove the hood latch.
  6. To install, reverse the removal procedure.
    - Adjust the hood latch for correct engagement after installation.
    - Lubricate the hood latch after installation.
-