
REMOVAL AND INSTALLATION

Bumper — Rear

Removal and Installation

1. Remove the rear bumper cover. For additional information, refer to Bumper Cover — Rear in this section.
 2. Remove the 2 pin-type retainers and the 2 rear bumper isolators.
 3. Remove the 6 rear bumper bolts and the rear bumper.
 - To install, tighten to 25 Nm (18 lb-ft).
 4. To install, reverse the removal procedure.
-