
Seat Cushion — Rear

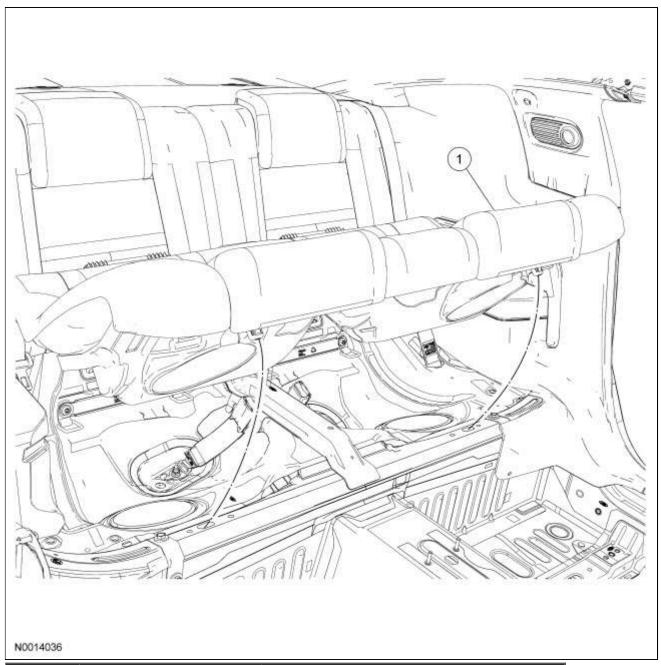

Item	Part Number	Description	
1	_	Seat cushion assembly	

Removal

1. From under the front of the rear cushion assembly, push in each of the 2 seat cushion release tabs, lift up at the front and remove the rear cushion assembly.

Installation

1. **NOTE:** Make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants. Align the cushion assembly and push down, engaging the retainer tabs.