


REMOVAL AND INSTALLATION

Seat Cushion — Rear

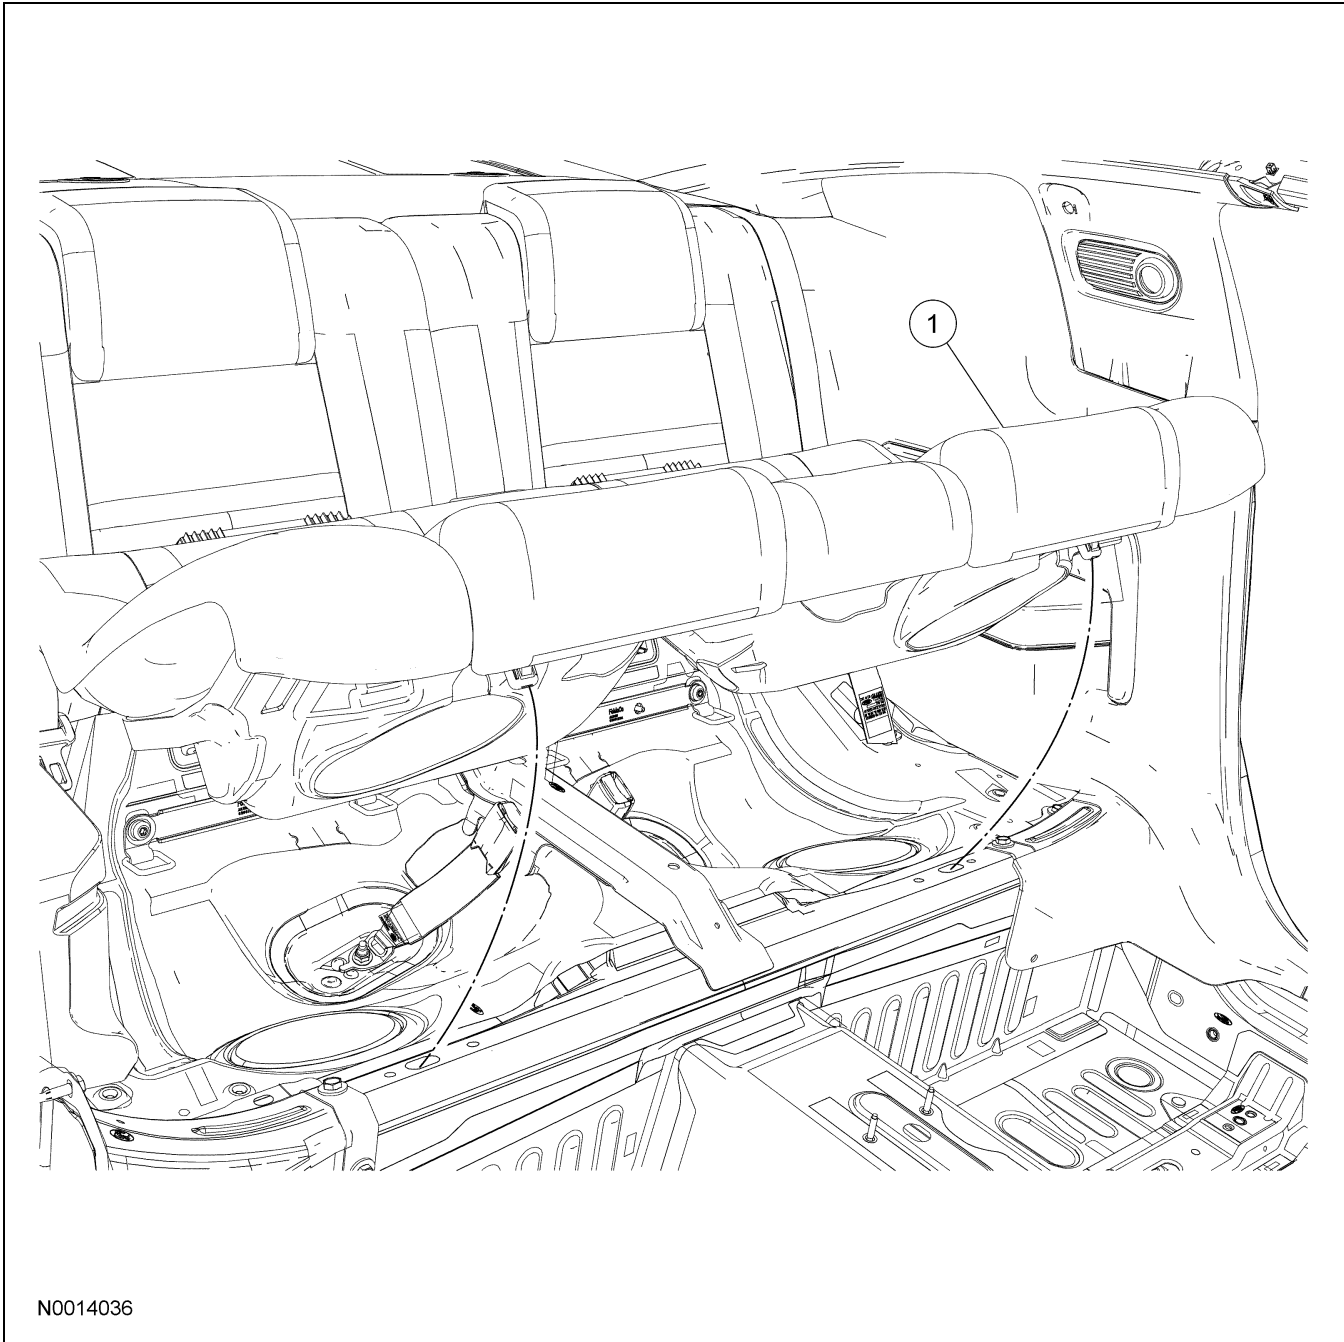

N0014036

Item	Part Number	Description
1	—	Seat cushion assembly

Removal

1. From under the front of the rear cushion assembly, push each of the 2 seat cushion release tabs in, lift up at the front and remove the rear cushion assembly.

REMOVAL AND INSTALLATION (Continued)**Installation**

1. Align the cushion assembly and push down, engaging the retainer tabs.
 - Make sure the safety belts and buckles are accessible to the occupants after installation.
-