

System Arming

The system will be armed when one of the following input sequences is followed:

NOTE: Opening the front doors (20124), opening the hood or removing the luggage compartment lock mechanism will activate the alarm.

1. Turn ignition switch OFF.
2. Open a front door. Alarm indicator lamp flashes.
3. Lock the front doors with power door lock switches (14028). Alarm indicator lamp on steady.
4. Close both front doors.
5. Wait approximately 30 seconds for alarm indicator lamp to go out. This indicates system is armed.

The system can be armed by the keyless entry remote transmitter (15K601) by following this input sequence:

1. Turn ignition switch OFF.
 2. Close both front doors. Alarm indicator lamp is off.
 3. Press the LOCK button on the keyless entry remote transmitter.
 4. Wait approximately 30 seconds for the alarm indicator lamp to turn off. This indicates the system is armed.
-