

Disarming an Untriggered System

NOTE: Any of the following will disarm an untriggered system.

- Unlock driver or passenger front doors (20124) with the key.
 - Unlock driver front doors by pressing UNLOCK button of keyless entry remote transmitter (15K601).
 - If remaining in the vehicle, turn ignition switch to RUN or ACC.
-