

## System Triggering

**NOTE: Within three minutes after the system has been triggered, the horns (13832) and exterior lamps will shut off automatically. The system will then reset to an armed state and will trigger again if another intrusion occurs. However, the vehicle's starter circuit will remain disabled until the system is disarmed.**

The alarm system will be activated if any of the following actions occur after the system has been armed:

- opening either front door (20124) without first unlocking with door key
  - removing luggage compartment door lock cylinder
  - tampering with ignition key lock cylinder (3.8L vehicles only)
  - opening the hood
-