

## Panic Alarm Activation

The personal security alarm can only be operated from the keyless entry remote transmitter (15K601) as follows:

- Pressing the button marked PANIC on the keyless entry remote transmitter will cause the horn (13832) to sound.
- Also, the low beam headlamp bulbs (13007) and the parking lamps (13200) and rear lamp (13404) will flash.
- **NOTE: The personal security feature is controlled by the electronic door lock control processor. It is completely independent of the anti-theft alarm control module. Refer to [Section 01-14B](#) for diagnosis and testing.**

The personal security feature can only be deactivated by pressing PANIC button again or turning the ignition to RUN or ACC position.

---