

Battery Saver

NOTE: The battery saver relay does NOT control power to the headlamps (13008).

The electronic door lock control processor includes a battery saver relay which supplies power to:

- convenience lamps (Circuit 705).
- interior lamp (13776) (Circuit 53, BK/LB)
- luggage compartment lamp (13A756) (Circuit 707, W/Y) when active. When the battery saver relay deactivates, power is removed from these lamps.

The battery saver relay:

- activates any time the electronic door lock control processor receives an input signal.
 - deactivates 45 minutes after the last input to the electronic door lock control processor.
-