

Security Mode Operation

The electronic door lock control processor also controls the panic mode function if equipped. Upon activation of the panic mode by pressing the keyless entry remote transmitter panic button, the electronic door lock control processor sends a signal to activate the horn (13832) for approximately two minutes 45 seconds and hazard lamps relays for three minutes. The electronic door lock control processor cancels the alarm if the panic button is pressed again or if the ignition switch is turned to the RUN or START position.
