


DESCRIPTION AND OPERATION (Continued)

Item	Part Number	Description
8	5C524	Exhaust camshaft Variable Camshaft Timing (VCT)
9	5C525	Intake camshaft VCT
10	6010	Cylinder block
11	6049	Cylinder head — RH
12	6L266	Timing chain tensioner — RH
13	6621	Oil pump
14	6622	Oil pump screen and pickup tube
15	6C878	Oil pan baffle and gasket
16	6675	Oil pan
17	6K868	Piston cooling jet (4 required)

Engine Assembly - Boss® 302

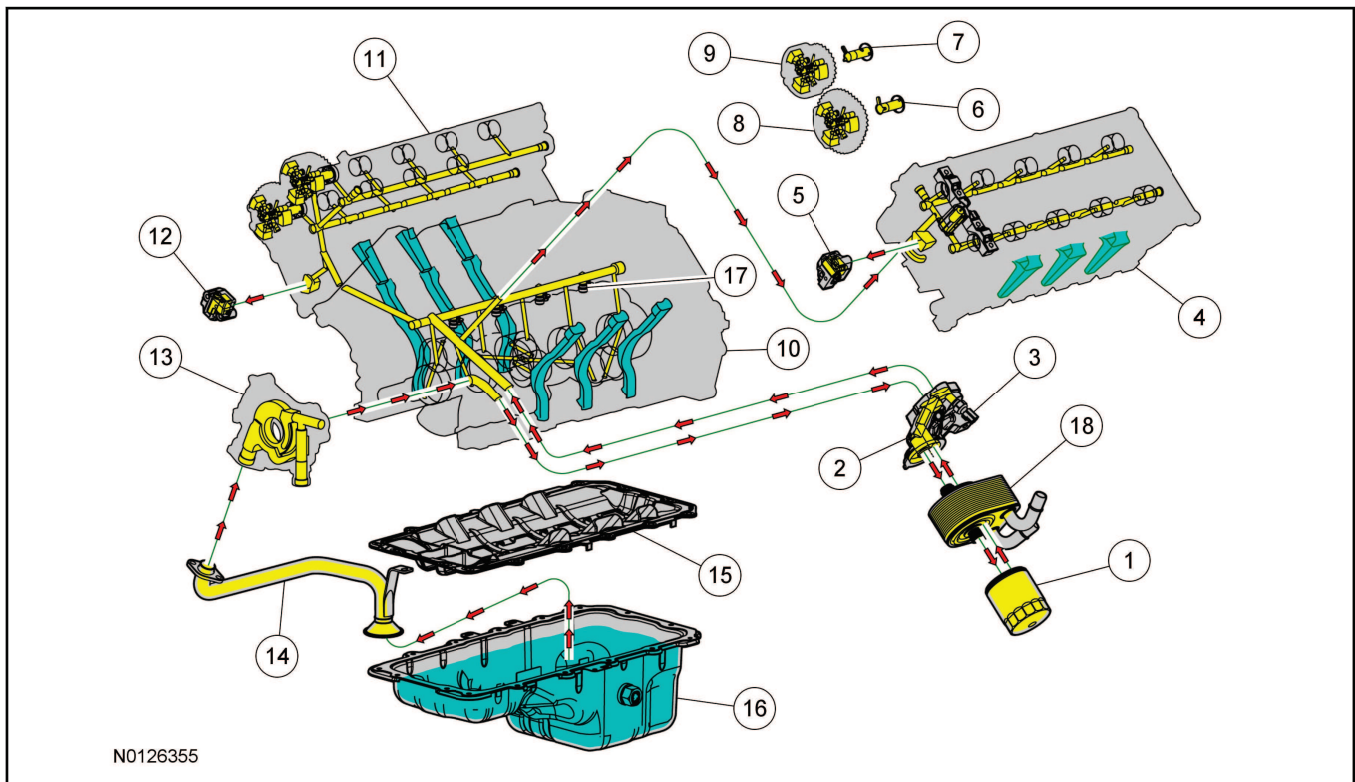

Item	Part Number	Description
1	6714	Oil filter
2	6881	Oil filter adapter
3	9278	Engine Oil Pressure (EOP) switch
4	6050	Cylinder head — LH
5	6L266	Timing chain tensioner — LH
6	6A272/6A273	Exhaust camshaft
7	6A270/6A271	Intake camshaft
8	5C524	Exhaust camshaft Variable Camshaft Timing (VCT)
9	5C525	Intake camshaft VCT
10	6010	Cylinder block
11	6049	Cylinder head — RH
12	6L266	Timing chain tensioner — RH
13	6621	Oil pump

DESCRIPTION AND OPERATION (Continued)

Item	Part Number	Description
14	6622	Oil pump screen and pickup tube
15	6C878	Oil pan baffle and gasket
16	6675	Oil pan
17	6K868	Oil plug (4 required)
18	6A642	Oil Cooler