


**Airbag and Safety Belt Pretensioner Supplemental Restraint System (SRS)**

The air bag Supplemental Restraint System (SRS) is designed to provide increased collision protection for front seat occupants, in addition to the 3-point safety belt system. Safety belt use is necessary to obtain the best occupant protection and to receive the full advantage of the SRS .

The serviceable air bag and safety belt pretensioner SRS components are shown in the following illustrations.

**Air Bag and Safety Belt Pretensioner Supplemental Restraint System (SRS) Components (Illustration 1 of 2)**

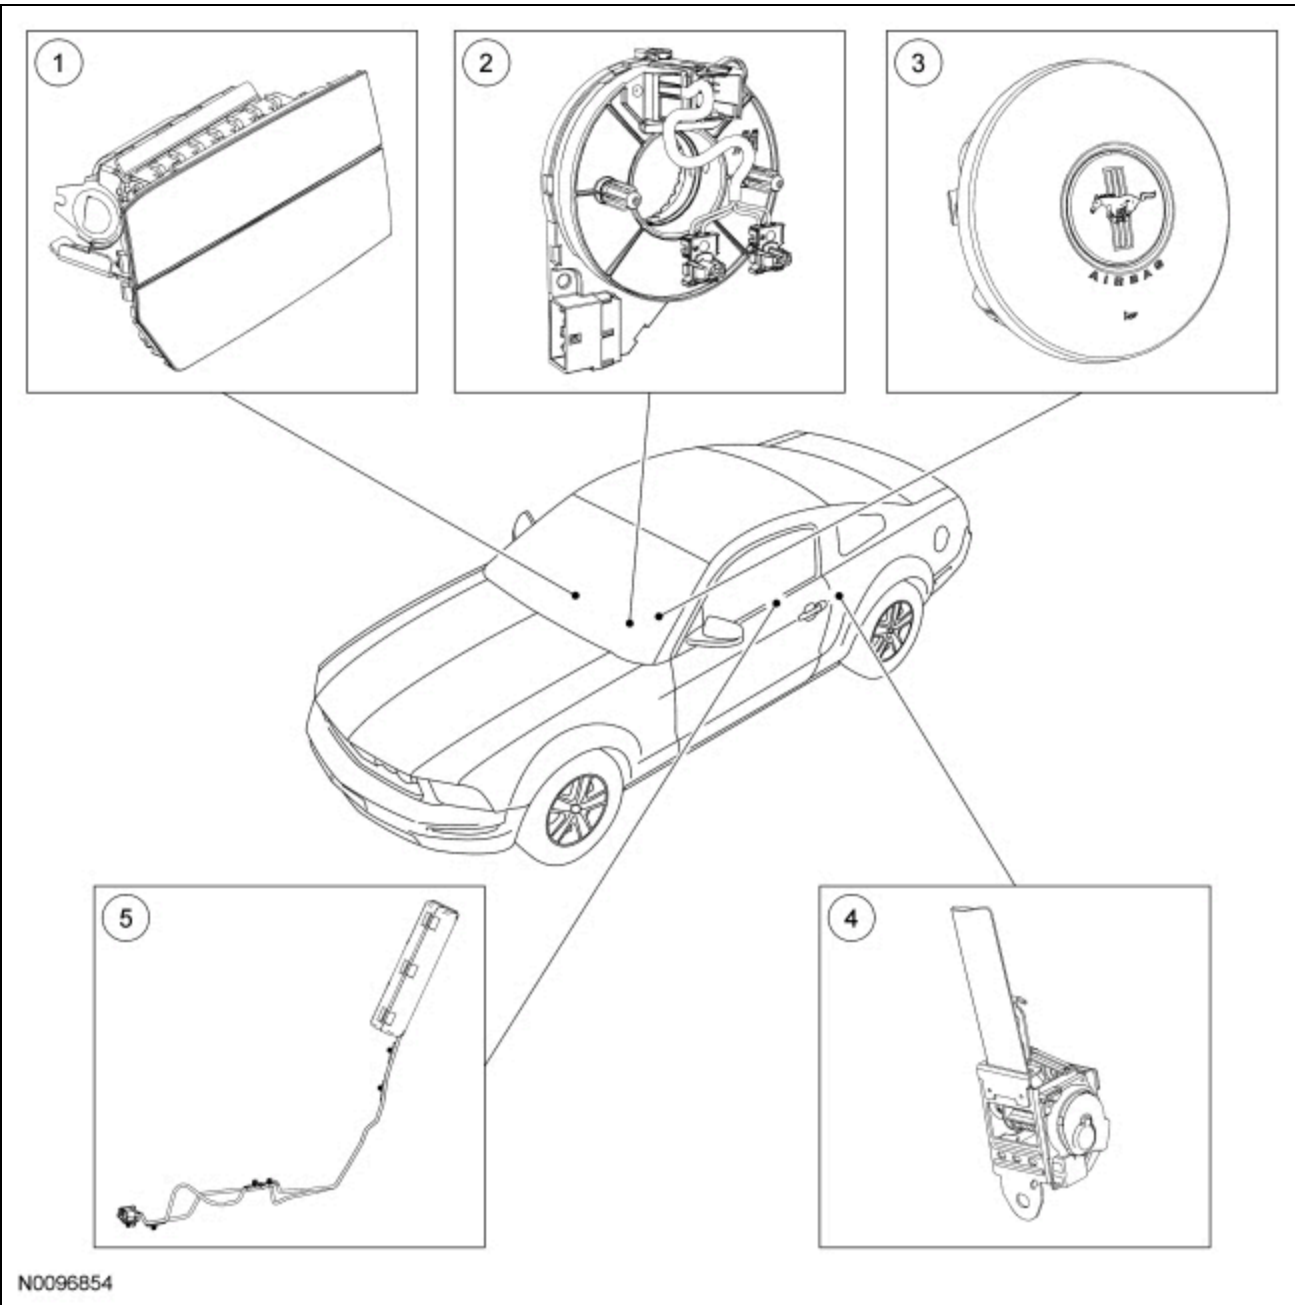


N0096854

Item	Part Number	Description
1	044A74	Passenger air bag module assembly (includes air bag trim cover [04338])
2	14A664	Clockspring
3	043B13	Driver air bag module

4	611B09 LH/ 611B08 RH	Safety belt retractor and pretensioner (includes Belt Tension Sensor (BTS) [part of 611B08])
5	611D11 LH/ 611D10 RH	Seat side air bag module

**Air Bag and Safety Belt Pretensioner Supplemental Restraint System (SRS) Components (Illustration 2 of 2)**

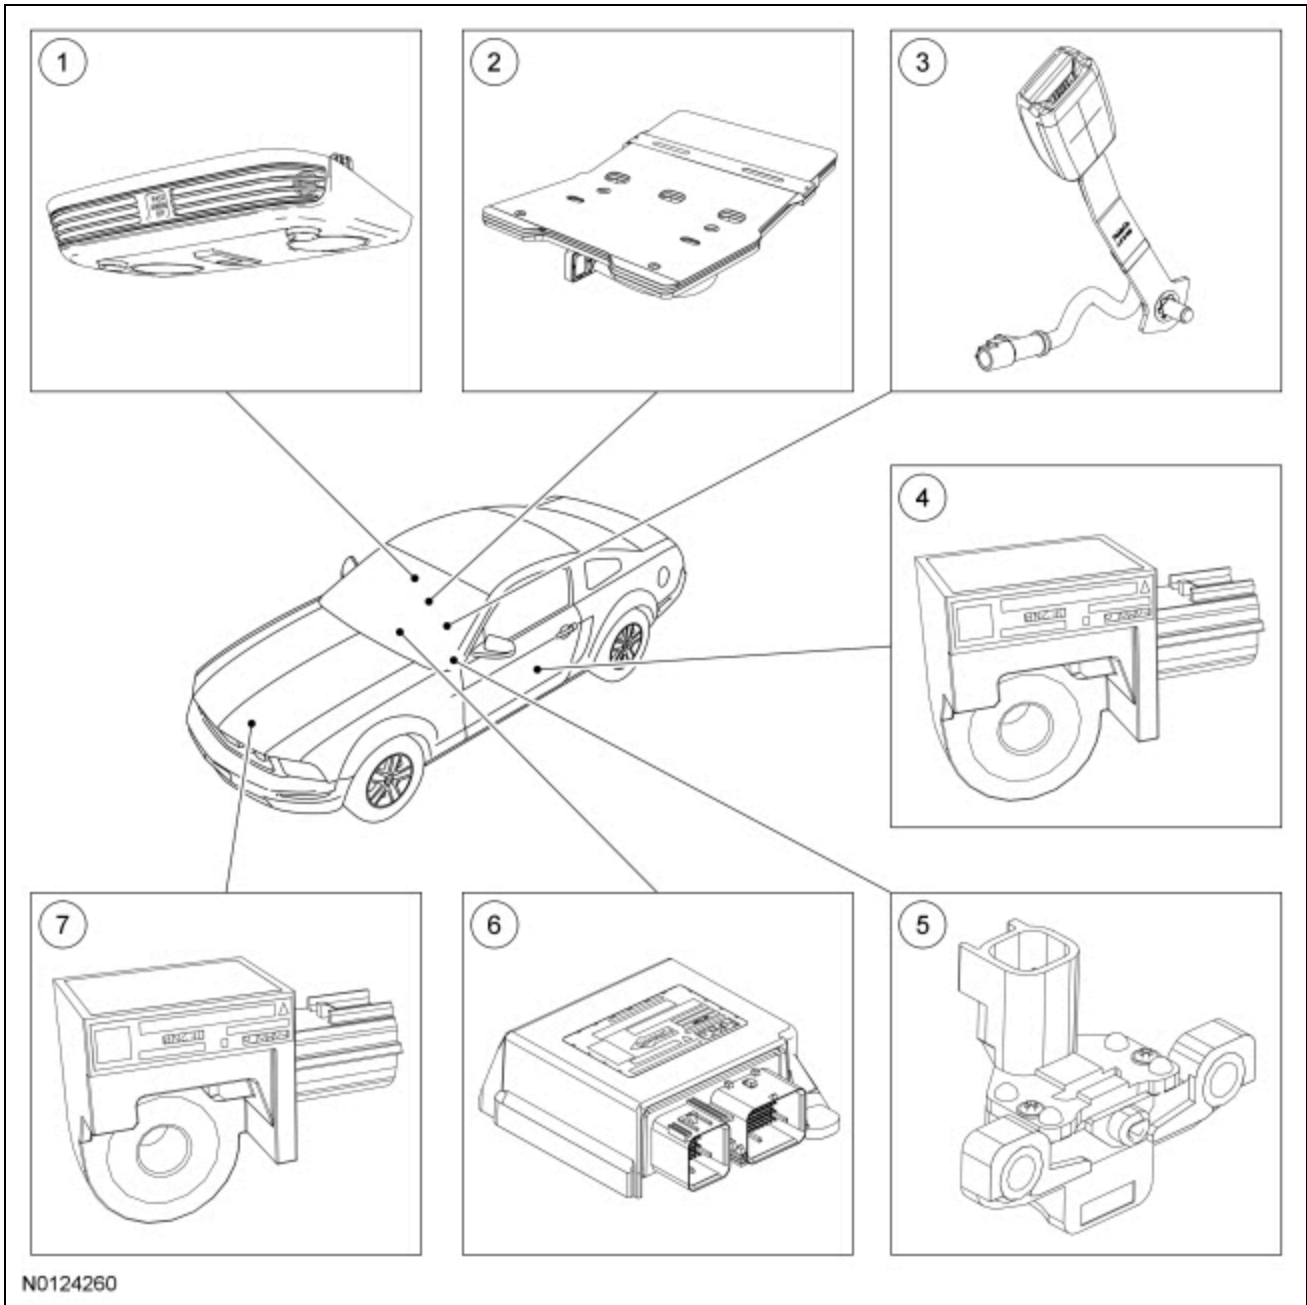

N0124260

Item	Part Number	Description
1	—	Passenger Air Bag Deactivation (PAD) indicator (part of 519A70)
2	—	Occupant Classification System (OCS) system (bladder and hose with pressure sensor and integrated Occupant Classification System Module (OCSM) ) (part of 632A22)
3	61203	Safety belt buckle (includes safety belt buckle switch)
4	14B345	Driver side impact sensor

5	14B416	Seat track position sensor
6	14B321	Restraints Control Module (RCM)
7	14B345	Front impact severity sensor