


| Connector: | Description | Color | Harness | Base Part # | Service Pigtail |
|------------|----------------------------|-------|---------|-------------|-----------------|
| C290D | AUDIO CONTROL MODULE (ACM) | TN | 14401 | 18806 | Not Available |

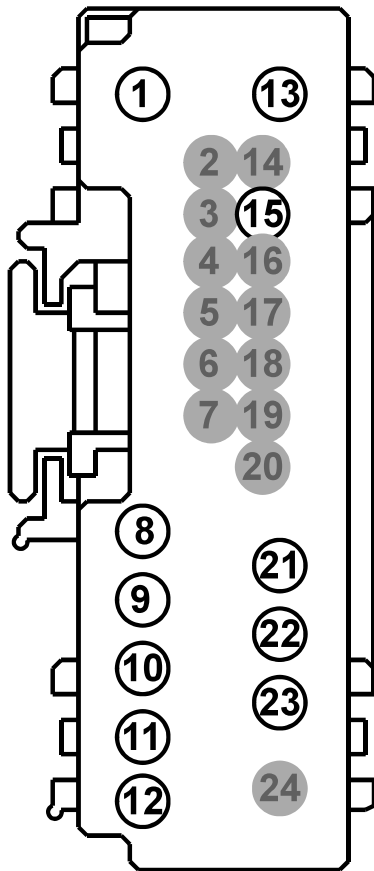

| Pin | Circuit | Gauge | Circuit Function | Qualifier |
|-----|--------------|-------|--|-----------|
| 1 | 729 (RD-WH) | 18 | Voltage supplied at all times (overload protected) | |
| 2 | * | * | Not Used | |
| 3 | * | * | Not Used | |
| 4 | * | * | Not Used | |
| 5 | * | * | Not Used | |
| 6 | * | * | Not Used | |
| 7 | * | * | Not Used | |
| 8 | 1723 (OG-LG) | 18 | Speaker, left front + | |
| 9 | 1726 (GY-LB) | 18 | Speaker, left rear + | |
| 10 | 1781 (OG-RD) | 18 | Speaker, right rear + | |
| 11 | 1778 (WH-LG) | 18 | Speaker, right front, + | |
| 12 | 1777 (DG-OG) | 18 | Speaker, right front - | |
| 13 | 1204 (BK-OG) | 14 | Ground | |
| 14 | * | * | Not Used | |
| 15 | 1000 (RD-BK) | 22 | Voltage supplied in Start (overload protected) | |
| 16 | * | * | Not Used | |
| 17 | * | * | Not Used | |
| 18 | * | * | Not Used | |
| 19 | * | * | Not Used | |
| 20 | * | * | Not Used | |
| 21 | 1722 (LB-WH) | 18 | Speaker, left front - | |
| 22 | 1725 (TN-YE) | 18 | Speaker, left rear - | |
| 23 | 1780 (BN-PK) | 18 | Speaker, right rear - | |
| 24 | * | * | Not Used | |