


| Connector: | Description                    | Color | Harness | Base Part # | Service Pigtail |
|------------|--------------------------------|-------|---------|-------------|-----------------|
| C1035B     | BUSSED ELECTRICAL CENTER (BEC) | NA    | 12B637  | 14K001      | Not Available   |

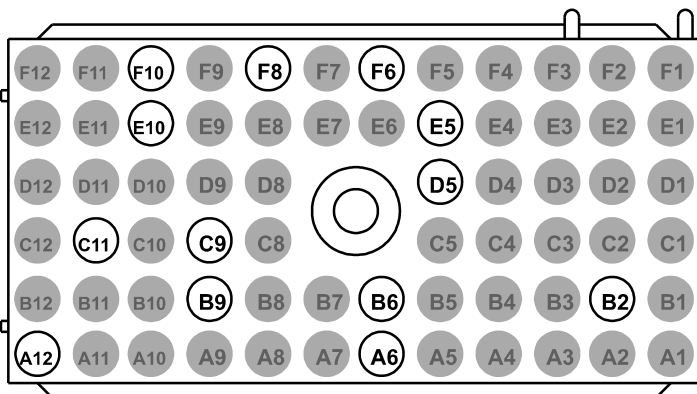

| Pin | Circuit     | Gauge | Circuit Function                                       | Qualifier |
|-----|-------------|-------|--|-----------|
| A1  | *           | *     | Not Used   |           |
| A2  | *           | *     | Not Used   |           |
| A3  | *           | *     | Not Used   |           |
| A4  | *           | *     | Not Used   |           |
| A5  | *           | *     | Not Used   |           |
| A6  | 391 (RD-YE) | 18    | Voltage supplied in Start and Run (overload protected) |           |
| A7  | *           | *     | Not Used   |           |
| A8  | *           | *     | Not Used   |           |
| A9  | *           | *     | Not Used   |           |
| A10 | *           | *     | Not Used   |           |
| A11 | *           | *     | Not Used   |           |
| A12 | 639 (LG-VT) | 20    | High speed engine cooling fan relay, control           |           |
| B1  | *           | *     | Not Used   |           |
| B2  | 294 (WH-LB) | 20    | Voltage supplied at all times (overload protected)     |           |
| B3  | *           | *     | Not Used   |           |
| B4  | *           | *     | Not Used   |           |
| B5  | *           | *     | Not Used   |           |
| B6  | 883 (PK-LB) | 14    | A/C clutch relay output                                |           |
| B7  | *           | *     | Not Used   |           |
| B8  | *           | *     | Not Used   |           |
| B9  | 33 (WH-PK)  | 20    | Switched power to starter relay                        |           |
| B10 | *           | *     | Not Used   |           |
| B11 | *           | *     | Not Used   |           |
| B12 | *           | *     | Not Used   |           |
| C1  | *           | *     | Not Used   |           |
| C2  | *           | *     | Not Used   |           |
| C3  | *           | *     | Not Used   |           |
| C4  | *           | *     | Not Used   |           |
| C5  | *           | *     | Not Used   |           |
| C8  | *           | *     | Not Used   |           |
| C9  | 35 (OG-LB)  | 20    | Voltage supplied at all times (overload protected)     |           |
| C10 | *           | *     | Not Used   |           |
| C11 | 228 (DB)    | 20    | Low speed engine cooling fan relay, control            |           |
| C12 | *           | *     | Not Used   |           |
| D1  | *           | *     | Not Used   |           |
| D2  | *           | *     | Not Used   |           |
| D3  | *           | *     | Not Used   |           |
| D4  | *           | *     | Not Used   |           |
| D5  | 1118 (RD)   | 18    | Voltage supplied in Start and Run (overload protected) |           |
| D8  | *           | *     | Not Used   |           |
| D9  | *           | *     | Not Used   |           |
| D10 | *           | *     | Not Used   |           |
| D11 | *           | *     | Not Used   |           |
| D12 | *           | *     | Not Used   |           |
| E1  | *           | *     | Not Used   |           |
| E2  | *           | *     | Not Used   |           |
| E3  | *           | *     | Not Used   |           |
| E4  | *           | *     | Not Used   |           |
| E5  | 224 (TN-WH) | 20    | Transmission overdrive cancel switch signal            |           |
| E6  | *           | *     | Not Used   |           |
| E7  | *           | *     | Not Used   |           |
| E8  | *           | *     | Not Used   |           |
| E9  | *           | *     | Not Used   |           |
| E10 | 33 (WH-PK)  | 20    | Switched power to starter relay                        |           |

| Pin | Circuit         | Gauge | Circuit Function  | Qualifier |
|-----|-----------------|-------|---|-----------|
| E11 | *               | *     | Not Used  |           |
| E12 | *               | *     | Not Used  |           |
| F1  | *               | *     | Not Used  |           |
| F2  | *               | *     | Not Used  |           |
| F3  | *               | *     | Not Used  |           |
| F4  | *               | *     | Not Used  |           |
| F5  | *               | *     | Not Used  |           |
| F6  | 361 (RD)        | 20    | Voltage supplied in Start and Run<br>(overload protected) |           |
| F7  | *               | *     | Not Used  |           |
| F8  | 1205 (BK)       | 14    | Ground  |           |
| F9  | *               | *     | Not Used  |           |
| F10 | 113 (YE-<br>LB) | 12    | Starter relay, output                                     |           |
| F11 | *               | *     | Not Used  |           |
| F12 | *               | *     | Not Used  |           |