



Controls current flow to starter motor during engine start up.

See page 20-1