


Steering Column Shroud

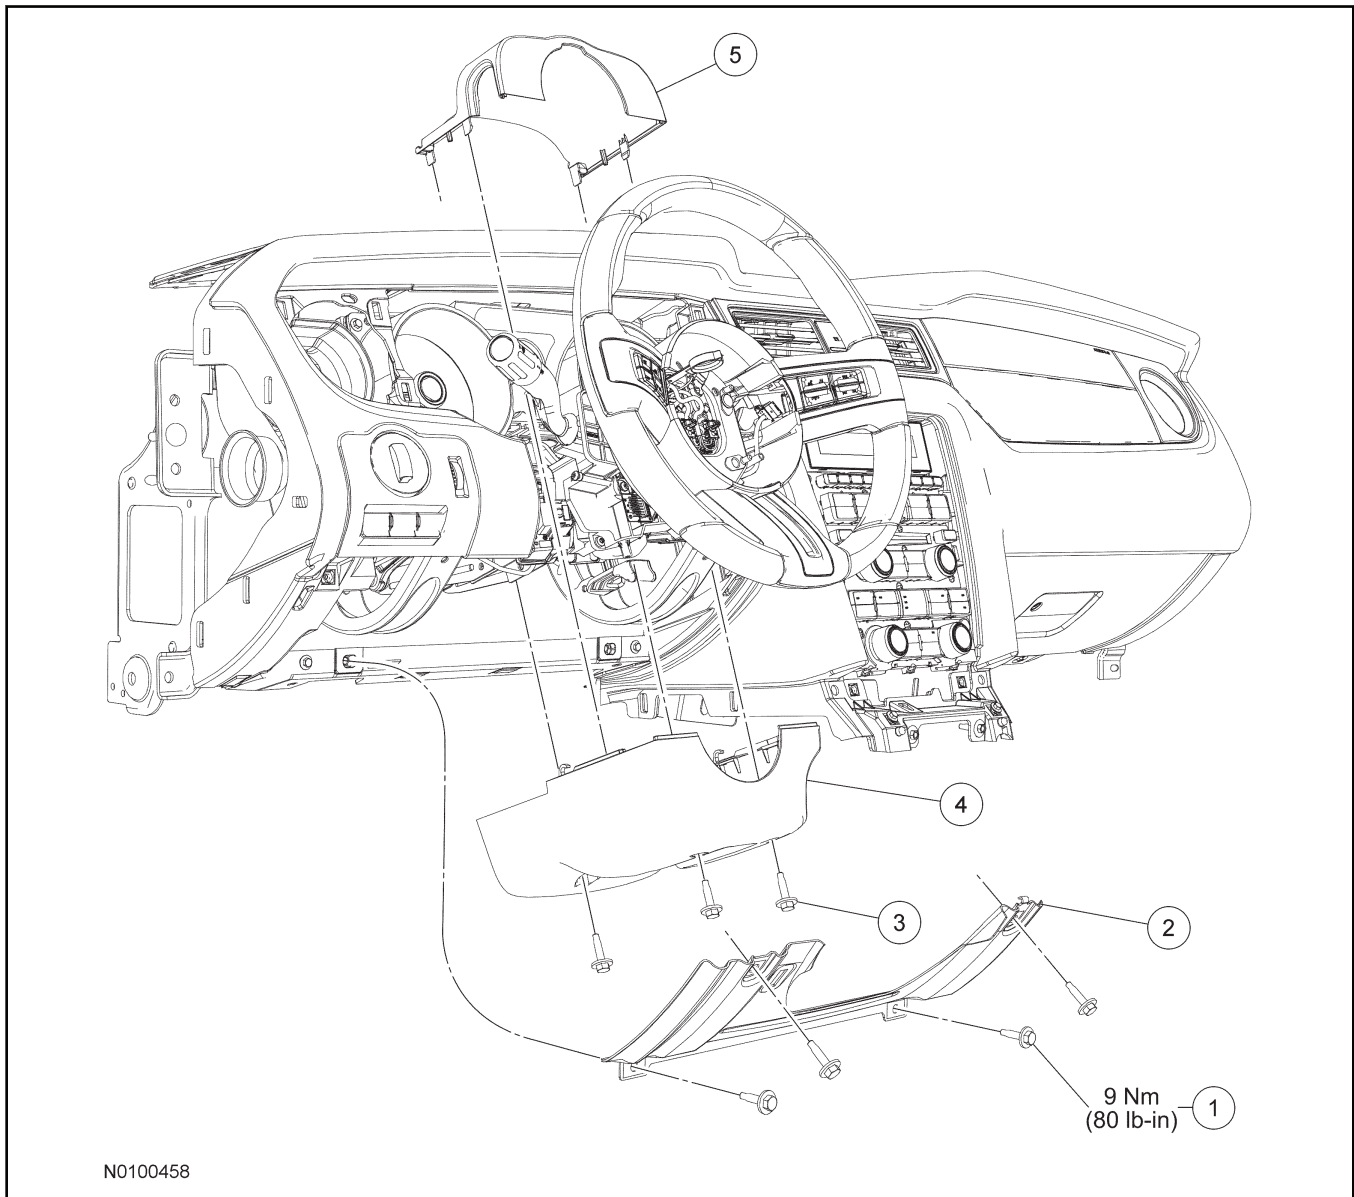

Item	Part Number	Description
1	W505424	Steering column opening trim panel reinforcement bolt (4 required)
2	04502	Steering column opening trim panel reinforcement
3	W707281	Lower steering column shroud screw (3 required)
4	3530B	Lower steering column shroud
5	3530A	Upper steering column shroud

Removal and Installation

- Remove the LH scuff plate trim panel and the LH A-pillar lower trim panel. For additional information, refer to Section 501-05.
- Remove the steering column opening trim panel. For additional information, refer to the exploded view in Section 501-12.
- Remove the 4 bolts and the steering column opening trim panel reinforcement.
 - To install, tighten to 9 Nm (80 lb-in).
- NOTE:**
Release the upper steering column shroud by carefully pressing the sides inward.