
Transmission Draining and Filling


Material

Item	Specification
Motorcraft® Dual Clutch Transmission Fluid XT-11-QDC	WSS-M2C200-D2

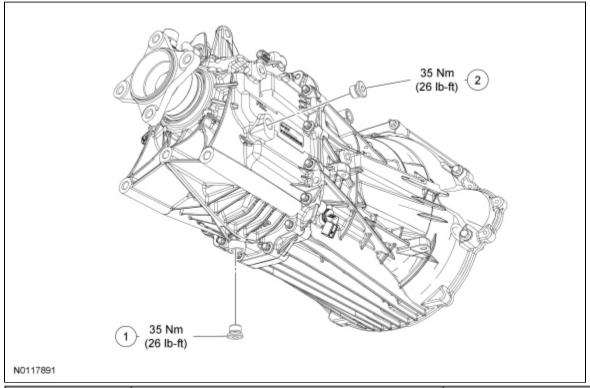


Item	Part Number	Description	
1	W701065	Drain plug	
2	W701065	Fill plug	

- 1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to <u>Section 100-02</u>.
- 2. Remove the drain plug and drain the fluid.

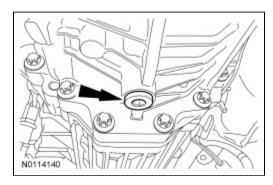

- 3. Install the drain plug.
 - Tighten to 35 Nm (26 lb-ft).
- 4. NOTE: Prior to removal, clean the area around the fill plug.

Remove the fill plug.

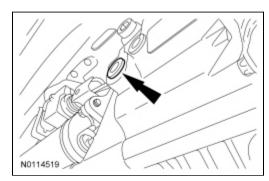

5. NOTICE: The use of any other transmission fluid than specified can result in the transmission failing to operate in a normal manner or transmission failure.

NOTE: Do not overfill the transmission. This will cause transmission fluid to be forced out of the case.

Using a suitable oil suction gun, fill the transmission with the recommended fluid.

- Transmission capacity is 2.6L (2.7 qt).
- 6. Install the fill plug.
 - Tighten to 35 Nm (26 lb-ft).

© Copyright 2023, Ford Motor Company.