


Airbag and Safety Belt Pretensioner Supplemental Restraint System (SRS)

The air bag SRS is designed to provide increased collision protection for front seat occupants, in addition to the 3-point safety belt system. Safety belt use is necessary to obtain the best occupant protection and to receive the full advantage of the SRS .

The serviceable air bag and safety belt pretensioner SRS components are shown in the following illustrations.

Air Bag and Safety Belt Pretensioner SRS Components (Illustration 1 of 2)

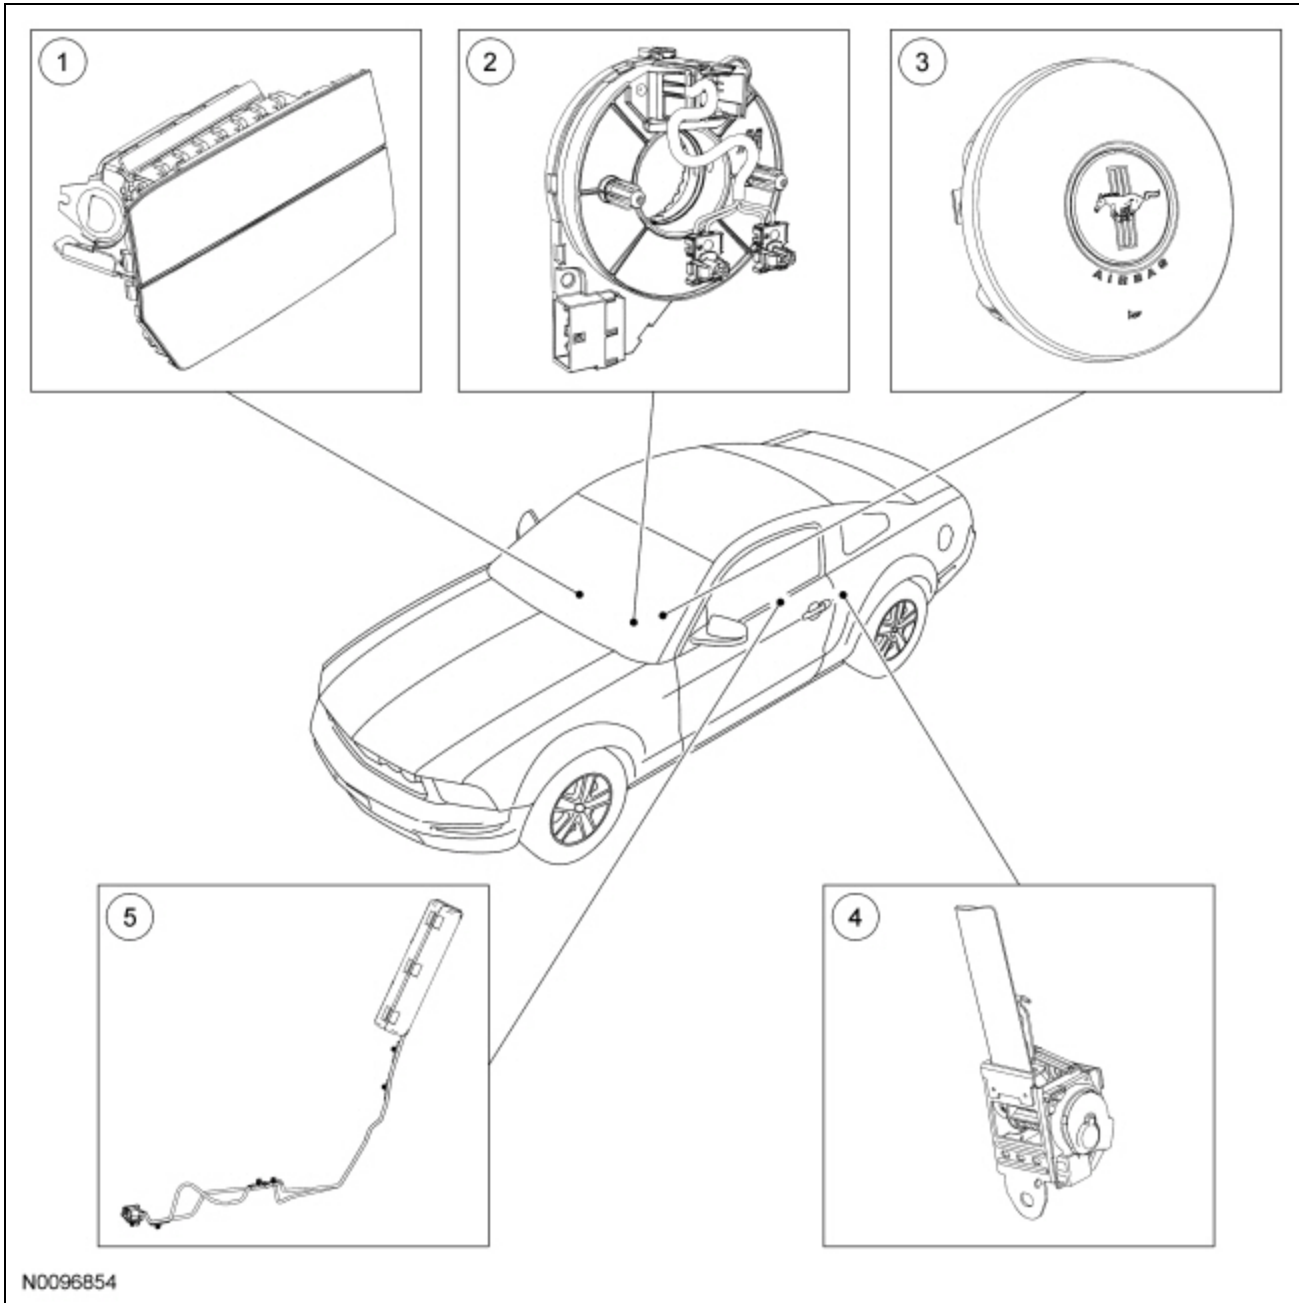


N0096854

Item	Part Number	Description
1	044A74	Passenger air bag module assembly (includes air bag trim cover [04338])
2	14A664	Clockspring
3	043B13	Driver air bag module
4	611B09	Safety belt retractor and pretensioner (includes <u>BTS</u> [part of 611B08])

	LH/ 611B08 RH	
5	611D11 LH/ 611D10 RH	Seat side air bag module

Air Bag and Safety Belt Pretensioner SRS Components (Illustration 2 of 2)

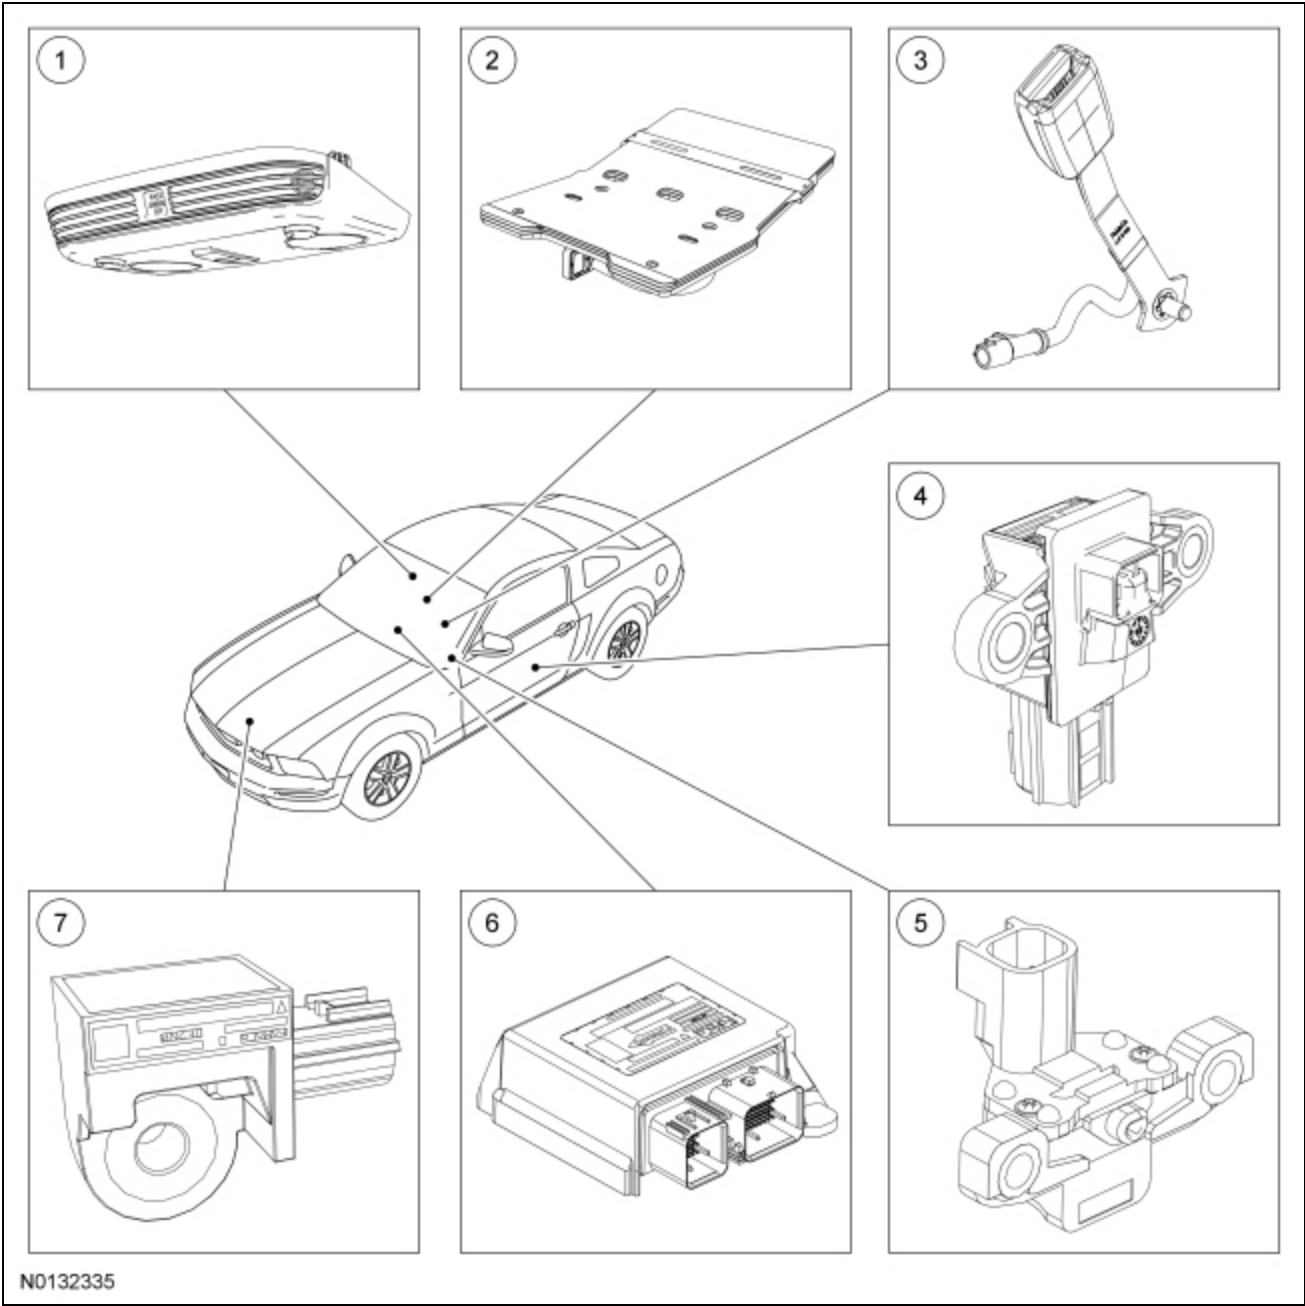

N0132335

Item	Part Number	Description
1	—	PAD indicator (part of 519A70)
2	—	OCS (bladder and hose with pressure sensor and integrated OCSM) (part of 632A22)
3	61203	Safety belt buckle (includes safety belt buckle switch)
4	14B345	Driver/passenger front door side impact sensor (pressure sensor)
5	14B416	Seat track position sensor

6	14B321	<u>RCM</u>
7	14B345	Front impact severity sensor