

2024 FORD **MUSTANG** Owner's manual



┌

└

|


The information contained in this publication was correct at the time of release. In the interest of continuous development, we reserve the right to change specifications, design or equipment at any time without notice or obligation. No part of this publication may be reproduced, transmitted, stored in a retrieval system or translated into any language in any form by any means without our written permission. Errors and omissions excepted.

© Ford Motor Company 2023

All rights reserved.

Part Number: -202212-20230418145831

California Proposition 65

 **WARNING:** Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

 **WARNING:** Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.
Wash your hands after handling.

┌

└

|

Table of Contents

Contacting Us

Contacting Us15

Introduction

About This Publication17

Using This Publication18

Symbols Glossary

Symbols Used on Your Vehicle19

Data Privacy

Data Privacy22

Service Data23

Event Data23

Settings Data24

Connected Vehicle Data24

Mobile Device Data25

Emergency Call System Data - Vehicles
With: Emergency Assistance25

Environment

Protecting the Environment26

Visual Search

Steering Wheel27

Instrument Panel28

Vehicle Interior29

Front Exterior - Base, Convertible30

Front Exterior - Base, Coupe31

Front Exterior - Dark Horse32

Front Exterior - GT, Convertible33

Front Exterior - GT, Coupe34

Rear Exterior - Base, Convertible35

Rear Exterior - Base, Coupe36

Rear Exterior - Dark Horse37

Rear Exterior - GT, Convertible38

Rear Exterior - GT, Coupe39

Child Safety

Child Safety Precautions40

Child Restraint Anchor Points41

Child Restraints42

Installing Child Restraints43

Booster Seats48

Seatbelts

Seatbelt Precautions51

Fastening and Unfastening the Seatbelts
.....52

Sensitive Locking Mode53

Automatic Locking Mode54

Adjusting the Seatbelts During
Pregnancy55

Seatbelt Reminder55

Checking the Seatbelts57

Seatbelt Extensions57

Personal Safety System™

What Is the Personal Safety System
.....59

How Does the Personal Safety System
Work59

Personal Safety System Components
.....59

Airbags

How Do the Front Airbags Work60

How Do the Side Airbags Work60

How Do the Knee Airbags Work61

How Does the Safety Canopy™ Work -
Coupe62

Airbag Precautions63

Properly Adjusting the Driver and Front
Passenger Seats63

Children and Airbags64

Front Passenger Sensing System64

Crash Sensors and Airbag Indicator67

Disposing of Airbags68

Table of Contents

911 Assist

What Is 911 Assist	69
How Does 911 Assist Work	69
Emergency Call Requirements	69
Emergency Call Limitations	70

Keys and Remote Controls

Remote Control Limitations	71
Using the Remote Control	71
Removing the Key Blade	72
Sounding the Panic Alarm	72
Locating Your Vehicle	72
Changing the Remote Control Battery	72
Replacing a Lost Key or Remote Control	74
Programming the Remote Control	74
Keys and Remote Controls Audible Warnings	75
Remote Rev	76
Keys and Remote Controls – Troubleshooting	77

Doors and Locks

Operating the Doors From Outside Your Vehicle	78
Operating the Doors From Inside Your Vehicle	78
Autounlock	79
Autolock	79
Mislock	79
Doors and Locks Audible Warnings	79
Doors and Locks – Troubleshooting	80

Keyless Entry

Keyless Entry Limitations	82
Using Keyless Entry	82

Easy Entry and Exit

How Does Easy Entry and Exit Work	84
Switching Easy Entry and Exit On and Off	84

Security

Passive Anti-Theft System	85
Anti-Theft Alarm System	85
Anti-Theft Alarm System Settings	86
Security – Troubleshooting	87

Steering Wheel

Using the Controls on the Steering Wheel	89
Adjusting the Steering Wheel	89
Horn	90
Switching the Heated Steering Wheel On and Off	90

Wipers and Washers

Wipers	91
Autowipers	91
Checking the Wiper Blades	92
Replacing the Front Wiper Blades	92
Washers	93
Wipers and Washers – Troubleshooting	94

Exterior Lighting

Exterior Lighting Control	95
Headlamps	95
Headlamps – Troubleshooting	96
Autolamps	96
Exterior Lamps	97
Automatic High Beam Control	98
Automatic High Beam Control – Troubleshooting	100

Table of Contents

Interior Lighting

Switching All of the Interior Lamps On and Off	101
Switching the Front Interior Lamps On and Off	101
Interior Lamp Function	101
Adjusting the Instrument Panel Lighting Brightness	101
Ambient Lighting	101
Interior Lighting – Troubleshooting	102

Windows

Opening and Closing the Windows - Convertible	103
Opening and Closing the Windows - Coupe	104
Global Opening	104
Window Bounce-Back	105

Interior Mirror

Interior Mirror Precautions	106
Auto-Dimming Interior Mirror	106

Exterior Mirrors

Adjusting the Exterior Mirrors	107
Folding the Exterior Mirrors	107
Auto-Dimming Exterior Mirror	107

Instrument Cluster

Instrument Cluster Overview	108
Tachometer	108
Speedometer	108
Fuel Gauge	109
Engine Coolant Temperature Gauge	109
What Are the Instrument Cluster Warning Lamps	109
Instrument Cluster Warning Lamps	109
What Are the Instrument Cluster Indicators	111
Instrument Cluster Indicators	111

Instrument Cluster Display

Using the Instrument Cluster Display Controls	114
Customizing the Instrument Cluster Display	114

Personalized Settings

Changing the Language	115
Changing the Measurement Unit	115
Changing the Temperature Unit	115
Changing the Tire Pressure Unit	115

Trip Computer

Accessing the Trip Computer	116
Resetting the Trip Computer	116
Configuring the Trip Computer	116

Remote Start

What Is Remote Start	117
Remote Start Precautions	117
Remote Start Limitations	117
Enabling Remote Start	117
Remotely Starting and Stopping the Vehicle	117
Extending the Remote Start Duration	118
Remote Start Settings	118

Climate Control - Vehicles With: Dual Automatic Temperature Control (DATC)

Identifying the Climate Control Unit	119
Switching Climate Control On and Off	119
Switching Recirculated Air On and Off	119
Switching Air Conditioning On and Off	119
Switching Defrost On and Off	119

Table of Contents

Switching Maximum Defrost On and Off	119
Switching Maximum Cooling On and Off	120
Switching the Heated Rear Window On and Off	120
Setting the Blower Motor Speed	120
Switching the Heated Mirrors On and Off	120
Setting the Temperature	120
Directing the Flow of Air	121
Auto Mode	121
Climate Control Hints	122

Climate Control - Vehicles With: Electronic Automatic Temperature Control (EATC)

Identifying the Climate Control Unit	124
Switching Climate Control On and Off	124
Switching Recirculated Air On and Off	124
Switching Air Conditioning On and Off	124
Switching Defrost On and Off	124
Switching Maximum Defrost On and Off	124
Switching Maximum Cooling On and Off	125
Switching the Heated Rear Window On and Off	125
Setting the Blower Motor Speed	125
Switching the Heated Mirrors On and Off	125
Setting the Temperature	125
Directing the Flow of Air	125
Auto Mode	126
Climate Control Hints	126

Interior Air Quality

What Is the Cabin Air Filter	128
------------------------------------	-----

Locating the Cabin Air Filter	128
Replacing the Cabin Air Filter	128

Front Seats

Front Seat Precautions	129
Sitting in the Correct Position	129
Manual Seats	130
Power Seats	132
Heated Seats	135
Ventilated Seats	135

Rear Seats - Coupe

Manual Seats	137
--------------------	-----

Rear Occupant Alert System

What is the Rear Occupant Alert System	138
How Does the Rear Occupant Alert System Work	138
Rear Occupant Alert System Precautions	138
Rear Occupant Alert System Limitations	138
Rear Occupant Alert System Settings	138
Rear Occupant Alert System Indicators	139
Rear Occupant Alert System Audible Warnings	139

Memory Function

How Does the Memory Function Work	140
Memory Function Precautions	140
Locating the Memory Function Buttons	140
Saving a Preset Position	140
Recalling a Preset Position	140

Garage Door Opener

Garage Door Opener Introduction	142
---------------------------------------	-----

Table of Contents

Garage Door Opener Precautions and Frequencies	142	Accessing the Passive Key Backup Position	158
Programming the Garage Door Opener	143	Starting and Stopping the Engine – Troubleshooting	159
Garage Door Opener Additional Assistance	145		
USB Ports		Auto-Start-Stop	
Locating the USB Ports	146	What Is Auto-Start-Stop	161
Playing Media Using the USB Port	146	Auto-Start-Stop Precautions - Manual Transmission	161
Charging a Device	146	Auto-Start-Stop Precautions - Automatic Transmission	161
Power Outlet		Switching Auto-Start-Stop On and Off	161
What Is the Power Outlet	148	Stopping the Engine - Manual Transmission	161
Power Outlet Precautions	148	Stopping the Engine - Automatic Transmission	162
Locating the Power Outlets	148	Restarting the Engine - Manual Transmission	162
Wireless Accessory Charger		Restarting the Engine - Automatic Transmission	163
What Is the Wireless Accessory Charger	149	Auto-Start-Stop Indicators	163
Wireless Accessory Charger Precautions	149	Auto-Start-Stop – Troubleshooting	163
Locating the Wireless Accessory Charger	149		
Charging a Wireless Device	149	Fuel and Refueling	
Storage		Fuel and Refueling Precautions	166
Cup Holders	151	Fuel Quality	166
Glove Compartment	151	Locating the Fuel Filler Funnel	167
Center Console	151	Running Out of Fuel	167
Glasses Holder	152	Refueling	169
Starting and Stopping the Engine		Fuel Tank Capacity	170
Starting and Stopping the Engine – Precautions	153	Fuel and Refueling – Troubleshooting	170
Push Button Ignition Switch	153	Catalytic Converter	
Starting the Engine	154	What Is the Catalytic Converter	172
Engine Block Heater	155	Catalytic Converter Precautions	172
Stopping the Engine	156	Catalytic Converter – Troubleshooting	172
Automatic Engine Stop	158		

Table of Contents

Manual Transmission

Manual Transmission Precautions	173
Shifting Into Reverse	173
Checking the Manual Transmission Fluid Level	173
Checking the Clutch Fluid Level	174
Manual Transmission Fluid Capacity and Specification	174
Clutch Fluid Capacity and Specification	174

Automatic Transmission

Automatic Transmission Precautions	175
Automatic Transmission Positions	175
Shifting Your Vehicle Into Gear - Vehicles Without: Paddle Shifters	176
Shifting Your Vehicle Into Gear - Vehicles With: Paddle Shifters	176
Automatic Transmission Position Indicators - Vehicles Without: Paddle Shifters	176
Automatic Transmission Position Indicators - Vehicles With: Paddle Shifters	177
Automatic Transmission Audible Warnings	177
Manually Shifting Gears	177
Brake Shift Interlock	178

Rear Axle

Limited Slip Differential	180
---------------------------------	-----

Brakes

Brake Precautions	181
Anti-Lock Braking System	181
Brake Over Accelerator	181
Locating the Brake Fluid Reservoir	182
Checking the Brake Fluid	182
Brake Fluid Specification	182
Brakes – Troubleshooting	183

Electric Parking Brake

What Is the Electric Parking Brake	185
Applying the Electric Parking Brake - Manual Transmission, Vehicles Without: EcoBoost™ Performance Package/GT Performance Package	185
Applying the Electric Parking Brake - Manual Transmission, Vehicles With: EcoBoost™ Performance Package/GT Performance Package	185
Applying the Electric Parking Brake - Automatic Transmission, Vehicles Without: EcoBoost™ Performance Package/GT Performance Package	186
Applying the Electric Parking Brake - Automatic Transmission, Vehicles With: EcoBoost™ Performance Package/GT Performance Package	186
Applying the Electric Parking Brake in an Emergency - Vehicles Without: EcoBoost™ Performance Package/GT Performance Package	187
Applying the Electric Parking Brake in an Emergency - Vehicles With: EcoBoost™ Performance Package/GT Performance Package	187
Manually Releasing the Electric Parking Brake - Vehicles Without: EcoBoost™ Performance Package/GT Performance Package	187
Manually Releasing the Electric Parking Brake - Vehicles With: EcoBoost™ Performance Package/GT Performance Package	188
Automatically Releasing the Electric Parking Brake	188
Electric Parking Brake Audible Warning	188
Releasing the Electric Parking Brake if the Vehicle Battery Has Run Out of Charge	188
Electric Parking Brake – Troubleshooting	188

Table of Contents

Cross Traffic Braking

What Is Cross Traffic Braking	191
How Does Cross Traffic Braking Work	191
Cross Traffic Braking Precautions	191
Switching Cross Traffic Braking On and Off	192
Overriding Cross Traffic Braking	192
Cross Traffic Braking Indicators	192
Cross Traffic Braking – Troubleshooting	192

Hill Start Assist

What Is Hill Start Assist	194
How Does Hill Start Assist Work	194
Hill Start Assist Precautions	194
Switching Hill Start Assist On and Off - Manual Transmission	194
Switching Hill Start Assist On and Off - Automatic Transmission	194
Hill Start Assist – Troubleshooting	194

Auto Hold

How Does Auto Hold Work	195
Switching Auto Hold On and Off	195
Using Auto Hold	195
Auto Hold Indicators	195

Traction Control

What Is Traction Control	197
How Does Traction Control Work	197
Switching Traction Control On and Off	197
Traction Control Indicator	197
Traction Control – Troubleshooting	197

Stability Control

How Does Stability Control Work	198
Switching Stability Control On and Off	199
Stability Control Indicator	199

Stability Control – Troubleshooting	199
---	-----

Steering

Electric Power Steering	200
Steering – Troubleshooting	200

Parking Aids

Parking Aid Precautions	202
Switching Parking Aid On and Off	202
Rear Parking Aid	203
Parking Aid Indicators	204
Parking Aids – Troubleshooting	204

Rear View Camera

What Is the Rear View Camera	205
Rear View Camera Precautions	205
Locating the Rear View Camera	205
Rear View Camera Guide Lines	205
Rear View Camera Settings	206

Cruise Control

What Is Cruise Control	208
Switching Cruise Control On and Off	208
Setting the Cruise Control Speed	208
Canceling the Set Speed	209
Resuming the Set Speed	209
Cruise Control Indicators	209

Adaptive Cruise Control

How Does Adaptive Cruise Control Work - Manual Transmission	210
How Does Adaptive Cruise Control With Stop and Go Work - Automatic Transmission	210
Adaptive Cruise Control Precautions	210
Adaptive Cruise Control Limitations	211
Switching Adaptive Cruise Control On and Off - Manual Transmission	212

Table of Contents

Switching Adaptive Cruise Control On and Off - Automatic Transmission	213
Adaptive Cruise Control Automatic Cancellation	213
Setting the Adaptive Cruise Control Speed - Manual Transmission	213
Setting the Adaptive Cruise Control Speed - Automatic Transmission	214
Setting the Adaptive Cruise Control Gap	215
Canceling the Set Speed	216
Resuming the Set Speed - Manual Transmission	216
Resuming the Set Speed - Automatic Transmission	216
Overriding the Set Speed	217
Adaptive Cruise Control Indicators	218
Switching From Adaptive Cruise Control to Cruise Control	218
Lane Centering	218
Predictive Speed Assist	221
Predictive Speed Assist – Troubleshooting	223
Adaptive Cruise Control – Troubleshooting	223

Drive Mode Control

What Is Drive Mode Control	226
How Does Drive Mode Control Work	226
Selecting a Drive Mode	226
Drive Modes	227

Intelligent Speed Limiter

What Is the Intelligent Speed Limiter	229
How Does the Intelligent Speed Limiter Work	229
Intelligent Speed Limiter Precautions	229
Switching the Intelligent Speed Limiter On and Off	229

Setting the Speed Limit	229
Changing the Set Speed Limit	229
Adjusting the Speed Limit Tolerance	230
Canceling the Set Speed Limit	230
Resuming the Set Speed Limit	230
Intentionally Exceeding the Set Speed Limit	230
Intelligent Speed Limiter Indicators	230
Intelligent Speed Limiter Audible Warnings	230
Switching From Intelligent Speed Limiter to Speed Limiter	230
Intelligent Speed Limiter – Troubleshooting	231

Lane Keeping System

What Is the Lane Keeping System	232
How Does the Lane Keeping System Work	232
Lane Keeping System Precautions	232
Lane Keeping System Limitations	232
Switching the Lane Keeping System On and Off	233
Switching the Lane Keeping System Mode	233
Lane Keeping System Settings	233
Alert Mode	233
Aid Mode	234
Alert and Aid Mode	234
Lane Keeping System Indicators	235
Blind Spot Assist	235
Lane Keeping System – Troubleshooting	237

Blind Spot Information System

What Is Blind Spot Information System	239
How Does Blind Spot Information System Work	239

Table of Contents

Blind Spot Information System Precautions	239	Pre-Collision Assist Precautions	249
Blind Spot Information System Limitations	239	Pre-Collision Assist Limitations	250
Blind Spot Information System Requirements	239	Switching Pre-Collision Assist On and Off	251
Switching Blind Spot Information System On and Off	239	Locating the Pre-Collision Assist Sensors	251
Locating the Blind Spot Information System Sensors	240	Distance Indication	252
Blind Spot Information System Indicators	240	Distance Alert	253
Blind Spot Information System – Troubleshooting	241	Automatic Emergency Braking	253
		Evasive Steering Assist	254
		Pre-Collision Assist – Troubleshooting	255
Exit Warning		Speed Sign Recognition	
What is Exit Warning	242	What Is Speed Sign Recognition	257
How Does Exit Warning Work	242	How Does Speed Sign Recognition Work	257
Exit Warning Precautions	242	Speed Sign Recognition Precautions	257
Exit Warning Limitations	242	Speed Sign Recognition Limitations	257
Exit Warning Indicators	243	Speed Sign Recognition Indicators	258
Switching Exit Warning On and Off	244	Setting the Speed Sign Recognition Speed Warning	258
Locating the Exit Warning Sensors	244	Setting the Speed Sign Recognition Speed Tolerance	258
Exit Warning - Troubleshooting	244	Speed Sign Recognition – Troubleshooting	258
Cross Traffic Alert		Driver Alert	
What Is Cross Traffic Alert	246	What Is Driver Alert	260
How Does Cross Traffic Alert Work	246	How Does Driver Alert Work	260
Cross Traffic Alert Precautions	246	Driver Alert Precautions	260
Cross Traffic Alert Limitations	246	Driver Alert Limitations	260
Switching Cross Traffic Alert On and Off	246	Switching Driver Alert On and Off	260
Locating the Cross Traffic Alert Sensors	247	Driver Alert Indicators	261
Cross Traffic Alert Indicators	247	Driver Alert – Troubleshooting	261
Cross Traffic Alert – Troubleshooting	248		
		Load Carrying	
		Load Carrying Precautions	262
		Locating the Safety Compliance Certification Labels	263

Table of Contents

What Is the Gross Axle Weight Rating	263
What Is the Gross Vehicle Weight Rating	263
What Is the Gross Combined Weight Rating	263
Calculating Payload	264
Calculating the Load Limit	264

Luggage Compartment

Luggage Compartment Precautions	267
Opening the Rear Luggage Compartment	267
Closing the Rear Luggage Compartment	269
Using the Rear Luggage Compartment Emergency Release	269
Luggage Compartment – Troubleshooting	269

Towing a Trailer

Towing a Trailer Precautions - Base/GT	271
Towing a Trailer Precautions - Dark Horse	271
Loading Your Trailer	271
Towing Weights and Dimensions	272

Convertible Top

Opening the Convertible Top	273
Closing the Convertible Top	274

Driving Hints

Cold Weather Precautions	275
Driving on Snow and Ice	275
Breaking-In	275
Driving Economically	275
Driving Through Shallow Water - Base/GT	276
Driving Through Shallow Water - Dark Horse	276

Floor Mats	277
------------------	-----

Crash and Breakdown Information

Roadside Assistance	278
Switching the Hazard Flashers On and Off	279
Jump Starting the Vehicle	279
Post-Crash Alert System	281
Post-Collision Braking	281
Automatic Crash Shutoff	282
Recovery Towing	282
Transporting the Vehicle	283
Fail-Safe Cooling	283

Towing Your Vehicle

Towing Your Vehicle Precautions	286
Recreationally Towing Your Vehicle	286
Emergency Towing	286

Fuses

Fuse Precautions	287
Under Hood Fuse Box	287
Body Control Module Fuse Box	292
High Current Fuse Box	294
Identifying Fuse Types	295
Fuses – Troubleshooting	295

Maintenance

Maintenance Precautions	296
Opening and Closing the Hood	296
Under Hood Overview - 2.3L EcoBoost™	297
Under Hood Overview - 5.0L	298
Engine Oil	299
Engine Air Filter	300
Coolant	302
Changing the Fuel Filter	305

Table of Contents

Drive Belt Routing Overview - 2.3L EcoBoost™	306
Drive Belt Routing Overview - 5.0L	307
12V Battery	307
12V Battery – Troubleshooting	309
Adjusting the Headlamps	310
Exterior Bulbs	312
Interior Bulbs	312
Track Use	
Track Use	313
Track Use - Dark Horse	315
Vehicle Care	
Cleaning Products	318
Cleaning the Exterior	319
Cleaning the Interior	320
Repairing Minor Paint Damage	322
Waxing Your Vehicle	323
Body Styling Kits	
Body Styling Kit Precautions	324
Storing Your Vehicle	
Preparing Your Vehicle for Storage	325
Removing Your Vehicle From Storage	326
Wheel and Tire Information	
Locating the Tire label	327
Department of Transportation Uniform Tire Quality Grades	327
Information on the Tire Sidewall	328
Glossary of Tire Terminology	333
Tire Replacement Requirements	334
Using Summer Tires	336
Using Snow Chains	336
Tire Care	
Checking the Tire Pressures	339
Inflating the Tires	339
Inspecting the Tire for Wear	340
Inspecting the Tire for Damage	341
Inspecting the Wheel Valve Stems	345
Tire Rotation	345
Tire Sealant and Inflator Kit	
What Is the Tire Sealant and Inflator Kit	347
Tire Sealant and Inflator Kit Precautions	347
Locating the Tire Sealant and Inflator Kit	347
Tire Sealant and Inflator Kit Components	348
Using the Tire Sealant and Inflator Kit	348
Tire Pressure Monitoring System	
What Is the Tire Pressure Monitoring System	353
Tire Pressure Monitoring System Overview	353
Tire Pressure Monitoring System Precautions	354
Tire Pressure Monitoring System Limitations	354
Viewing the Tire Pressures	355
Tire Pressure Monitoring System – Troubleshooting	355
Changing a Road Wheel	
Changing a Flat Tire	357
Wheel Nuts	361
Capacities and Specifications	
Engine Specifications - 2.3L EcoBoost™	363
Engine Specifications - 5.0L	364
Suspension Specifications	365

Table of Contents

Motorcraft Parts - 2.3L EcoBoost™	367
Motorcraft Parts - 5.0L	368
Engine Oil Capacity and Specification - 2.3L EcoBoost™	369
Engine Oil Capacity and Specification - 5.0L	370
Cooling System Capacity and Specification - 2.3L EcoBoost™	372
Cooling System Capacity and Specification - 5.0L	373
Fuel Tank Capacity - 2.3L EcoBoost™	374
Fuel Tank Capacity - 5.0L	375
Air Conditioning System Capacity and Specification - 2.3L EcoBoost™	376
Air Conditioning System Capacity and Specification - 5.0L	377
Washer Fluid Specification	377
Manual Transmission Fluid Capacity and Specification	378
Clutch Fluid Capacity and Specification	379
Automatic Transmission Fluid Capacity and Specification	379
Brake Fluid Specification	380
Rear Axle Fluid Capacity and Specification	380

Vehicle Identification

Vehicle Identification Number	382
-------------------------------	-----

Connected Vehicle

What Is a Connected Vehicle	383
Connected Vehicle Requirements	383
Connected Vehicle Limitations	383
Connecting the Vehicle to a Mobile Network	383
Connecting the Vehicle to a Wi-Fi Network	383
Connected Vehicle – Troubleshooting	384

Vehicle Wi-Fi Hotspot

Creating a Vehicle Wi-Fi Hotspot	386
Changing the Vehicle Wi-Fi Hotspot Name or Password	386
Vehicle Wi-Fi Hotspot – Troubleshooting	387

Audio System

Audio System Precautions	388
Switching the Audio Unit On and Off	388
Selecting the Audio Source	388
Playing or Pausing the Audio Source	388
Adjusting the Volume	388
Switching Shuffle Mode On and Off	389
Switching Repeat Mode On and Off	389
Setting a Memory Preset	389
Muting the Audio	389
Adjusting the Sound Settings	389
Setting the Clock and Date	389
FM Radio	390
Switching the Display On and Off	390
Digital Radio	390
Satellite Radio	392
Audio System – Troubleshooting	394

Center Display Overview

Center Display Precautions	398
Center Display Limitations	398
Status Bar	398
Home Screen	399
Favorite	399
Information On Demand Screen	399
Center Display Settings	399
Rebooting the Center Display	400

My Mustang

My Mustang Overview	401
---------------------	-----

Table of Contents

Track Apps	402
Auxiliary Gauges	408
Custom Drive Mode	408
Cluster Theme	409
My Color	409
Exhaust Mode	409

Voice Interaction

Ford Assistant	411
----------------------	-----

Alexa Built-In

What is Alexa Built-In	413
Alexa Built-In Requirements	413
Signing In to Your Account	413
Using Alexa Built-In	413
Alexa Built-In Settings	413

Phone

Phone Precautions	415
Connecting Your Phone	415
Phone Menu	415
Making and Receiving a Phone Call	417
Sending and Receiving a Text Message	418
Switching Text Message Notification On and Off	419

Bluetooth®

Connecting a Bluetooth® Device	420
Playing Media Using Bluetooth®	420

Apps

App Precautions	421
App Requirements	421
Accessing Apps	421
Enabling Apps on an iOS Device	421
Enabling Apps on an Android Device	421
Switching Apple CarPlay On and Off	422

Switching Android Auto On and Off	422
---	-----

Personal Profiles

How Do Personal Profiles Work	423
Enabling or Disabling Personal Profiles	423
Creating a Personal Profile	424
Linking or Unlinking a Personal Profile to a Remote Control	424
Linking or Unlinking a Personal Profile to a Device	424

Navigation

Connected Navigation	425
Accessing Navigation	425
Navigation Map Updates	425
Adjusting the Map	425
Live Traffic	425
Setting a Destination	425
Waypoints	426
Route Guidance	426

Vehicle Software Updates

Vehicle Software Updates	427
Software Update Settings	427
Software Update Indicators	428

Vehicle System Reset

Performing a System Reset	429
---------------------------------	-----

Accessories

Accessories	430
-------------------	-----

Ford Protect

What Is Ford Protect	431
----------------------------	-----

Scheduled Maintenance

General Maintenance Information	433
Normal Scheduled Maintenance	436

Table of Contents

Special Operating Conditions Scheduled
Maintenance439

Customer Information

The Better Business Bureau Auto Line
Program443

The Mediation and Arbitration Program
.....443

Ordering a Canadian French Owner's
Manual444

Reporting Safety Defects in the United
States444

Reporting Safety Defects in Canada
.....445

Third Party Software Copyright
Acknowledgment446

Radio Frequency Certification Labels
.....446

Perchlorate494

Replacement Parts Recommendation
.....494

Mobile Communications Equipment
.....495

Federal Highway Administration
Regulation495

End User License Agreement496

Emission Law521

Export Unique Options522

Warranty Information522

Appendices

Electromagnetic Compatibility524

Contacting Us

If you require assistance or clarification on policies or procedures, please contact the customer relationship center.

United States

Ford Motor Company
Customer Relationship Center
PO Box 6248
Dearborn, MI 48126
1-800-392-3673 (FORD)
TDD for the hearing impaired:
7-1-1 (where offered by your telephone
service provider)
www.ford.com/help/contact/

Ford Credit - US Only

Ford Credit offers a full range of financing and lease plans to help you acquire your vehicle. If you have financed or leased your vehicle through Ford Credit, thank you for your business.

For assistance call 1-800-727-7000, or for more information about Ford Credit and access to an account manager, visit www.ford.com/finance.

Canada

Customer Relationship Centre
Ford Motor Company of Canada Limited
P.O. Box 2000
Oakville, Ontario L6J 5E4
1-800-565-3673 (FORD)
TDD for the hearing impaired:
7-1-1 (where offered by your telephone
service provider)
www.ford.ca

Australia

Ford Motor Company of Australia Pty Ltd.
Customer Relationship Centre
Private Mail Bag 5
Campbellfield, Victoria, 3061
Telephone: (13 FORD) 13 3673
E-mail: foacust1@ford.com

New Zealand

Ford Motor Company
Attention: Customer Relationship Centre
Private Bag 76912
Manukau City 2241
Telephone: 0800 367 369 (FORDNZ)
E-mail: fnzcust@ford.com

China - Imported Vehicle

Customer Relationship Center
Telephone: 400-690-1886
Website: <https://www.ford.com.cn/>

China - Chang'An Ford

Customer Relationship Center
Telephone: 800-810-8168
Mobile: 400-887-7766
Website: <https://www.ford.com.cn/>

Asia Pacific Direct Markets (APDM)

E-mail: apemcrc@ford.com

Caribbean, Central America and Israel

Ford Motor Company
Ford Export Operations
Attention: Owner Relations
1555 Fairlane Drive
Fairlane Business Park #3
Allen Park, MI 48101
Fax: (313) 390-0804
Telephone: (313) 594-4857
E-mail: expcac@ford.com

U.S. Virgin Islands and Puerto Rico

Ford Motor Company
Ford Export Operations
Attention: Owner Relations
1555 Fairlane Drive
Fairlane Business Park #3
Allen Park, MI 48101
Telephone: (800) 841-3673
E-mail: prcac@ford.com

Contacting Us

Argentina

Telephone: 0800-888-3673

Brazil

Website: www.ford.com.br
Telephone: 0800-703-3673
E-mail: central@ford.com

North Africa

E-mail: nafcrc@ford.com

South Africa

Telephone: 0860011022
Email: fordcrc2@ford.com

Sub-Saharan Africa

E-mail: ssacrc@ford.com

Puerto Rico

Ford International Business Development,
Inc.
P.O. Box 11957
Caparra Heights Station
San Juan, PR 00922-1957
1-800-392-3673 (FORD)
Fax: (313) 390-0804
E-mail: prcac@ford.com
www.ford.com.pr

Middle East

Ford Middle East Customer Relationship
Center
P.O. Box 21740
Dubai, United Arab Emirates
Telephone: 80004441066
Toll-free number for the Kingdom of Saudi
Arabia: 8008443673
Mobily and Zain cell phone users in Saudi
Arabia: 800850078
Kuwait: 22280384
Local telephone number for Kuwait: +965
1 898900
Fax: +971 4 3327266
E-mail: menacac@ford.com
www.me.ford.com

South Korea

Customer Relationship Center
Telephone: +82-02-1600-6003
E-mail: infokr1@ford.com
Emergency Dispatch Service call:
080-300-3673

Philippines

Telephone: 02-88669408
Email: emailus@ford.com

Taiwan

Telephone: 0800-032100
705 Zhonghua Rd., Sec. 1
Zhongli District, Taoyuan, Taiwan, 32068

Thailand

Telephone: 1383
E-mail: fordthai@ford.com

Vietnam

Telephone: 1800588888
E-mail: fordvn@ford.com

Introduction

ABOUT THIS PUBLICATION



WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



WARNING: You risk death, fire, or serious injury to yourself and others if you do not follow the instruction highlighted by the warning symbol.

Thank you for choosing Ford. We recommend that you take some time to get to know your vehicle in order to benefit from greater safety and pleasure from driving it. Use this publication to familiarize yourself with the basics and then read the digital version, that is available in your vehicle. You can also view the comprehensive manual through the FordPass app and through the local Ford website.

Note: To download the FordPass app, visit your device's app store.

Note: To find the local Ford website, visit <https://corporate.ford.com/operations/locations/global-links.html>.

Note: Use and operate your vehicle in line with all applicable laws and regulations.

Note: Pass on all printed owner's information when selling this vehicle.

Our digital resources include a comprehensive digital Owner's Manual dynamically created according to the features on your vehicle by using the vehicle identification number. See **Locating the Vehicle Identification Number** (page 382). The digital Owner's Manual includes visual and full text search functions so that you can quickly locate the information you are looking for. It also includes links to a number of how-to videos created to help you understand some of the advanced technologies on your vehicle.

Features and Options

This publication describes product features and options available throughout the range of available models, sometimes even before they are generally available. It could describe options that are not available on the vehicle you have purchased.


Illustrations

Some of the illustrations in this publication could show features as used in different models, so they could appear different to you on your vehicle.

Location of Components

This manual may qualify the location of a component as left-hand side or right-hand side. The side is determined when facing forward in the seat.

Introduction

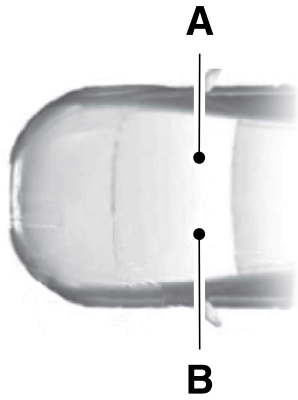

- A Right-hand side.
- B Left-hand side.























 





USING THIS PUBLICATION

To quickly locate information about your vehicle, use the word search within the Owner's Manual application.







Symbols Glossary

SYMBOLS USED ON YOUR VEHICLE

These are some of the symbols you may see on your vehicle.

	Airbag		Child safety door lock or unlock
	Air conditioning system		Child seat lower anchor
	Air conditioning system lubricant type		Child seat tether anchor
	Anti-lock braking system		Cruise control
	Avoid smoking, flames or sparks		Do not open when hot
	Battery		Electric Parking brake
	Battery acid		Engine air filter
	Blower motor		Engine coolant
	Brake fluid - non petroleum based		Engine coolant temperature
	Brake system		Engine oil
	Brake system		Explosive gas
	Cabin air filter		Fan warning
	Check fuel cap		Fasten seatbelt
			Flammable
			Front fog lamps

Symbols Glossary

	Fuel pump reset		Malfunction Indicator Lamp (MIL)
	Fuse compartment		Note operating instructions
	Hazard flashers		Panic alarm
	Headlamp high beams		Parking aid
	Headlamps on		Parking lamps
	Heated rear window		Passenger airbag activated
	Hill descent control		Passenger airbag deactivated
	Horn control		Power steering fluid
	Interior luggage compartment release		Power windows front/rear
	Jack		Power window lockout
	Keep out of reach of children		Requires registered technician
	Lighting control		Safety alert
	Low fuel level		See Owner's Manual
	Low tire pressure warning		See Service Manual
	Maintain correct fluid level		Side airbag

Symbols Glossary



Shield the eyes



 
Stability control



Stability control off



Trail control



Turn Signal



Windshield defrosting system



Windshield wiping system



Windshield wash and wipe

Data Privacy



WARNING: Do not connect wireless plug-in devices to the data link connector. Unauthorized third parties could gain access to vehicle data and impair the performance of safety related systems. Only allow repair facilities that follow our service and repair instructions to connect their equipment to the data link connector.

We respect your privacy and are committed to protecting it. The information contained in this publication was correct at the time of release, but as technology rapidly changes, we recommend that you visit the local Ford website for the latest information.

Your vehicle has electronic control units that have data recording functionality and the ability to permanently or temporarily store data. This data could include information on the condition and status of your vehicle, vehicle maintenance requirements, events and malfunctions. The types of data that can be recorded are described in this section. Some of the data recorded is stored in event logs or error logs.

Note: *Error logs are reset following a service or repair.*

Note: *We may provide information in response to requests from law enforcement, other government authorities and third parties acting with lawful authority or through a legal process. Such information could be used by them in legal proceedings.*

Data recorded includes, for example:

- Operating states of system components, for example fuel level, tire pressure and battery charge level.
- Vehicle and component status, for example wheel speed, deceleration, lateral acceleration and seatbelt status.

- Events or errors in essential systems, for example headlamps and brakes.
- System responses to driving situations, for example airbag deployment and stability control.
- Environmental conditions, for example temperature.

Some of this data, when used in combination with other information, for example an accident report, damage to a vehicle or eyewitness statements, could be associated with a specific person.

Services That We Provide

If you use our services, we collect and use data, for example account information, vehicle location and driving characteristics, that could identify you. We transmit this data through a dedicated, protected connection. We only collect and use data to enable your use of our services to which you have subscribed, with your consent or where permitted by law. For additional information, see the terms and conditions of the services to which you have subscribed.

For additional information about our privacy policy, refer to the local Ford website.

Services That Third Parties Provide

We recommend that you review the terms and conditions and data privacy information for any services equipped with your vehicle or to which you subscribe. We take no responsibility for services that third parties provide.

Where equipped, SiriusXM with 360L could use the modem. To disable, turn off the SiriusXM with 360L or Vehicle Connectivity setting. See **Enabling and Disabling the Modem** (page 383).

Data Privacy

SERVICE DATA

Service data recorders in your vehicle are capable of collecting and storing diagnostic information about your vehicle. This potentially includes information about the performance or status of various systems and modules in the vehicle, such as engine, throttle, steering or brake systems. In order to properly diagnose and service your vehicle, Ford Motor Company (Ford of Canada in Canada), and service and repair facilities may access or share among them vehicle diagnostic information received through a direct connection to your vehicle when diagnosing or servicing your vehicle. Additionally, Ford Motor Company (Ford of Canada, in Canada) may, where permitted by law, use vehicle diagnostic information for vehicle improvement or with other information we may have about you, for example, your contact information, to offer you products or services that may interest you. Data may be provided to our service providers such as part suppliers that may help diagnose malfunctions, and who are similarly obligated to protect data. We retain this data only as long as necessary to perform these functions or to comply with law. We may provide information where required in response to official requests to law enforcement or other government authorities or third parties acting with lawful authority or court order, and such information may be used in legal proceedings. For U.S. only (if equipped), if you choose to use connected apps and services, you consent that certain diagnostic information may also be accessed electronically by Ford Motor Company and Ford authorized service facilities, and that the diagnostic information may be used to provide services to you, personalizing your experience, troubleshoot, and to improve products and services and offer you products and services that may interest

you, where permitted by law. For Canada only, for more information, please review the Ford of Canada privacy policy at www.ford.ca, including our U.S. data storage and use of service providers in other jurisdictions who may be subject to legal requirements in Canada, the United States and other countries applicable to them, for example, lawful requirements to disclose personal information to governmental authorities in those countries.

EVENT DATA

This vehicle is equipped with an event data recorder. The main purpose of an event data recorder is to record, in certain crash or near crash-like situations, such as an airbag deployment or hitting a road obstacle; this data will assist in understanding how a vehicle's systems performed. The event data recorder is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The event data recorder in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating.
- Whether or not the driver and passenger seatbelts were buckled/fastened.
- How far (if at all) the driver was depressing the accelerator and/or the brake pedal.
- How fast the vehicle was traveling.
- Where the driver was positioning the steering wheel.

This data can help provide a better understanding of the circumstances in which crashes and injuries occur.

Data Privacy

Note: Event data recorder data is recorded by your vehicle only if a non-trivial crash situation occurs; no data is recorded by the event data recorder under normal driving conditions and no personal data or information (for example name, gender, age, and crash location) is recorded. However, parties, such as law enforcement, could combine the event data recorder data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an event data recorder, special equipment is required, and access to the vehicle or the event data recorder is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have such special equipment, can read the information if they have access to the vehicle or the event data recorder.

SETTINGS DATA

Your vehicle has electronic control units that have the ability to store data based on your personalized settings. The data is stored locally in the vehicle or on devices that you connect to it, for example, a USB drive or digital music player. You can delete some of this data and also choose whether to share it through the services to which you subscribe.

Comfort and Convenience Data

Data recorded includes, for example:

 
- Seat and steering wheel position.
- Climate control settings.
- Radio presets.

Entertainment Data

Data recorded includes, for example:

- Music, videos or album art.
- Contacts and corresponding address book entries.
- Navigation destinations.

CONNECTED VEHICLE DATA



The modem has a SIM. The modem was enabled when your vehicle was built and periodically sends messages to stay connected to the cell phone network, receive automatic software updates and send vehicle-related information to us, for example diagnostic information. These messages could include information that identifies your vehicle, the SIM and the electronic serial number of the modem. Cell phone network service providers could have access to additional information, for example cell phone network tower identification. For additional information about our privacy policy, visit www.FordConnected.com or refer to your local Ford website.

Note: The modem continues to send this information unless you disable the modem or stop the modem from sharing vehicle data by changing the modem settings. See **Connected Vehicle** (page 383).

Note: The service can be unavailable or interrupted for a number of reasons, for example environmental or topographical conditions and data plan coverage.

Note: To find out if your vehicle has a modem, visit www.FordConnected.com.

Data Privacy

MOBILE DEVICE DATA

If you connect a mobile device to your vehicle, you can display data from your device on the touchscreen for example, music and album art. You can share your vehicle data with mobile apps on your device through the system. See **App Requirements** (page 421).

The mobile apps function operates by your connected device sending data to us in the United States. The data is encrypted and includes, for example, the vehicle identification number of your vehicle, the SYNC module serial number, odometer, enabled apps, usage statistics and debugging information. We retain it only as long as necessary to provide the service, to troubleshoot, for continuous improvement and to offer you products and services that may be of interest to you according to your preferences and where allowed by law.

If you connect a cell phone to the system, the system creates a profile that links to that cell phone. The cell phone profile enables more mobile features and efficient operation. The profile contains, for example data from your phonebook, read and unread text messages and call history, including history of calls when your cell phone was not connected to the system.

If you connect a media device, the system creates and retains a media device index of supported media content. The system also records a short diagnostic log of approximately 10 minutes of all recent system activity.

The cell phone profile, media device index and diagnostic log remain in your vehicle unless you delete them and are generally accessible only in your vehicle when you connect your cell phone or media device. If you no longer plan to use the system or your vehicle, we recommend you use the system reset function to erase the stored information. See **Performing a System Reset** (page 429).

System data cannot be accessed without special equipment and access to your vehicle's module.

For additional information about our privacy policy, refer to the local Ford website.

Note: *To find out if your vehicle has connectivity technology, visit www.FordConnected.com.*

EMERGENCY CALL SYSTEM DATA - VEHICLES WITH: EMERGENCY ASSISTANCE

When the emergency call system is active, it may disclose to emergency services that your vehicle has been in a crash involving the deployment of an airbag or activation of the fuel pump shut-off. Certain versions or updates to the emergency call system may also be capable of electronically or verbally disclosing to emergency services operators your vehicle location or other details about your vehicle or crash to assist emergency services operators to provide the most appropriate emergency services. If you do not want to disclose this information, do not activate the emergency call system.

Note: *You cannot deactivate emergency call systems that are required by law.*

Environment


PROTECTING THE ENVIRONMENT

Sustainability is a priority at Ford. We are constantly looking for ways to reduce our impact on the planet while providing customers with great products and delivering a strong business. You should play your part in protecting the environment. Correct vehicle usage and the authorized disposal of waste, cleaning and lubrication materials are significant steps toward this aim.

For additional information about our sustainability progress and initiatives, visit www.sustainability.ford.com.

Visual Search


STEERING WHEEL

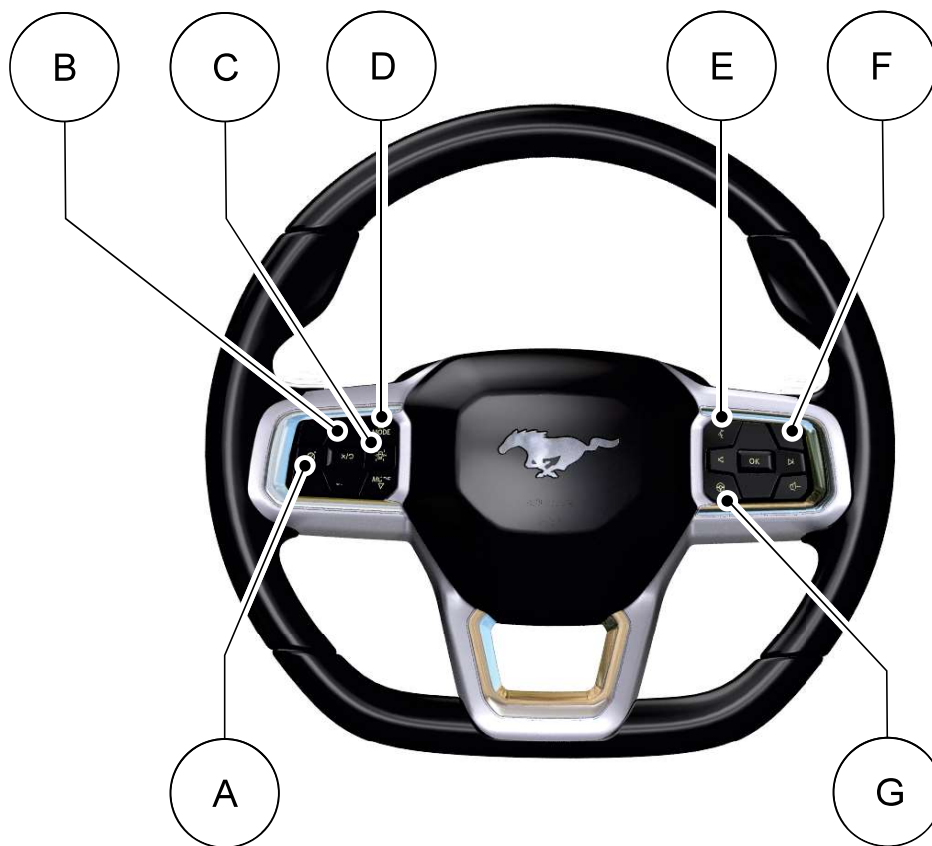

- A See **Switching Cruise Control On and Off** (page 208). See **Switching Adaptive Cruise Control On and Off** (page 213).
- B See **Setting the Cruise Control Speed** (page 208). See **Setting the Adaptive Cruise Control Speed** (page 214).
- C See **Switching the Lane Keeping System On and Off** (page 233). See **Switching Lane Centering On and Off** (page 219).
- D See **Selecting a Drive Mode** (page 226).
- E See **Using Ford Assistant** (page 411).
- F See **Adjusting the Volume** (page 388).
- G See **Selecting a Drive Mode** (page 226).

Visual Search

INSTRUMENT PANEL

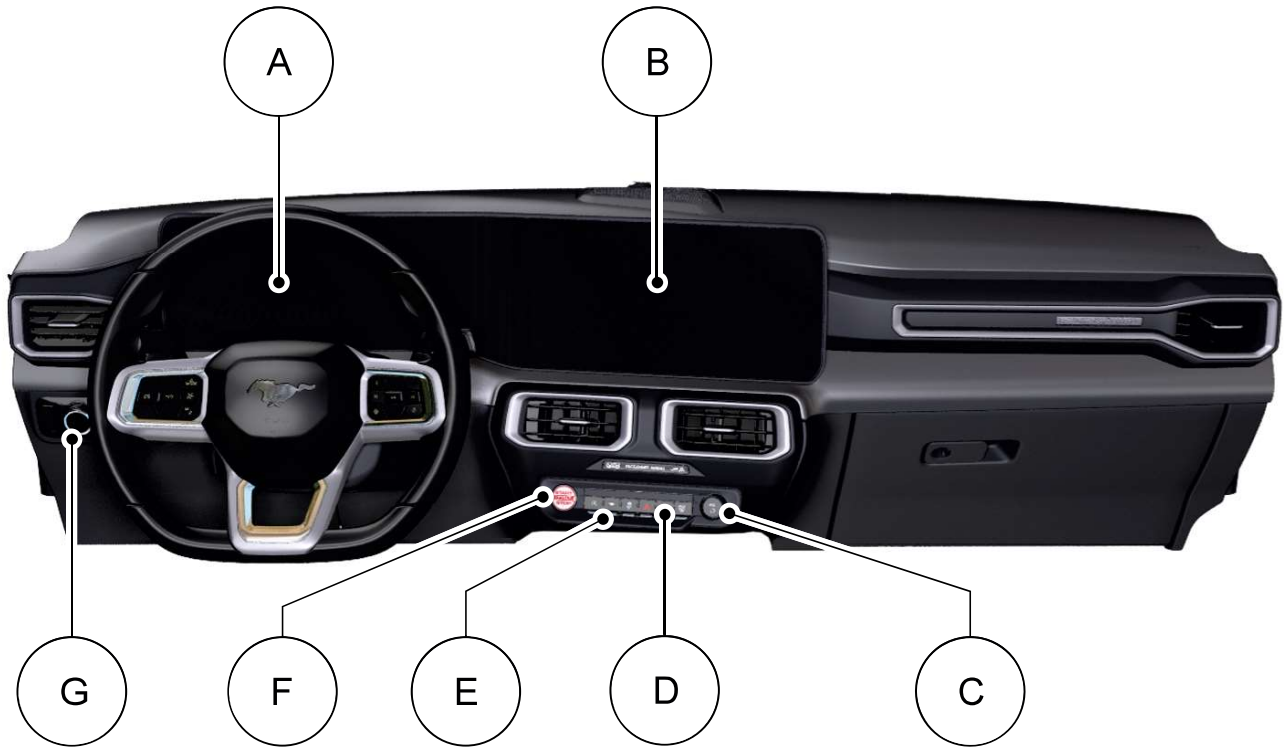

- A See **Instrument Cluster Overview** (page 108).
- B See **Status Bar** (page 398).
- C See **Switching the Audio Unit On and Off** (page 388).
- D See **Favorite** (page 399).
- E See **My Mustang Overview** (page 401).
- F See **Starting a Gasoline Engine** (page 154). See **Starting a Gasoline Engine** (page 154).
- G See **Exterior Lighting Control** (page 95).

Visual Search


VEHICLE INTERIOR



- A See **Sitting in the Correct Position** (page 129).
- B See **Applying the Electric Parking Brake** (page 186). See **Applying the Electric Parking Brake** (page 185).
- C See **Shifting Your Vehicle Into Gear** (page 176). See **Shifting Into Reverse** (page 173).
- D See **Folding the Seat Backrest** (page 137).

Visual Search


FRONT EXTERIOR - BASE, CONVERTIBLE

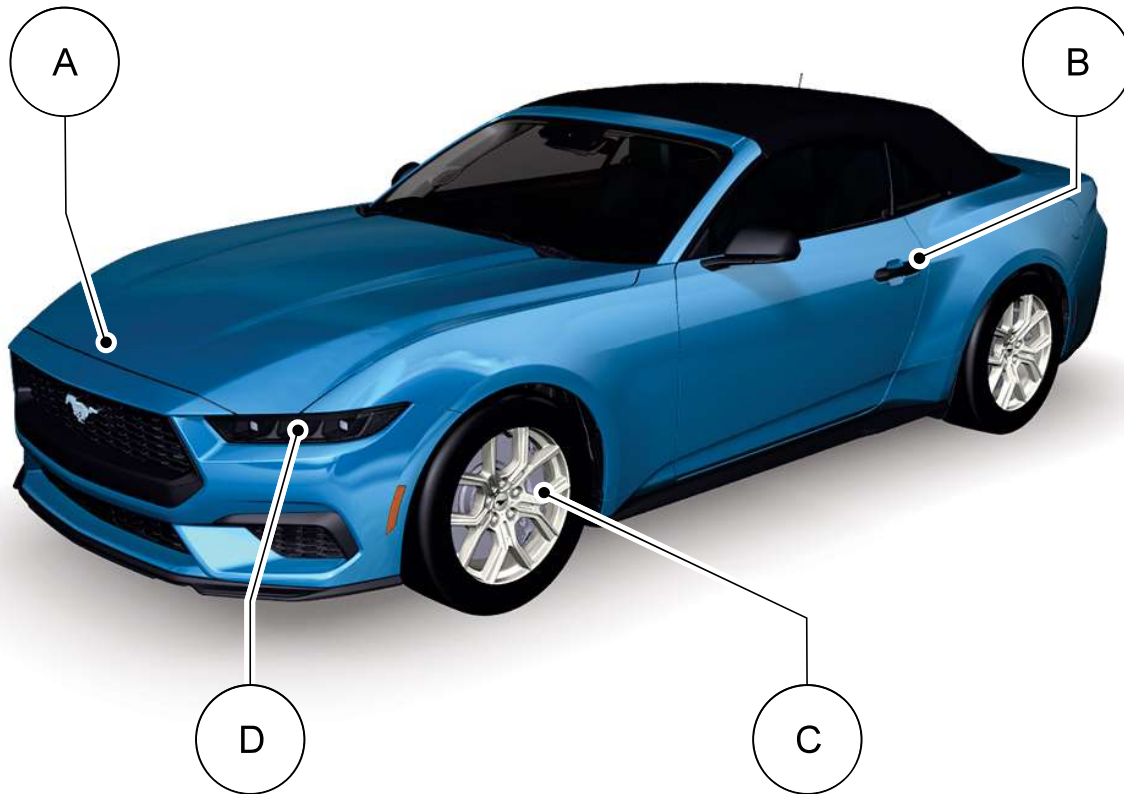

- A See **Opening and Closing the Hood** (page 296).
- B See **Unlocking and Locking the Doors Using the Remote Control** (page 78). See **Unlocking and Locking the Doors Using the Key Blade** (page 78). See **Unlocking and Locking the Doors Using the Central Locking** (page 78).
- C See **Checking the Tire Pressures** (page 339).
- D See **Exterior Lighting Control** (page 95).

Visual Search

FRONT EXTERIOR - BASE, COUPE

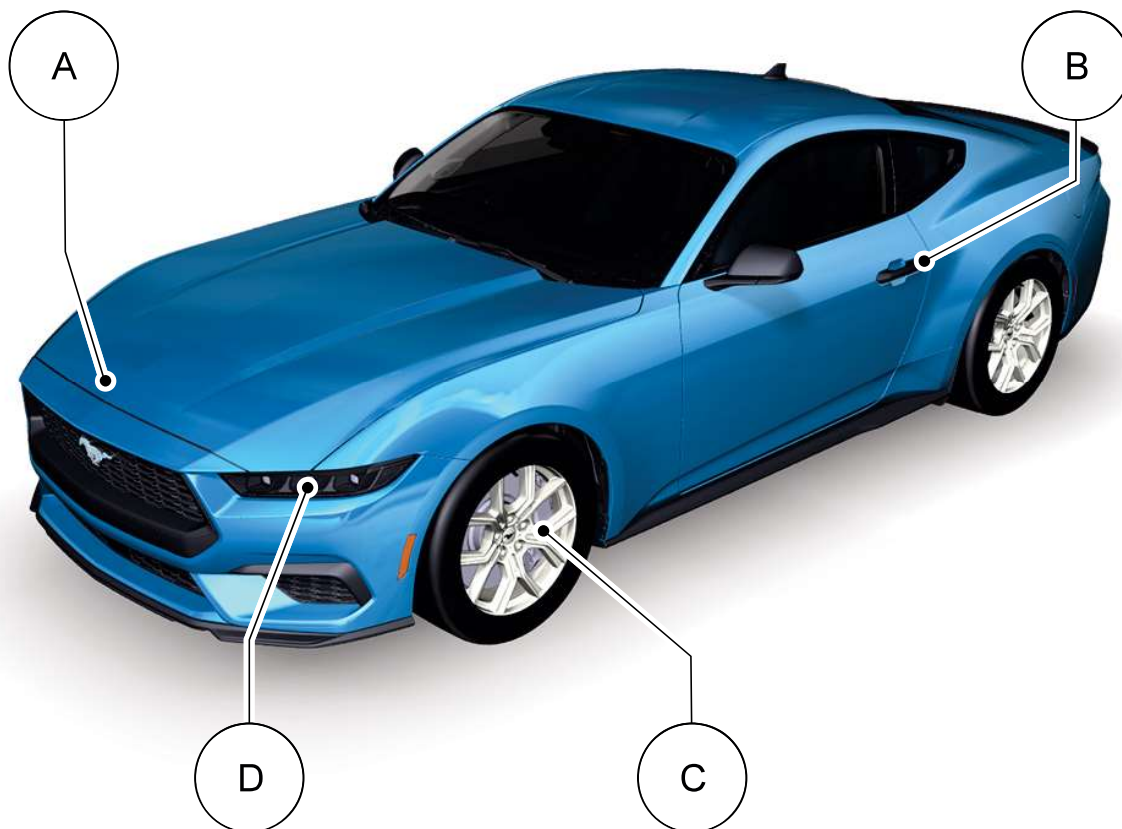

- A See **Opening and Closing the Hood** (page 296).
- B See **Unlocking and Locking the Doors Using the Remote Control** (page 78). See **Unlocking and Locking the Doors Using the Key Blade** (page 78). See **Unlocking and Locking the Doors Using the Central Locking** (page 78).
- C See **Checking the Tire Pressures** (page 339).
- D See **Exterior Lighting Control** (page 95).

Visual Search

FRONT EXTERIOR - DARK HORSE



- A See **Opening and Closing the Hood** (page 296).
- B See **Unlocking and Locking the Doors Using the Remote Control** (page 78). See **Unlocking and Locking the Doors Using the Key Blade** (page 78). See **Unlocking and Locking the Doors Using the Central Locking** (page 78).
- C See **Checking the Tire Pressures** (page 339).
- D See **Exterior Lighting Control** (page 95).

Visual Search

FRONT EXTERIOR - GT, CONVERTIBLE



- A See **Opening and Closing the Hood** (page 296).
- B See **Unlocking and Locking the Doors Using the Remote Control** (page 78). See **Unlocking and Locking the Doors Using the Key Blade** (page 78). See **Unlocking and Locking the Doors Using the Central Locking** (page 78).
- C See **Checking the Tire Pressures** (page 339).
- D See **Exterior Lighting Control** (page 95).

Visual Search


FRONT EXTERIOR - GT, COUPE



- A See **Opening and Closing the Hood** (page 296).
- B See **Unlocking and Locking the Doors Using the Remote Control** (page 78). See **Unlocking and Locking the Doors Using the Key Blade** (page 78). See **Unlocking and Locking the Doors Using the Central Locking** (page 78).
- C See **Checking the Tire Pressures** (page 339).
- D See **Exterior Lighting Control** (page 95).

Visual Search


REAR EXTERIOR - BASE, CONVERTIBLE

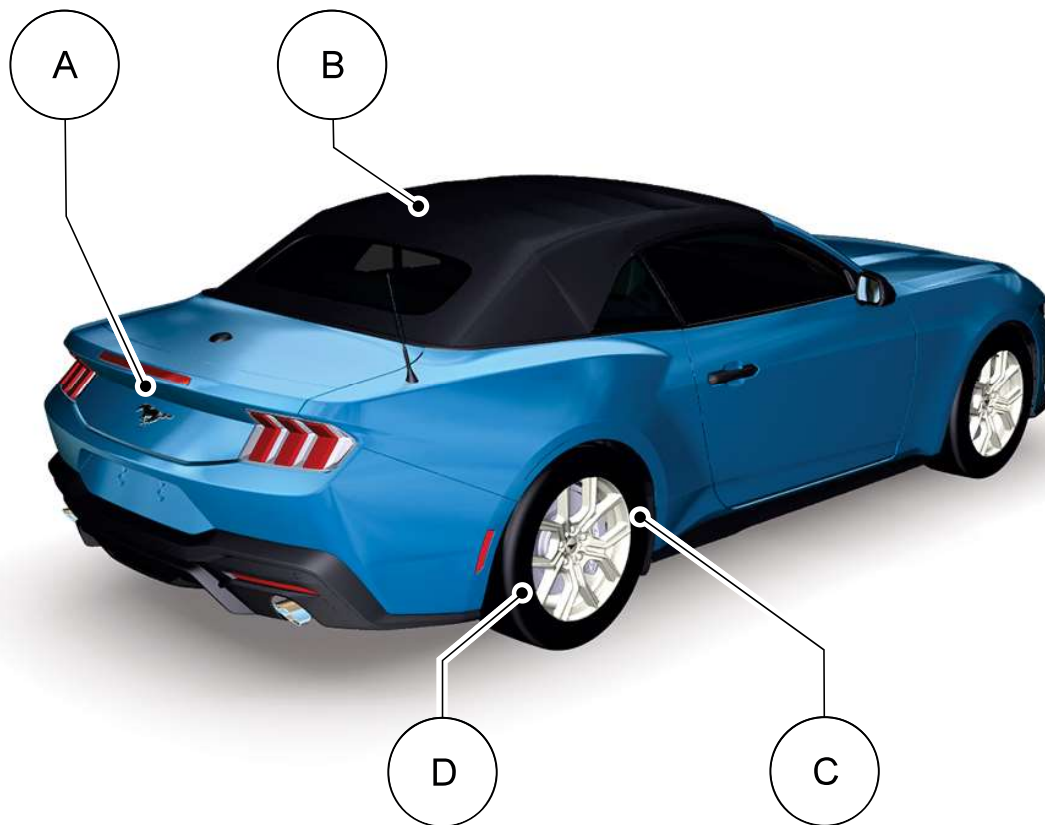

- A See **Opening the Rear Luggage Compartment from Outside Your Vehicle** (page 268).
- B See **Opening the Convertible Top** (page 273).
- C See **Changing a Flat Tire** (page 357).
- D See **Inspecting the Tire for Damage** (page 341).

Visual Search


REAR EXTERIOR - BASE, COUPE

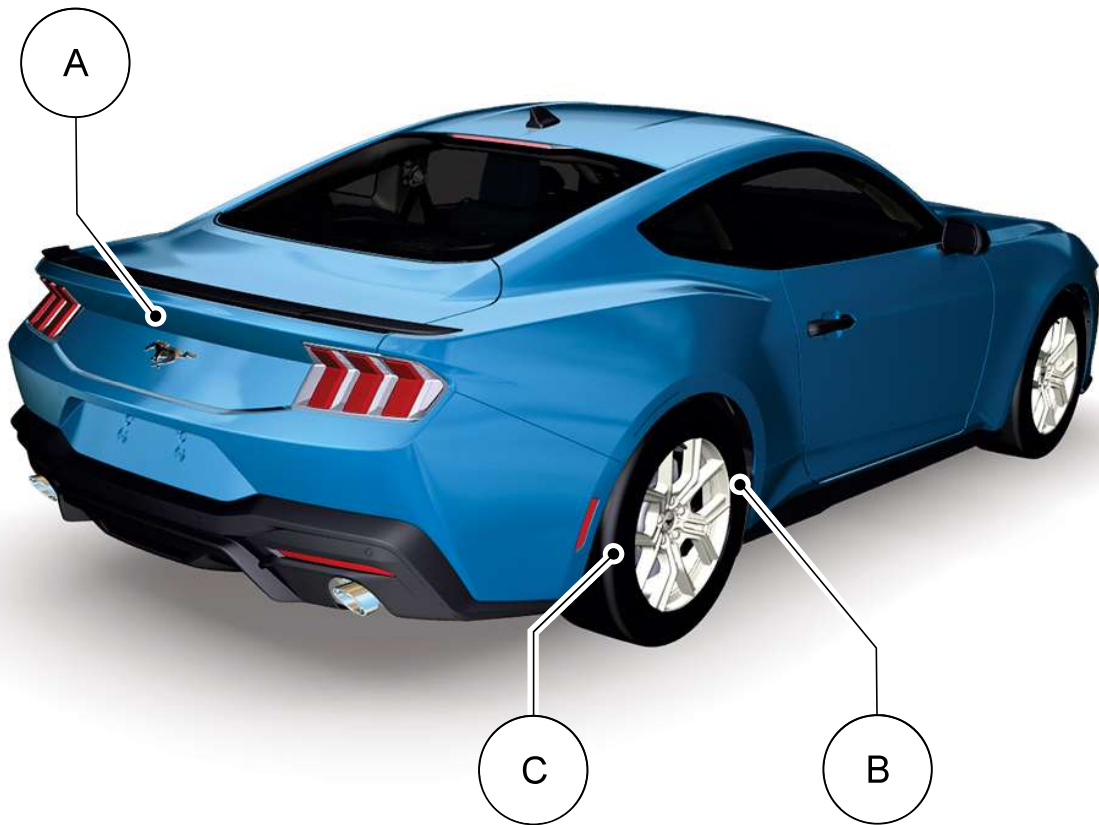

- A See **Opening the Rear Luggage Compartment from Outside Your Vehicle** (page 268).
- B See **Changing a Flat Tire** (page 357).
- C See **Inspecting the Tire for Damage** (page 341).

Visual Search


REAR EXTERIOR - DARK HORSE

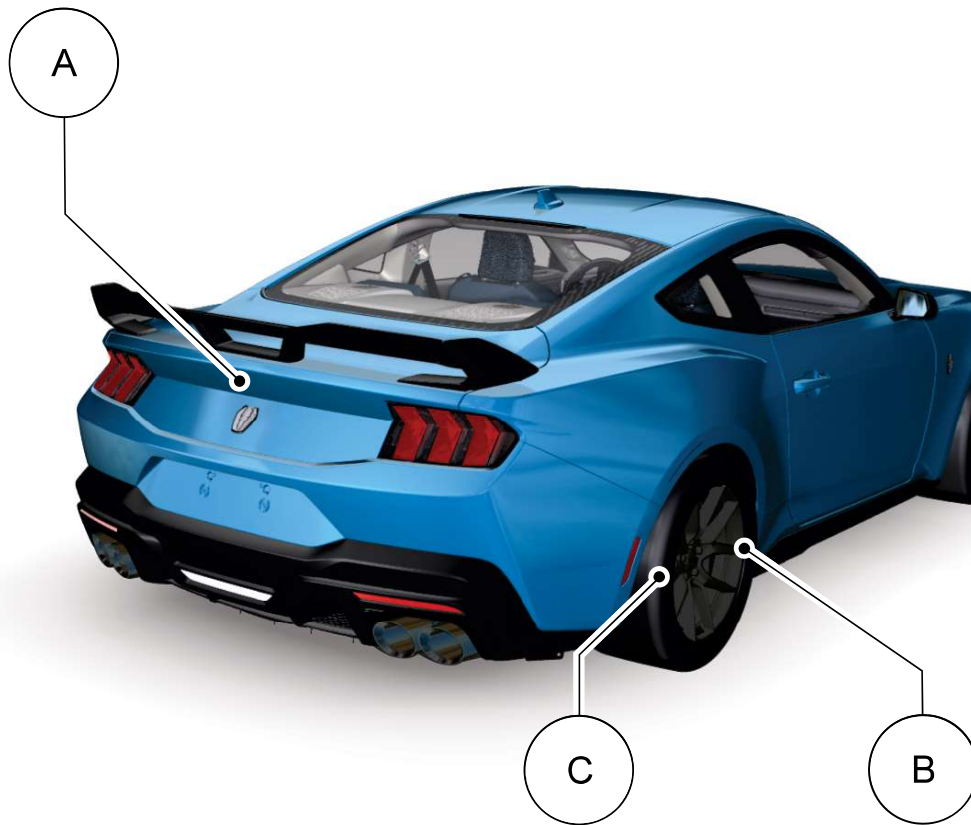

- A See **Opening the Rear Luggage Compartment from Outside Your Vehicle** (page 268).
- B See **Changing a Flat Tire** (page 357).
- C See **Inspecting the Tire for Damage** (page 341).

Visual Search


REAR EXTERIOR - GT, CONVERTIBLE

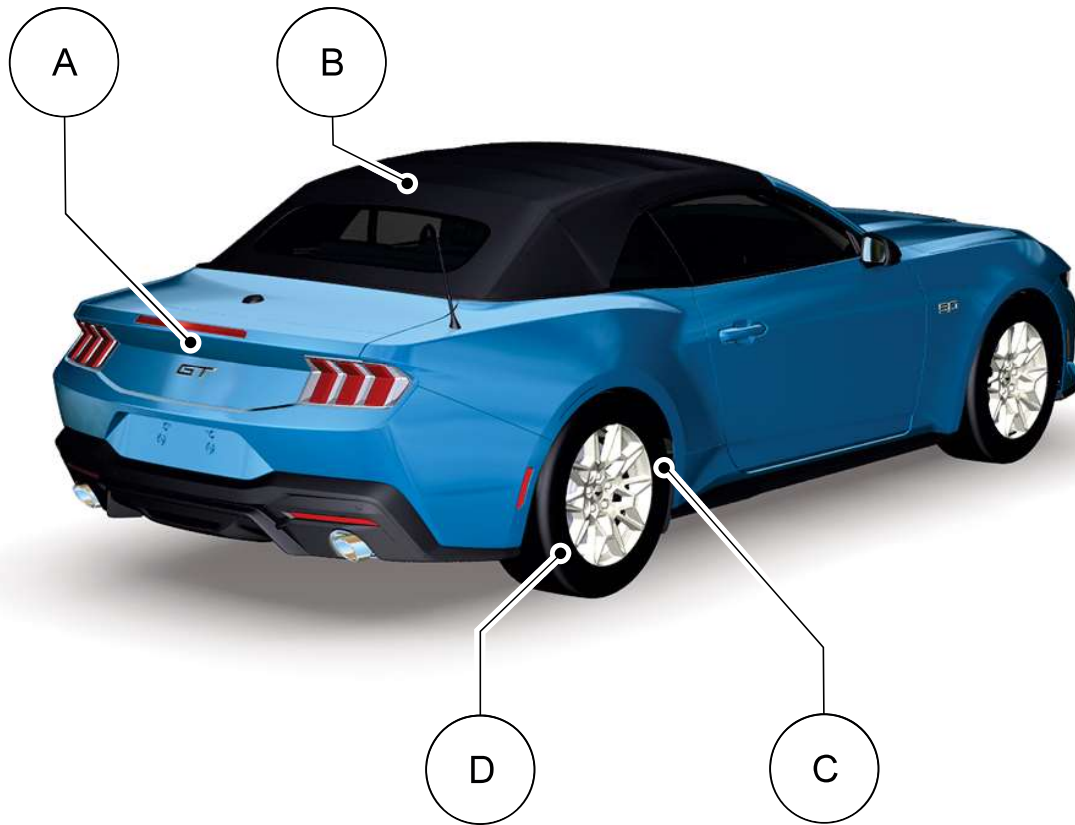

- A See **Opening the Rear Luggage Compartment from Outside Your Vehicle** (page 268).
- B See **Opening the Convertible Top** (page 273).
- C See **Changing a Flat Tire** (page 357).
- D See **Inspecting the Tire for Damage** (page 341).

Visual Search


REAR EXTERIOR - GT, COUPE

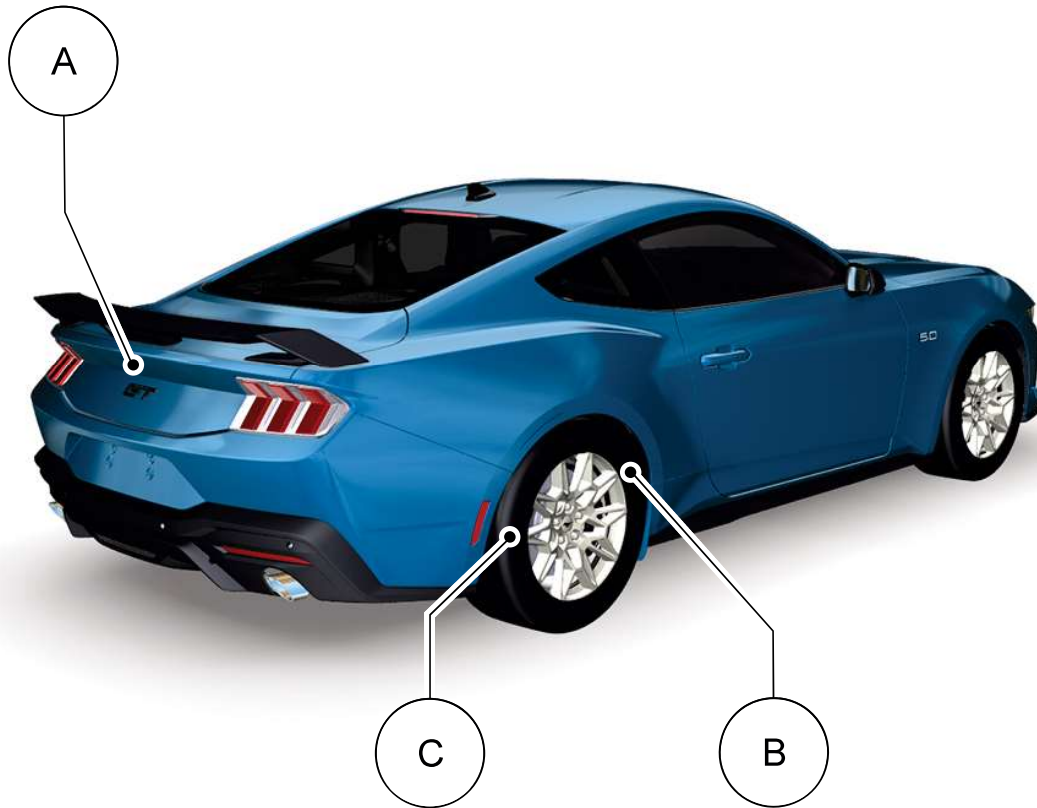


- A See **Opening the Rear Luggage Compartment from Outside Your Vehicle** (page 268).
- B See **Changing a Flat Tire** (page 357).
- C See **Inspecting the Tire for Damage** (page 341).


Child Safety


CHILD SAFETY PRECAUTIONS


 **WARNING:** Always make sure your child is secured properly in a device that is appropriate for their height, age and weight. Child safety restraints must be bought separately from your vehicle. Failure to follow these instructions and guidelines may result in an increased risk of serious injury or death to your child.

 **WARNING:** All children are shaped differently. The National Highway Traffic Safety Administration and other safety organizations, base their recommendations for child restraints on probable child height, age and weight thresholds, or on the minimum requirements of the law. We recommend that you check with a NHTSA Certified Child Passenger Safety Technician (CPST) to make sure that you properly install the child restraint in your vehicle and that you consult your pediatrician to make sure you have a child restraint appropriate for your child. To locate a child restraint fitting station and CPST, contact NHTSA toll free at 1-888-327-4236 or go to www.nhtsa.dot.gov. In Canada, contact Transport Canada toll free at 1-800-333-0371 or go to www.tc.gc.ca to find a Child Car Seat Clinic in your area. Failure to properly restrain children in child restraints made especially for their height, age and weight, may result in an increased risk of serious injury or death to your child.

 **WARNING:** On hot days, the temperature inside the vehicle can rise very quickly. Exposure of people or animals to these high temperatures for even a short time can cause death or serious heat related injuries, including brain damage. Small children are particularly at risk.

 **WARNING:** Do not place a rearward facing child restraint in front of an active airbag. Failure to follow this instruction could result in personal injury or death.

 **WARNING:** Properly secure children 12 years old and under in a rear seating position whenever possible. If you are unable to properly secure all children in a rear seating position, properly secure the largest child on the front seat. If you must use a forward facing child restraint on the front seat, move the seat as far back as possible. Failure to follow these instructions could result in personal injury or death.

 **WARNING:** Always carefully follow the instructions and warnings provided by the manufacturer of any child restraint to determine if the restraint device is appropriate for your child's size, height, weight, or age. Follow the child restraint manufacturer's instructions and warnings provided for installation and use in conjunction with the instructions and warnings provided by your vehicle manufacturer. A safety seat that is improperly installed or utilized, is inappropriate for your child's height, age, or weight or does not properly fit the child may increase the risk of serious injury or death.

Child Safety

WARNING: Do not allow a passenger to hold a child on their lap when your vehicle is moving. Failure to follow this instruction could result in personal injury or death in the event of a sudden stop or crash.

WARNING: Do not use pillows, books or towels to boost your child's height. Failure to follow this instruction could result in personal injury or death.

WARNING: Properly secure child restraints or booster seats when they are not in use. They could become projectiles in a sudden stop or crash. Failure to follow this instruction could result in personal injury or death.

WARNING: Do not put the shoulder section of the seatbelt or allow the child to put the shoulder section of the seatbelt under their arm or behind their back. Failure to follow this instruction could reduce the effectiveness of the seatbelt and increase the risk of injury or death in a crash.

WARNING: Do not leave children or pets unattended in your vehicle. Failure to follow this instruction could result in personal injury or death.


- Keep the buckle release button pointing up and away from the child restraint, with the tongue between the child restraint and the release button, to prevent accidental unbuckling.
- Put the seatbelt in the automatic locking mode.

CHILD RESTRAINT ANCHOR POINTS

WHAT ARE THE CHILD RESTRAINT ANCHOR POINTS

Anchor points are designed to allow you to quickly and safely install a child restraint.

LOCATING THE CHILD RESTRAINT LOWER ANCHOR POINTS

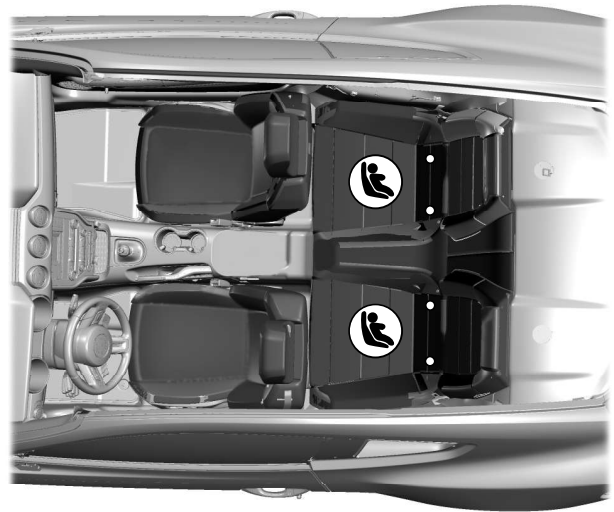


When installing a child restraint with seatbelts:

- Place the vehicle seat in the upright position before you install the child restraint.
- Use the correct seatbelt buckle for that seating position.
- Insert the belt tongue into the buckle. Make sure the tongue is securely fastened in the buckle.

Child Safety

LOCATING THE CHILD RESTRAINT TOP TETHER ANCHOR POINTS

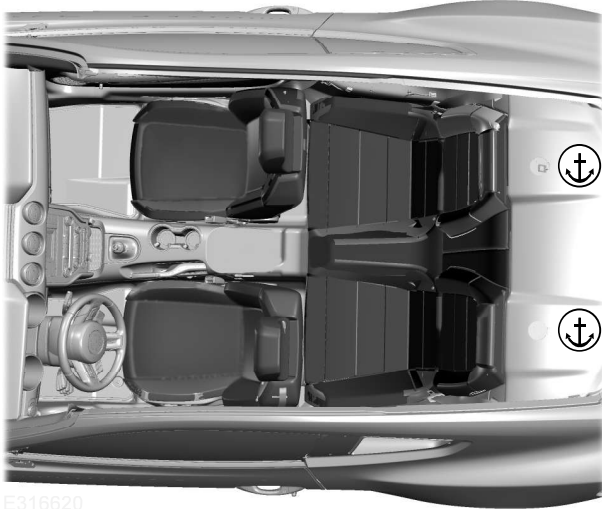

CHILD RESTRAINTS

CHILD RESTRAINT POSITION INFORMATION

Install the child restraint tightly against the vehicle seat. It may be necessary to lift or remove the head restraint.

Rear Facing Child Restraints

Combined Weight of Child and Child Restraint	LATCH (Lower Anchors Only)	Seatbelt Only
Up to 65 lb (29 kg)	X	X
Over 65 lb (29 kg)		X

Forward Facing Child Restraints

Combined Weight of Child and Child Restraint	LATCH (Lower Anchors and Top Tether Anchor)	Seatbelt and Top Tether Anchor	Seatbelt and LATCH (Lower Anchors and Top Tether Anchor)
Up to 65 lb (29 kg)	X	X	X
Over 65 lb (29 kg)		X	X

Child Safety

CHILD RESTRAINTS RECOMMENDATION

Child Size, Height, Weight, or Age	Recommended Restraint Type
Children weighing 40 lb (18 kg) or less (generally age four or younger).	Use a child restraint (sometimes called an infant carrier, convertible seat, or toddler seat).
Children who have outgrown or no longer properly fit in a child restraint (generally children who are less than 57 in (1.45 m) tall, are greater than age four and less than age 12, and between 40 lb (18 kg) and 80 lb (36 kg) and upward to 100 lb (45 kg) if recommended by your child restraint manufacturer).	Use a belt-positioning booster seat.
Children who have outgrown or no longer properly fit in a belt-positioning booster seat (generally children who are at least 57 in (1.45 m) tall or greater than 80 lb (36 kg) or 100 lb (45 kg) if recommended by child restraint manufacturer).	Use a vehicle seatbelt having the lap belt snug and low across the hips, shoulder belt centered across the shoulder and chest, and seat backrest upright.

You are required by law to properly use child restraints for infants and toddlers in the United States, Canada and Mexico.

Many states and provinces require that small children use approved booster seats until they reach age eight, a height of 57 in (1.45 m) tall, or 80 lb (36 kg). Check your local and state or provincial laws for specific requirements about the safety of children in your vehicle.

When possible, properly restrain children 12 years of age and under in a rear seating position of your vehicle. Accident statistics suggest that children are safer when properly restrained in the rear seating positions than in a front seating position.

When installing a rear facing child restraint, adjust the vehicle seats to avoid interference between the child restraint and the vehicle seat in front of the child restraint.

INSTALLING CHILD RESTRAINTS

USING SEATBELTS



WARNING: Depending on where you secure a child restraint, and depending on the child restraint design, you may block access to certain seatbelt buckle assemblies and LATCH lower anchors, rendering those features potentially unusable. To avoid risk of injury, make sure occupants only use seating positions where they are able to be properly restrained.

Note: *Although the child restraint illustrated is a forward-facing child restraint, the steps are the same for installing a rear-facing child restraint.*

Perform the following steps when installing a child restraint with seatbelts.

Child Safety


1. Position the child restraint in a seat with a seatbelt.



2. Pull down on the shoulder belt and then grasp it and the lap belt together.



3. While holding the shoulder and lap belt portions together, route the tongue through the child restraint according to the child restraint manufacturer's instructions. Make sure you did not twist the belt webbing.

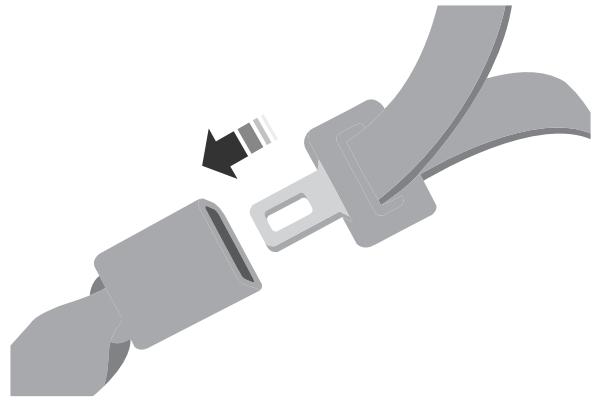

4. Insert the belt tongue into the proper buckle for that seating position until the latch engages. Make sure that you securely latch the tongue by pulling on it.



5. To put the retractor in the automatic locking mode, grasp the shoulder portion of the belt and pull downward until you pull all of the seatbelt out.

Note: *The automatic locking mode is available on the front passenger and rear seats. This vehicle does not require the use of a locking clip.*


6. Allow the belt to retract to remove slack. The seatbelt clicks as it retracts to indicate it is in the automatic locking mode.

Child Safety

7. Pull the seatbelt out of the retractor to make sure the retractor is in the automatic locking mode. You should not be able to pull more belt out. If the retractor is not locked, unbuckle the belt and repeat Steps 5 and 6.



8. Remove remaining slack from the belt. Force the seat down with extra weight, for example, by pressing down or kneeling on the child restraint while pulling up on the shoulder belt in order to force slack from the belt. This is necessary to remove the remaining slack that exists once you add the extra weight of the child to the child restraint. It also helps to achieve the proper snugness of the child restraint to your vehicle. Sometimes, a slight lean toward the buckle helps to remove remaining slack from the belt.
9. If the child restraint has a tether strap, attach it.

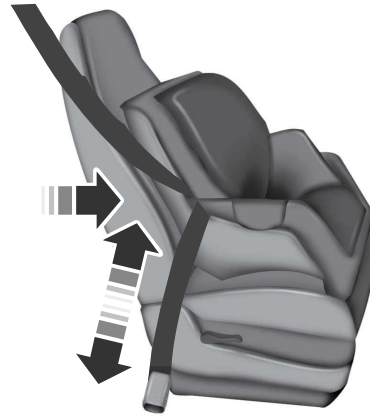

10. Before placing the child in the seat, forcibly move the seat forward and back to make sure the seat is securely held in place.

To check this, grab the seat at the belt path and attempt to move it side to side and forward and back. There should be no more than 1 in (2.5 cm) of movement.

We recommend checking with a NHTSA Certified Child Passenger Safety Technician to make certain the child restraint is properly installed. In Canada, check with Transport Canada for referral to a Child Car Seat Clinic.

USING LOWER ANCHORS AND TETHERS FOR CHILDREN



WARNING: Do not attach two child safety restraints to the same anchor. In a crash, one anchor may not be strong enough to hold two child safety restraint attachments and may break, causing serious injury or death.


Child Safety

WARNING: Depending on where you secure a child restraint, and depending on the child restraint design, you may block access to certain seatbelt buckle assemblies and LATCH lower anchors, rendering those features potentially unusable. To avoid risk of injury, make sure occupants only use seating positions where they are able to be properly restrained.

WARNING: The center of the rear seat is not designed as a seating position and does not have seatbelts. The LATCH anchors were not designed to be used with a child restraint in the center position and there is no tether anchor available at the center. Do not attempt to use the center as a seating position as this will increase the risk of injury or death in the event of a crash.

The Lower Anchors and Tethers for Children (LATCH) system has three vehicle anchor points:

- Two lower anchors where the vehicle seat backrest and seat cushion meet, called the seat bight.
- One top tether anchor behind that seating position.

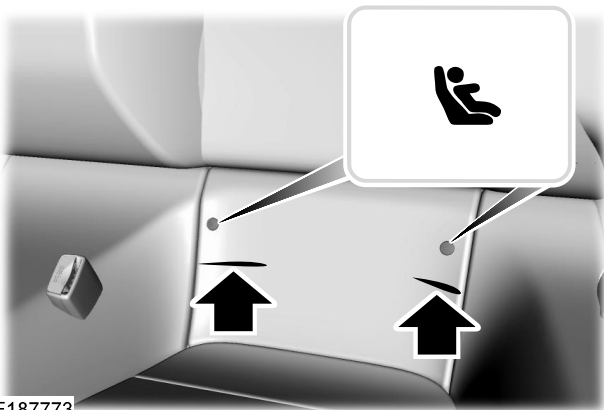

The lower anchors are at the rear section of the rear seat between the cushion and seat backrest.

LATCH compatible child restraints have two rigid or webbing mounted attachments. These attachments connect to the two lower anchors at the LATCH equipped seating positions in your vehicle. This type of attachment method eliminates the need to use seatbelts to attach the child restraint.

However, you can still use the seatbelt to attach the child restraint if the lower anchors are not used. For forward-facing child restraints, you must also attach the top tether strap to the proper top tether anchor if a top tether strap has been provided with your child restraint.

Follow the instructions later in this chapter on attaching child restraints with tether straps.

COMBINING THE SEATBELT AND LOWER ANCHORS FOR ATTACHING CHILD RESTRAINTS

When used in combination, you may attach either the seatbelt or the LATCH lower anchors first, provided a proper installation is achieved. Attach the tether strap afterward, if it is included with the child restraint.

USING TETHER STRAPS

Many forward-facing child restraints include a tether strap which extends from the back of the child restraint and hooks to an anchoring point called the top tether anchor. Tether straps are available as an accessory for many older child restraints.

Child Safety

Contact the manufacturer of your child restraint for information about ordering a tether strap, or to obtain a longer tether strap if the tether strap on your child restraint does not reach the appropriate top tether anchor in the vehicle.



Attach the tether strap only to the appropriate tether anchor. The tether strap may not work properly if attached somewhere other than the correct tether anchor.

If you install a child restraint with rigid LATCH attachments, do not tighten the tether strap enough to lift the child restraint off the vehicle seat cushion when the child is seated in it. Keep the tether strap snug without lifting the front of the child restraint. Keeping the child restraint just touching the vehicle seat gives the best protection in a severe crash.

Once you install the child restraint using either the seatbelt, the lower anchors of the LATCH system, or both, you can attach the tether strap.

For vehicles with a hard top:

1. Route the tether strap over the back of the seat.

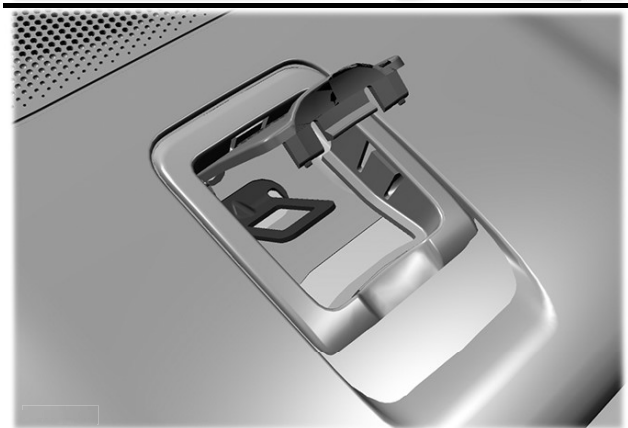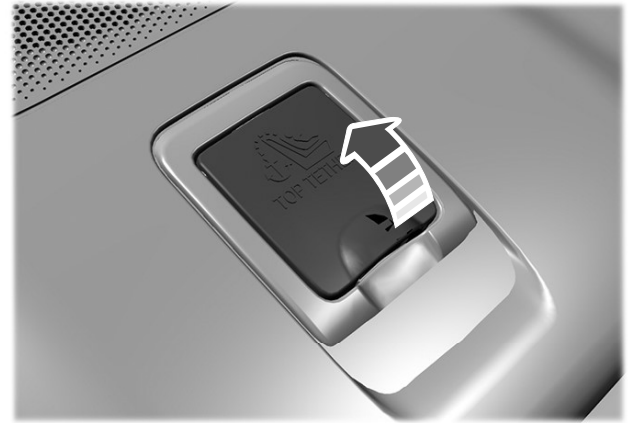

2. Locate the correct anchor for the selected seating position.
3. Open the tether anchor cover.
4. Clip the tether strap to the anchor.
5. Tighten the tether strap according to the manufacturer's instructions.



If your child restraint system has a tether strap, and the child restraint manufacturer recommends its use, we also recommend its use.

For vehicles with a convertible top:

Note: For easier access, attach the tether strap with the convertible top up.

1. Route the tether strap over the top of the seat backrest.

Child Safety

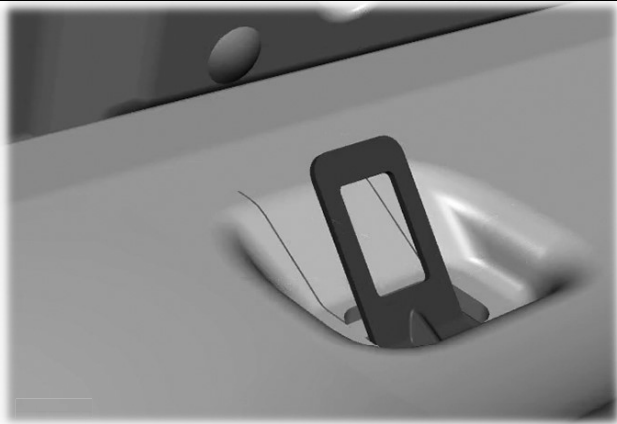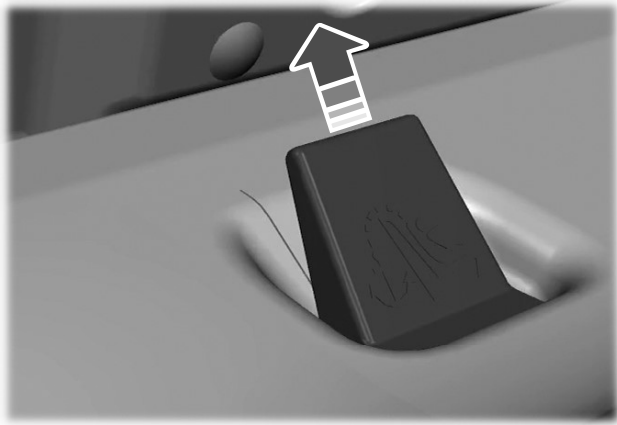

2. Locate the correct anchor for the selected seating position.
3. Remove the tether anchor cap.
4. Clip the tether strap to the anchor.
5. Tighten the tether strap according to the manufacturer's instructions.

If you do not properly anchor the child restraint, the risk of injury to a child greatly increases in a crash.

If your child restraint system has a tether strap, and the child restraint manufacturer recommends its use, we also recommend its use.


BOOSTER SEATS

Use a belt-positioning booster seat for children who have outgrown or no longer properly fit in a child restraint and meet the following criteria.

- Generally children who are less than 57 in (1.45 m) tall.
- Are greater than age four (4) and less than age twelve (12).
- Are between 40 lb (18 kg) and 80 lb (36 kg) and upward to 100 lb (45 kg).

Many state and provincial laws require that children use approved booster seats until they reach age eight, a height of 57 in (1.45 m) tall, or 80 lb (36 kg).

Booster seats should be used until you can answer yes to all of these questions when seated without a booster seat:

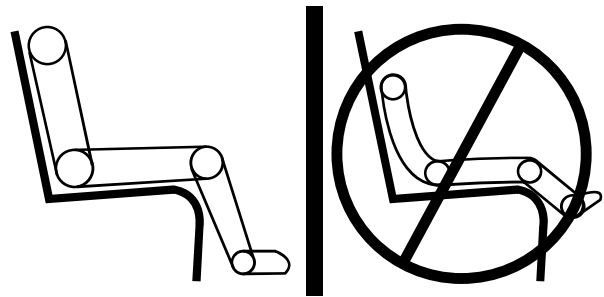

- Can the child sit all the way back against their vehicle seat backrest with knees bent comfortably at the edge of the seat cushion?
- Can the child sit without slouching?
- Does the lap belt rest low across the hips?
- Is the shoulder belt centered on the shoulder and chest?
- Can the child stay seated like this for the whole trip?

Child Safety

Always use booster seats in conjunction with your vehicle lap and shoulder belt.

Types of Booster Seats



- Backless booster seats

If your backless booster seat has a removable shield, remove the shield.

If a vehicle seating position has a low seat backrest or no head restraint, a backless booster seat may place your child's head, as measured at the tops of the ears, above the top of the seat. In this case, move the backless booster to another seating position with a higher seat backrest or head restraint and lap and shoulder belts, or consider using a high-back booster seat.



- High-back booster seats

If, with a backless booster seat, you cannot find a seating position that adequately supports your child's head, a high-back booster seat would be a better choice.

Children and booster seats vary in size and shape. Choose a booster that keeps the lap belt low and snug across the hips, never up across the stomach, and lets you adjust the shoulder belt to cross the chest and rest snugly near the center of the shoulder.

The following drawings compare the ideal fit to a shoulder belt uncomfortably close to the neck and a shoulder belt that could slip off the shoulder. The drawings also show how the lap belt should be low and snug across the child's hips.



Child Safety




If the booster seat slides on the vehicle seat upon which it is being used, placing a rubberized mesh sold as shelf or carpet liner under the booster seat may improve this condition. Do not use any item thicker than this under the booster seat. Check with the booster seat manufacturer's instructions.


Seatbelts


SEATBELT PRECAUTIONS


 **WARNING:** Always drive and ride with your seatback upright and the lap belt snug and low across the hips.


 **WARNING:** Children must always be properly restrained.


 **WARNING:** Do not allow a passenger to hold a child on their lap when your vehicle is moving. Failure to follow this instruction could result in personal injury or death in the event of a sudden stop or crash.


 **WARNING:** All occupants of your vehicle, including the driver, should always properly wear their seatbelts, even when an airbag supplemental restraint system is provided. Failure to properly wear your seatbelt could seriously increase the risk of injury or death.


 **WARNING:** It is extremely dangerous to ride in a cargo area, inside or outside of a vehicle. In a crash, people riding in these areas are more likely to be seriously injured or killed. Do not allow people to ride in any area of your vehicle that is not equipped with seats and seatbelts. Make sure everyone in your vehicle is in a seat and properly using a seatbelt. Failure to follow this warning could result in serious personal injury or death.


 **WARNING:** In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seatbelt.

 **WARNING:** Each seating position in your vehicle has a specific seatbelt assembly made up of one buckle and one tongue designed to be used as a pair. Use the shoulder belt on the outside shoulder only. Never wear the shoulder belt under the arm. Never use a single seatbelt for more than one person.

 **WARNING:** Even with advanced restraints systems, properly restrain children 12 and under in a rear seating position. Failure to follow this could seriously increase the risk of injury or death.

 **WARNING:** Seatbelts and seats may be hot in a vehicle that is in the sunshine. The hot seatbelts or seats may burn a small child. Check seat covers and buckles before you place a child anywhere near them.

 **WARNING:** The center of the rear seat is not designed as a seating position and does not have seatbelts. The LATCH anchors were not designed to be used with a child restraint in the center position and there is no tether anchor available at the center. Do not attempt to use the center as a seating position as this will increase the risk of injury or death in the event of a crash.

 **WARNING:** If your vehicle is involved in a crash, have the seatbelts and associated components inspected as soon as possible. Failure to follow this instruction could result in personal injury or death.

All seating positions in this vehicle have lap and shoulder seatbelts. All occupants of the vehicle should properly wear their seatbelts, even when an airbag supplemental restraint system is provided.

Seatbelts

The seatbelt system consists of:

- Lap and shoulder seatbelts.
- Seatbelt pretensioners at the front and rear seating positions.
- Belt tension sensor at the front passenger seating position.



A seatbelt warning light and chime.



Crash sensors and monitoring system with a readiness indicator.

The seatbelt pretensioners are designed to tighten the seatbelts when activated. In frontal and near-frontal crashes, the seatbelt pretensioners may be activated alone or, if the crash is of sufficient severity, together with the front airbags. The pretensioners may also activate in side impacts and rollovers.

FASTENING AND UNFASTENING THE SEATBELTS




WARNING: Make sure that the seatbelts are securely stowed away when not in use and not outside your vehicle when closing the doors.




WARNING: Accessory seat covers not released by Ford Motor Company could prevent the seatbelt from retracting correctly. This could cause the seatbelt to become slack which could increase the risk of injuries in a crash.

A web guide is included on the outermost side of the front seats. Depending on occupant size and seating position, you may need to route the belt through the guide for a proper fit. If the seatbelt does not route across the middle of the shoulder, route the belt through the web guide.

Convertible

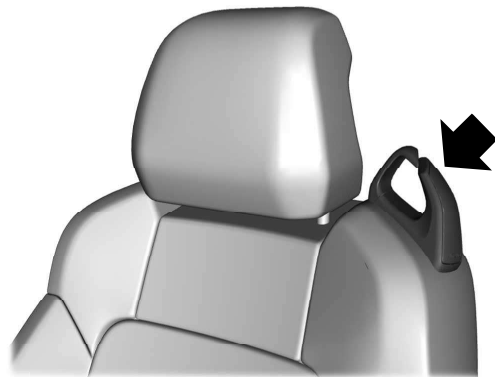


Coupe


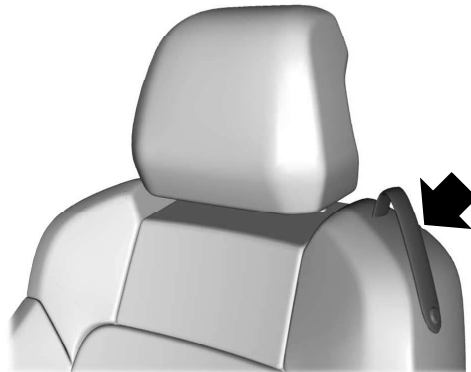


Seatbelts

Recaro

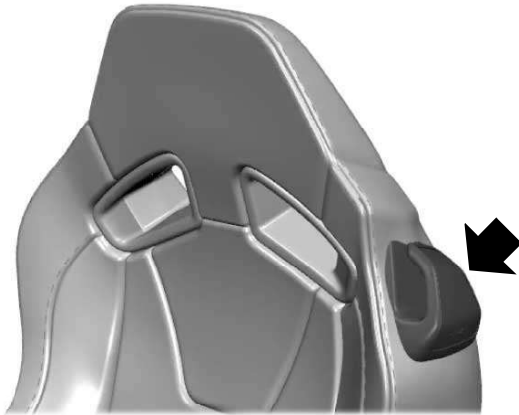

All seatbelts in your vehicle are three-point combination lap and shoulder seatbelts.

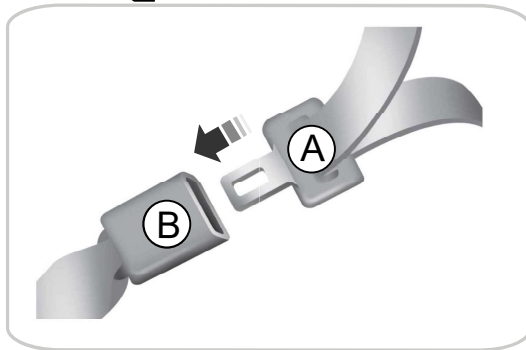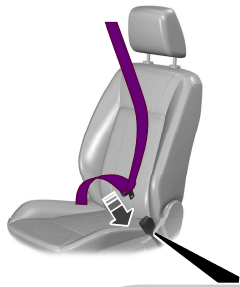


- A Seatbelt tongue.
- B Seatbelt buckle.

1. Pull the seatbelt out steadily.

Note: *It may lock if you pull it sharply or if the vehicle is on a slope.*

2. Insert the tongue into the buckle.
3. Pull the seatbelt tight to remove any slack.

Rear Seats

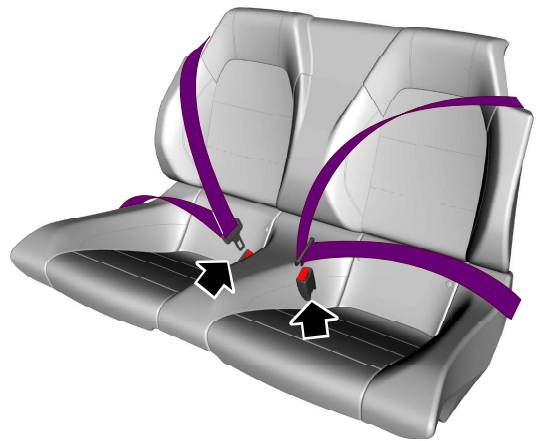

Unfastening the Seatbelts

1. Press the red button on the buckle to release the seatbelt.
2. Hold the seatbelt tongue and let it retract completely and smoothly to its stowed position.

SENSITIVE LOCKING MODE

WHAT IS SENSITIVE LOCKING MODE

Sensitive locking mode is a seatbelt retractor feature that allows shoulder belt length adjustment according to your movements and locking in response to vehicle movement.

HOW DOES SENSITIVE LOCKING MODE WORK

If the driver suddenly brakes, turns a corner sharply, or the vehicle receives an impact of about 5 mph (8 km/h) or more, the seatbelts lock to help reduce forward movement of the driver and passengers.

Seatbelts

In addition, the seatbelt retractor locks if you pull the seatbelt webbing out too quickly. If the retractor locks, slowly lower the height adjuster to allow the seatbelt to retract.

If the retractor does not unlock, pull the seatbelt out slowly then feed a small length of webbing back toward the stowed position.

AUTOMATIC LOCKING MODE

WHAT IS AUTOMATIC LOCKING MODE

This is a safety feature built into the seatbelt retractors that keeps the seatbelts pre-locked.

WHEN TO USE AUTOMATIC LOCKING MODE

Use this mode any time you install a child restraint in a front outermost passenger seating position or any rear seating position. Properly restrain children 12 years old and under in a rear seat whenever possible.

Note: *Automatic locking mode is not available on the driver seatbelt.*

ENGAGING AUTOMATIC LOCKING MODE



1. Fasten the combination lap and shoulder belt.
2. Grasp the shoulder portion and pull downward until you pull the entire belt out.
3. Allow the belt to retract. As the belt retracts, you will hear a clicking sound. This indicates the seatbelt is now in the automatic locking mode.

DISENGAGING AUTOMATIC LOCKING MODE


Unbuckle the combination lap and shoulder belt and allow it to retract completely to disengage the automatic locking mode and activate the vehicle sensitive locking mode.

Seatbelts

ADJUSTING THE SEATBELTS DURING PREGNANCY



WARNING: Always ride and drive with your seatback upright and properly fasten your seatbelt. Fit the lap portion of the seatbelt snugly and low across the hips. Position the shoulder portion of the seatbelt across your chest. Pregnant women must follow this practice. See the following figure.

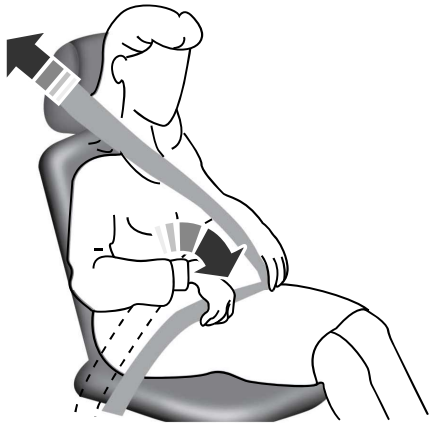

Pregnant women should always wear their seatbelt. Position the lap belt portion of a combination lap and shoulder belt low across the hips below the belly and worn as tight as comfort allows. Position the shoulder belt to cross the middle of the shoulder and the center of the chest.

SEATBELT REMINDER

HOW DOES THE SEATBELT REMINDER WORK



WARNING: The system will only provide protection when you use the seatbelt correctly.

This system monitors all seating positions and provides audio and graphic feedback.

SEATBELT REMINDER INDICATORS




This lamp illuminates if you do not fasten your seatbelt when you switch the power on. The lamp switches off when you fasten your seatbelt or about one minute has elapsed.

When the initial warning expires for the driver, the system provides more warnings for the driver and front passenger. This lamp illuminates if you or your front passenger do not fasten the seatbelt buckle and the vehicle speed exceeds 6 mph (9.7 km/h).

Note: To avoid inadvertent warnings, do not place large objects on the front passenger seat.



This lamp illuminates when you switch the power on, identifying the number of seating positions with fastened buckles. It illuminates again when a seating position changes from unfastened to fastened.

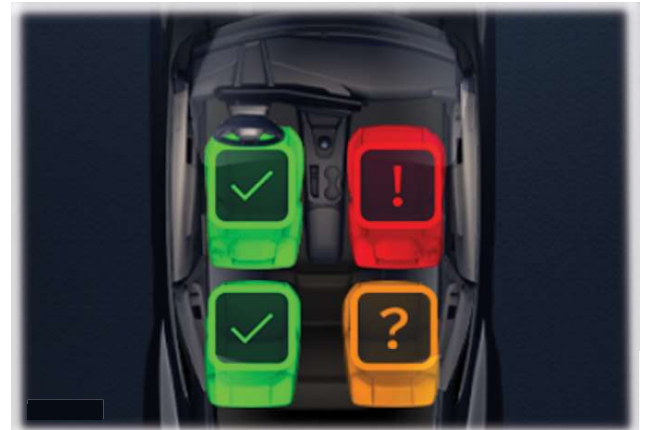

This warning displays if an occupant unfastens a seatbelt buckle or it becomes unfastened.


Seatbelts

Note: If a rear seat is unoccupied, or an occupant never fastens the seatbelt buckle to begin with, the warning will not display.

Note: Front seating positions appear in this warning display. Warnings for unfastened front seatbelt buckles appear in the initial warning lamp.

Checking Seatbelt Status

To view the seatbelt status, use the touchscreen.

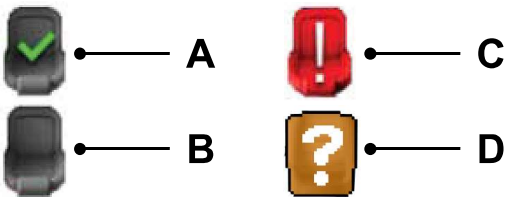

- A Seatbelt fastened.
- B Seatbelt not fastened.
- C Seatbelt recently unfastened.
- D Fault.

SEATBELT REMINDER AUDIBLE WARNINGS

A warning tone sounds if you do not fasten your seatbelt when you switch the power on. The tone switches off when you fasten your seatbelt or about one minute elapses.

When the initial warning expires for the driver, more warnings are provided for the driver and front passenger. This warning tone sounds if you or your front passenger do not fasten the seatbelt buckle and the vehicle speed exceeds 6 mph (9.7 km/h).

This tone also sounds if an occupant unfastens the rear seatbelt buckle or it becomes unfastened.

SWITCHING THE SEATBELT REMINDER ON AND OFF



WARNING: While the system allows you to deactivate it, this system is designed to improve your chances of being safely belted and surviving an accident. We recommend you leave the system activated for yourself and others who may use the vehicle.

Note: The driver and front passenger warnings independently switch off. When you perform this procedure for one seating position, do not buckle the other position as this cancels the process.

Note: If you are using MyKey, you cannot disable the seatbelt reminder. If the seatbelt reminder has been previously disabled, it is re-enabled during the use of MyKey.

Read Steps 1-4 before proceeding with the programming procedure.

Make sure that:

- The parking brake is set.
- The transmission is in park (P).
- The power is off.

Seatbelts

- You close all vehicle doors.
 - The driver and front passenger seatbelts are unfastened.
1. Switch the power on. Do not start your vehicle.
 2. Wait about one minute until the seatbelt warning light switches off. After Step 2, wait an additional five seconds before proceeding with Step 3. Once you start Step 3, complete the procedure within 30 seconds.
 3. For the seating position you are switching off, buckle then unbuckle the seatbelt three times at a moderate speed, ending in the unbuckled state. After Step 3, the seatbelt warning light switches on.
 4. When the seatbelt warning light is on, buckle then unbuckle the seatbelt. After Step 4, the seatbelt warning light flashes for confirmation.

This switches the feature off for that seating position if it is currently on.

This switches the feature on for that seating position if it is currently off.

CHECKING THE SEATBELTS

Check the seatbelts and child restraints periodically to make sure they work properly and are not damaged. Make sure there are no nicks, tears or cuts. Replace if necessary.

Check all of the following seatbelt assemblies after a crash.

- Retractors.
- Buckles.
- Front seatbelt buckle assemblies.
- Shoulder belt guide on seat backrest.
- Child restraint anchors and top tethers.
- Attaching hardware.

Read the child restraint manufacturer's instructions for additional inspection and maintenance information specific to the child restraint.

We recommend that all seatbelt assemblies in use in vehicles involved in a crash be replaced. However, if the crash was minor and an authorized dealer finds that the belts do not show damage and continue to operate properly, they do not need to be replaced. Seatbelt assemblies not in use during a crash should also be checked and replaced if either damage or improper operation is noted.

Properly care for seatbelts. See **Vehicle Care** (page 318).

SEATBELT EXTENSIONS



WARNING: Persons who fit into the vehicle's seatbelt should not use an extension. Unnecessary use could result in serious personal injury in the event of a crash.



WARNING: Only use extensions provided free of charge by our dealers. The dealer will provide an extension designed specifically for this vehicle, model year and seating position. The use of an extension intended for another vehicle, model year or seating position may not offer you the full protection of your vehicle's seatbelt restraint system.



WARNING: Never use seatbelt extensions to install child restraints.



WARNING: Do not use extensions to change the way the seatbelt fits across the torso, over the lap or to make the seatbelt buckle easier to reach.

Seatbelts

If, because of body size or driving position, it is not possible to properly fasten the seatbelt over your lap and shoulder, an extension that is compatible with the seatbelts is available free of charge from our dealers. Only use our seatbelt extensions made by the original equipment seatbelt manufacturer with our seatbelts. Ask your authorized dealer if your extension is compatible with your vehicle restraint system.

Personal Safety System™

WHAT IS THE PERSONAL SAFETY SYSTEM

An advanced safety system that protects occupants in frontal crashes.

HOW DOES THE PERSONAL SAFETY SYSTEM WORK


This system provides an improved level of frontal crash protection to front seat occupants and is designed to reduce the risk of airbag-related injuries. The system analyzes occupant conditions and crash severity before activating the appropriate safety devices. During a crash, the restraints control module may deploy the seatbelt pretensioners, and one or both stages of the dual-stage airbags based on crash severity and occupant conditions.

PERSONAL SAFETY SYSTEM COMPONENTS

- Driver and passenger dual-stage airbag supplemental restraints.
- Front seat outermost seatbelts with pretensioners, energy management retractors and seatbelt usage sensors.
- Front passenger sensing system.
- Passenger airbag off and on indicators.
- Front crash severity sensors.
- Restraints control module with impact and safing sensors.
- Restraint system warning light and tone.
- The electrical wiring for the airbags, crash sensors, seatbelt pretensioners, front seatbelt usage sensors, front passenger sensing system and indicator lights.

Airbags

HOW DO THE FRONT AIRBAGS WORK

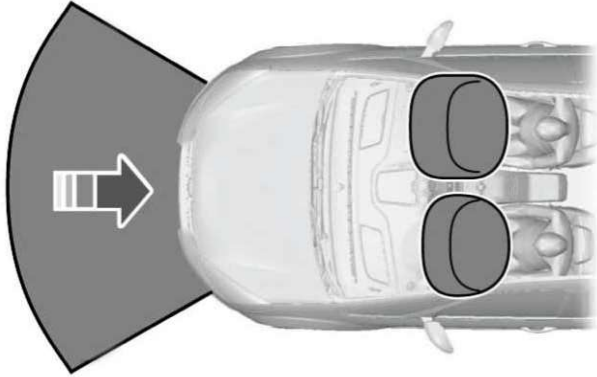

The driver and front passenger airbags deploy during significant frontal and near frontal crashes.

The driver and passenger front airbag system consists of:

- Driver and passenger airbag modules.
- Front passenger sensing system.
- Crash sensors and monitoring system with readiness indicator. See **Crash Sensors and Airbag Indicator** (page 67).

The airbags are a supplemental restraint system and are designed to work with the seatbelts to help protect the driver and right front passenger from certain upper body injuries. Airbags do not inflate slowly; there is a risk of injury from a deploying airbag.

Note: *You will hear a loud bang and see a cloud of harmless powdery residue if an airbag deploys. This is normal.*

The airbags inflate and deflate rapidly upon activation. After airbag deployment, it is normal to notice a smoke-like, powdery residue or smell the burnt propellant. This may consist of cornstarch, talcum powder (to lubricate the bag) or sodium

compounds (for example, baking soda) that result from the combustion process that inflates the airbag. Small amounts of sodium hydroxide may be present which may irritate the skin and eyes, but none of the residue is toxic.

Contact with a deploying airbag may cause abrasions or swelling. Temporary hearing loss is also a possibility as a result of the noise associated with a deploying airbag.

Because airbags must inflate rapidly and with considerable force, there is the risk of death or serious injuries such as fractures, facial and eye injuries or internal injuries, particularly to occupants who are not properly restrained or are otherwise out of position at the time of airbag deployment. Thus, it is extremely important that occupants be properly restrained as far away from the airbag module as possible.

Routine maintenance of the airbags is not required.

HOW DO THE SIDE AIRBAGS WORK



WARNING: Do not place objects or mount equipment on or near the airbag cover, on the side of the front or rear seatbacks, or in areas that may come into contact with a deploying airbag. Failure to follow these instructions may increase the risk of personal injury in the event of a crash.



WARNING: Accessory seat covers not released by Ford Motor Company could prevent the deployment of the airbags and increase the risk of injuries in a crash.

Airbags



WARNING: Do not lean your head on the door. The side airbag could injure you as it deploys from the side of the seatback.

The side airbags are on the outermost side of the front seat backrests. In certain sideways crashes or rollovers, the airbags inflate. The airbag was designed to inflate between the door panel and occupant to further enhance the protection provided occupants in side impact crashes.

Coupe



Convertible



E174777

The system consists of:

- A label or embossed side panel indicating that your vehicle has side airbags.
- Side airbags inside the driver and front passenger seat backrests.
- Crash sensors and monitoring system with a readiness indicator. See **Crash Sensors and Airbag Indicator** (page 67).

Note: For some models, the passenger sensing system deactivates the passenger seat-mounted side airbag if it detects an empty passenger seat.

HOW DO THE KNEE AIRBAGS WORK



WARNING: To reduce risk of injury, do not obstruct or place objects in the deployment path of the airbag.



WARNING: Close the glove box door when your vehicle is moving. Failure to follow this instruction could reduce the effectiveness of the passenger knee airbag and increase the risk of injury in a crash.

A driver knee airbag is under or within the instrument panel. A passenger knee airbag is within or under the glove compartment.

During a crash, the restraints control module may activate the driver and passenger knee airbags based on crash severity and occupant conditions. Under certain crash and occupant conditions, the driver and passenger knee airbag may deploy but the driver front airbag may not activate.

Airbags

As with front and side airbags, it is important to be properly seated and restrained to reduce the risk of death or serious injury.



Make sure the knee airbag is operating properly. See **Crash Sensors and Airbag Indicator** (page 67).

HOW DOES THE SAFETY CANOPY™ WORK - COUPE



WARNING: Do not place objects or mount equipment on or near the headliner at the siderail that may come into contact with a deploying curtain airbag. Failure to follow these instructions may increase the risk of personal injury in the event of a crash.




WARNING: Do not lean your head on the door. The curtain airbag could injure you as it deploys from the headliner.



WARNING: All occupants of your vehicle, including the driver, should always properly wear their seatbelts, even when an airbag supplemental restraint system is provided. Failure to properly wear your seatbelt could seriously increase the risk of injury or death.

The Safety Canopy deploys during significant side crashes or when a certain likelihood of a rollover event is detected by the rollover sensor. The Safety Canopy is mounted to the roof side rail sheet metal, behind the headliner, above each row of seats.

In certain sideways crashes or rollover events, the Safety Canopy activates, regardless of which seats are occupied. The Safety Canopy is designed to inflate between the side window area and occupants to further enhance protection provided in side impact crashes and rollover events.

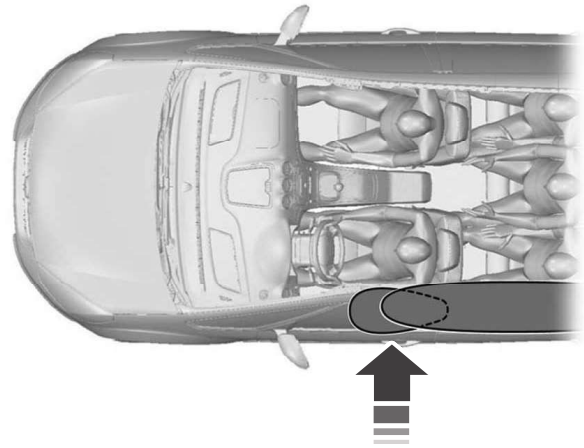


The system consists of:


- Safety Canopy curtain airbags above the trim panels over the front and rear side windows. They are identified by a label or wording on the headliner or roof pillar trim.
- A flexible headliner which opens above the side doors to allow air curtain deployment
- Crash sensors and monitoring system with a readiness indicator. See **Crash Sensors and Airbag Indicator** (page 67).


Properly restrain children 12 years old and under in the rear seats. The Safety Canopy airbags will not interfere with children restrained using a properly installed child or booster seat because it is designed to inflate downward from the headliner above the doors along the side window opening.


Airbags


AIRBAG PRECAUTIONS


 **WARNING:** Airbags do not inflate slowly or gently, and the risk of injury from a deploying airbag is the greatest close to the trim covering the airbag module.


 **WARNING:** All occupants of your vehicle, including the driver, should always properly wear their seatbelts, even when an airbag supplemental restraint system is provided. Failure to properly wear your seatbelt could seriously increase the risk of injury or death.


 **WARNING:** Properly secure children 12 years old and under in a rear seating position whenever possible. If you are unable to properly secure all children in a rear seating position, properly secure the largest child on the front seat. If you must use a forward facing child restraint on the front seat, move the seat as far back as possible. Failure to follow these instructions could result in personal injury or death.


 **WARNING:** Do not place your arms on the airbag cover or through the steering wheel. Failure to follow this instruction could result in personal injury.


 **WARNING:** Keep the areas in front of the airbags free from obstruction. Do not affix anything to or over the airbag covers. Objects could become projectiles during airbag deployment. Failure to follow this instruction could result in personal injury or death.

 **WARNING:** To reduce risk of injury, do not obstruct or place objects in the deployment path of the airbag.


 **WARNING:** Do not place a rearward facing child restraint in front of an active airbag. Failure to follow this instruction could result in personal injury or death.

 **WARNING:** Do not attempt to service, repair, or modify the supplementary restraint system or associated components. Failure to follow this instruction could result in personal injury or death.

 **WARNING:** Several airbag system components get hot after inflation. To reduce the risk of injury, do not touch them after inflation.

 **WARNING:** If a supplementary restraint system component has deployed, it will not function again. Have the system and associated components inspected as soon as possible. Failure to follow this instruction could result in personal injury or death.

PROPERLY ADJUSTING THE DRIVER AND FRONT PASSENGER SEATS

 **WARNING:** National Highway Traffic Safety Administration (NHTSA) recommends a minimum distance of at least 10 in (25 cm) between an occupant's chest and the driver airbag module.

Airbags

To properly position yourself away from the airbag:

- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Recline the seat slightly one or two degrees from the upright position.

After all occupants have adjusted their seats and put on seatbelts, it is very important that they continue to sit properly. Properly seated occupants sit upright, lean against the seat backrest, and center themselves on the seat cushion, with their feet comfortably extended on the floor. Sitting improperly can increase the chance of injury in a crash event. For example, if an occupant slouches, lies down, turns sideways, sits forward, leans forward or sideways, or puts one or both feet up, the chance of injury during a crash greatly increases.

CHILDREN AND AIRBAGS



WARNING: Do not place a rearward facing child restraint in front of an active airbag. Failure to follow this instruction could result in personal injury or death.



Children must always be properly restrained. Accident statistics suggest that children are safer when properly restrained in the rear seating positions than in the front seating position. Failure to follow these instructions may increase the risk of injury in a crash.

FRONT PASSENGER SENSING SYSTEM

WHAT IS THE FRONT PASSENGER SENSING SYSTEM

This system detects a properly seated occupant and determines if the front passenger airbag should be enabled.

HOW DOES THE FRONT PASSENGER SENSING SYSTEM WORK

The system uses a passenger airbag status indicator which illuminates indicating that the front passenger frontal airbag is either enabled or disabled.

Note: When you first switch the power on, the passenger airbag status indicator off and on lamps illuminate for a short period to confirm they are functional.



The indicators are in the center of the instrument panel.

Airbags

The front passenger sensing system is designed to disable the front passenger frontal airbag under these conditions:

- The front passenger seat is unoccupied.
- The system determines an infant is present in a child restraint.
- A passenger takes their weight off of the seat for a period of time.
- If there is a problem with the airbag system or the passenger sensing system.

Note: *Even with this technology, parents are strongly encouraged to always properly restrain children in the rear seat.*

- When the front passenger sensing system disables the front passenger frontal airbag, the passenger airbag status indicator illuminates the off lamp.
- If you have installed the child restraint and the passenger airbag status indicator illuminates the on lamp, switch your vehicle off, remove the child restraint from your vehicle and reinstall the restraint following the child restraint manufacturer's instructions.

The front passenger sensing system works with sensors that are part of the front passenger seat and seatbelt. The sensors are designed to detect the presence of a properly seated occupant and determine if the front passenger frontal airbag should be enabled.

- When the front passenger sensing system enables the front passenger frontal airbag, the passenger airbag status indicator illuminates the on lamp.

If a person of adult size is sitting in the front passenger seat, but the passenger airbag status indicator off lamp is illuminated, it is possible that the person is not sitting properly in the seat. If this happens:

- Switch your vehicle off and ask the person to place the seat backrest in an upright position.
- Have the person sit upright in the seat, centered on the seat cushion, with the person's legs comfortably extended.
- Restart your vehicle and have the person remain in this position for about two minutes. This allows the system to detect that person and enable the passenger frontal airbag.
- If the indicator off lamp remains illuminated even after this, you should advise the person to ride in the rear seat.

After all occupants have adjusted their seats and put on seatbelts, it is very important that they continue to sit upright, leaning against the seat backrest, and centered on the seat cushion, with their feet comfortably extended on the floor.

Sitting improperly can increase the chance of injury in a crash event. For example, if an occupant slouches, lies down, turns sideways, sits forward, leans forward or sideways, or puts one or both feet up, the chance of injury during a crash greatly increases.

If you think that the state of the passenger airbag status indicator lamp is incorrect, check for the following:

- Objects lodged underneath the seat.
- Objects between the seat cushion and the center console.
- Objects hanging off the seat backrest.
- Objects stowed in the seat backrest map pocket.
- Objects placed on the occupant's lap.

Airbags

- Cargo interference with the seat
- Other passengers pushing or pulling on the seat.
- Rear passenger feet and knees resting or pushing on the seat.

The listed conditions could cause the weight of a properly seated occupant to be incorrectly interpreted by the front passenger sensing system. The person in the front passenger seat could appear heavier or lighter due to the conditions listed.



Make sure the front passenger sensing system is operating properly. See **Crash Sensors and Airbag Indicator** (page 67).

If the airbag readiness light is on, do the following:

- Pull your vehicle over.
- Switch your vehicle off.
- Check for any objects lodged underneath the front passenger seat or cargo interfering with the seat.
- Remove the obstruction if found.
- Restart your vehicle.
- Wait at least two minutes and verify that the airbag readiness light in the instrument cluster is no longer illuminated.
- If the airbag readiness light in the instrument cluster remains illuminated, there may be a problem due to the front passenger sensing system.

Do not attempt to repair or service the system. Take your vehicle in for service immediately.

If it is necessary to modify an advanced front airbag system to accommodate a person with disabilities, contact your Customer Relationship Center.

FRONT PASSENGER SENSING SYSTEM PRECAUTIONS



WARNING: Sitting improperly, out of position or with the seatback reclined too far can take weight off the seat cushion and affect the decision of the passenger sensing system, resulting in serious injury or death in the event of a crash. Always sit upright against your seat back, with your feet on the floor.



WARNING: Any alteration or modification to the front passenger seat may affect the performance of the front passenger sensing system. This could seriously increase the risk of injury or death.



WARNING: Do not place objects under the front passenger seat or between the seat and the center console. Failure to follow this instruction may interfere with the front passenger seat sensing system and increase the risk of injury or death in a crash.



WARNING: Check the passenger airbag indicator lamp for proper airbag status. Failure to follow this instruction could result in personal injury or death.

Airbags

FRONT PASSENGER SENSING SYSTEM INDICATORS

Occupant	Passenger Airbag Status Indicator	Passenger Airbag
Empty	OFF: Illuminated	Disabled
	ON: Not Illuminated	
Child	OFF: Illuminated	Disabled
	ON: Not Illuminated	
Adult	OFF: Not Illuminated	Enabled
	ON: Illuminated	

CRASH SENSORS AND AIRBAG INDICATOR



WARNING: Modifying or adding equipment to the front of your vehicle could affect the performance of the airbag system, increasing the risk of injury. This includes the hood, bumper system, frame, front body structure, tow hooks, hood pins, push bar and snowplows.

Your vehicle has a collection of crash and occupant sensors. These sensors provide information to the restraints control module which activates the following:

- Front seatbelt pretensioners.
- Driver airbag.
- Passenger airbag.
- Knee airbag(s).
- Seat mounted side airbags.
- Adaptive steering column.
- Safety Canopy airbags.

Based on the type of crash, the restraints control module deploys the appropriate safety devices.

The restraints control module also monitors the readiness of the above safety devices plus the crash and occupant sensors. The safety system displays an indicator in the instrument cluster when it is ready. The system sends out a tone as a backup if it is not working. The airbag does not require routine maintenance.

One or more of the following may indicate a system issue:



The readiness light does not immediately illuminate after you switch the power on.

- The readiness light either flashes or stays on.
- You hear a series of five tones. The tone pattern periodically repeats until the problem, the light or both are repaired.

If any of these things happen, even intermittently, have the supplemental restraint system immediately serviced. Unless serviced, the system may not properly function in the event of a crash.

Airbags

The fact that the seatbelt pretensioners or front airbags did not activate for both front seat occupants in a crash does not mean that something is wrong with the system. Rather, it means the restraints control module determined the accident conditions (crash severity, seatbelt usage) were not appropriate to activate these safety devices.

- The front airbags activate only in frontal and near-frontal crashes. The front airbags may activate in rollovers, side impacts or rear impacts if the crash causes sufficient frontal deceleration.
- The seatbelt pretensioners activate in frontal, near-frontal and side crashes, and in rollovers.
- The knee airbag deploys based on crash severity and occupant conditions.
- The side airbags inflate in certain side impact crashes or rollover events. Side airbags may activate in other types of crashes if the vehicle experiences sufficient sideways motion or deformation.
- The Safety Canopy inflates in certain side impact crashes or rollover events. The Safety Canopy may activate in other types of crashes if the vehicle experiences sufficient sideways motion or deformation, or a certain likelihood of rollover.

DISPOSING OF AIRBAGS

Contact your authorized dealer as soon as possible. Airbags must be disposed of by qualified personnel.

911 Assist

WHAT IS 911 ASSIST

911 Assist is a SYNC system feature that can call for help.

For more information, visit www.owner.ford.com.

HOW DOES 911 ASSIST WORK

If a crash deploys an airbag, excluding knee airbags and rear inflatable seatbelts, or activates the fuel pump shut-off, your vehicle may be able to contact emergency services by dialing 911 through a paired and connected **Bluetooth®** enabled phone.

Not all crashes deploy an airbag or activate the fuel pump shut-off. If a connected cell phone sustains damage or loses its connection to SYNC during a crash, SYNC searches for and tries to connect to a previously paired cell phone. SYNC then attempts to call the emergency services.

Before making the call:

- SYNC provides about 10 seconds to cancel the call. If you fail to cancel the call, SYNC attempts to dial 911.
- SYNC says the following, or a similar message: SYNC will attempt to call 911, to cancel the call, press Cancel on your screen or press and hold the phone button on your steering wheel.

If you do not cancel the call and SYNC makes a successful call a pre-recorded message plays for the 911 operator. The occupants in your vehicle are able to talk with the operator. Be prepared to provide your name, phone number and location immediately because not all 911 systems are capable of receiving this information electronically.

During an emergency call the system transmits vehicle data to the emergency service.

EMERGENCY CALL REQUIREMENTS



WARNING: Do not wait for 911 Assist to make an emergency call if you can do it yourself. Dial emergency services immediately to avoid delayed response time which could increase the risk of serious injury or death after a crash. If you do not hear 911 Assist within five seconds of the crash, the system or phone may be damaged or non-functional.



WARNING: Always place your phone in a secure location in your vehicle so it does not become a projectile or get damaged in a crash. Failure to do so may cause serious injury to someone or damage the phone which could prevent 911 Assist from working properly.



WARNING: Unless the 911 Assist setting is set on before a crash, the system will not dial for help which could delay response time, potentially increasing the risk of serious injury or death after a crash.

- SYNC is powered and working properly at the time of the incident and throughout feature activation and use.
- The 911 Assist feature must be set on before the incident.
- You must pair and connect a **Bluetooth®** enabled and compatible cell phone to SYNC.
- A connected **Bluetooth®** enabled phone must have the ability to make and maintain an outgoing call at the time of the incident.

911 Assist

- A connected **Bluetooth**® enabled phone must have adequate network coverage, battery power and signal strength.
- The vehicle must have battery power and be located in the U.S., Canada or in a territory in which 911 is the emergency number.

Note: *If any user sets 911 Assist to on or off, that setting applies for all paired phones. If 911 Assist is off and the phone connected to SYNC, an icon displays on the status bar.*

Note: *Every phone operates differently. While SYNC 911 Assist works with most cellular phones, some may have trouble using this feature.*

EMERGENCY CALL LIMITATIONS

The SYNC 911 Assist feature only operates in the U.S., Canada or in a territory in which 911 is the emergency number. The following are limitations of this feature:

- Your cellular phone or 911 Assist hardware sustains damage in a crash.
- The vehicle's battery or the SYNC system has no power.
- The phone(s) thrown from your vehicle are the ones paired and connected to the system.

Keys and Remote Controls

REMOTE CONTROL LIMITATIONS



WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Make sure a valid remote control is within 3 ft (1 m) from the front door handles and rear of vehicle.

The system may not function if:

- The remote control remains stationary for about a minute.
- The vehicle battery has no charge.
- The remote control battery has no charge.
- There is interference causing issues with the remote control frequencies.
- The remote control is too close to metal objects or electronic devices, for example keys or a cell phone.

USING THE REMOTE CONTROL



WARNING: Do not leave a key or remote control unattended in the vehicle. Children or pets could operate the power windows, moonroof or other controls. Failure to follow this instruction could result in personal injury or death.

Use your remote control to access various vehicle systems.

Note: *The buttons on your remote may vary depending on the vehicle region or options.*

One-Stage Unlocking



Press the button to unlock all doors. See **Unlocking and Locking the Doors Using the Remote Control** (page 78).

Two-Stage Unlocking (If Equipped)



Press the button to unlock the driver's door. Press the button again within three seconds to unlock all doors. See **Unlocking and Locking the Doors Using the Remote Control** (page 78).

Lock



Press the button to lock all doors. See **Unlocking and Locking the Doors Using the Remote Control** (page 78).

Panic Alarm (If Equipped)



Press the button to sound the panic alarm. See **Sounding the Panic Alarm** (page 72).

Keys and Remote Controls

Remote Start (If Equipped)



Press the button to remote start. See **Remotely Starting and Stopping the Vehicle** (page 117).

Luggage Compartment



Press the button twice to open the luggage compartment.

REMOVING THE KEY BLADE



Push the release button on your passive key and pull the key blade out.

SOUNDING THE PANIC ALARM



Press the button to sound the panic alarm. Press the button again or switch the vehicle on to turn it off.

Note: *The panic alarm only operates when the vehicle is off.*

LOCATING YOUR VEHICLE



Press the lock button twice within three seconds. The turn signal lamps flash. We recommend you use this method to locate your vehicle.

CHANGING THE REMOTE CONTROL BATTERY



WARNING: Keep batteries away from children to prevent ingestion. Failure to follow this instruction could result in personal injury or death. If ingested, immediately seek medical attention.





WARNING: If the battery compartment does not securely close, stop using the remote control and replace it as soon as possible. In the meantime, keep the remote control away from children. Failure to follow this instruction could result in personal injury or death.

The remote control uses one coin-type 3-volt lithium battery, CR2450, or equivalent.

Keys and Remote Controls




1. Push the release button and pull the key blade out.

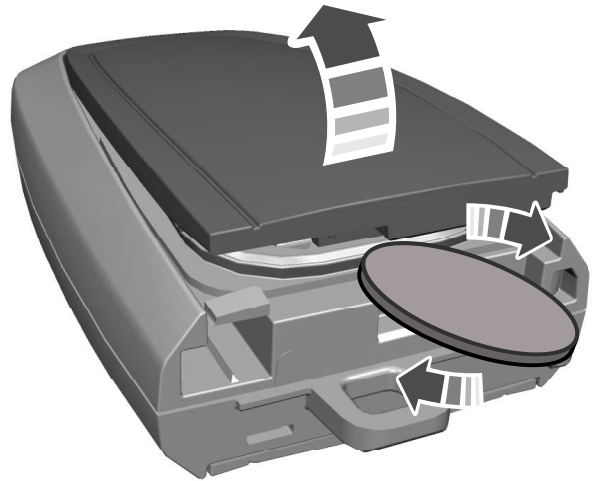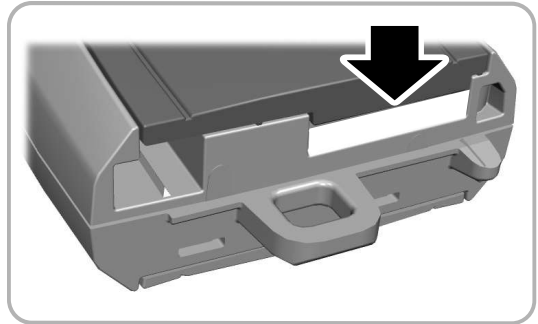

2. Twist a thin coin under the tab hidden behind the key blade head to remove the battery cover.

Keys and Remote Controls

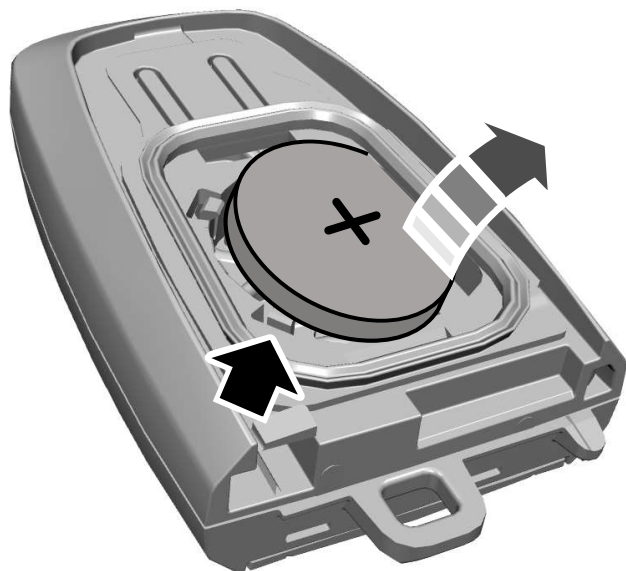

3. Insert a screwdriver in the position shown and carefully remove the battery.
4. Insert a new battery with the + facing upward.
5. Reinstall the battery cover onto the remote control and install the key blade.



Note: Refer to local regulations before you dispose of the remote control batteries.

Note: Do not wipe off any grease on the battery terminals or on the back surface of the circuit board.

Note: Replacing the remote control battery does not erase the programmed key from your vehicle. The remote control operates as normal.

Note: A message appears in the information display when the remote control battery is low.

REPLACING A LOST KEY OR REMOTE CONTROL

You can purchase replacement keys or remote controls from an authorized dealer. Authorized dealers can program remote controls for your vehicle.

PROGRAMMING THE REMOTE CONTROL

General Information

Make sure you are ready with the following before programming the remote control.

- You must have two previously programmed remote controls inside your vehicle. Contact an authorized dealer to have the spare remote control programmed if two previously programmed remotes are not available.
- The new unprogrammed remote controls must be readily accessible.
- Make sure that your vehicle is off.
- Make sure that you close all the doors and that they remain closed throughout the procedure.

Perform all steps within 30 seconds of starting the sequence. Stop and wait for at least one minute before starting again if you perform any steps out of sequence.


Read and understand the entire procedure before you begin.

Note: You can program a maximum of four remote controls to your vehicle.

Keys and Remote Controls

Note: If your programmed remote controls are lost or stolen and you do not have an extra coded remote, you need to have your vehicle towed to an authorized dealer. Store an extra programmed remote away from your vehicle in a safe place to help prevent any inconvenience. Contact an authorized dealer to purchase additional spare or replacement remotes.

Steps for Programming Your Spare Remote Control

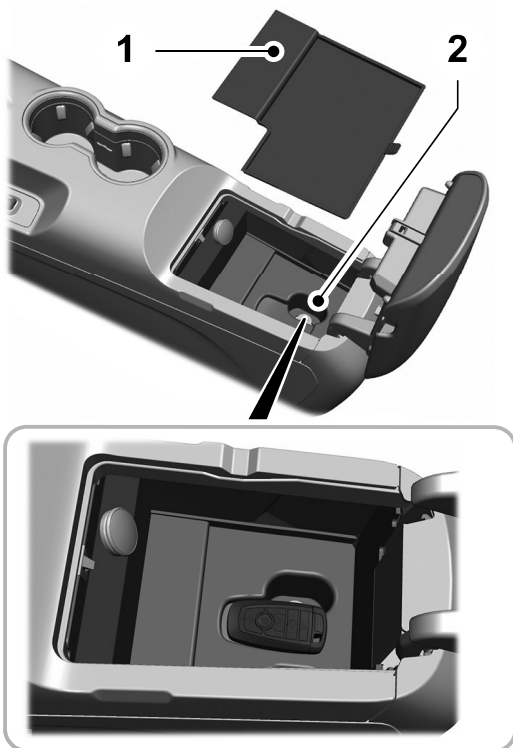

1. Access the backup slot.
2. Place the first programmed remote in the backup slot in the center console with the buttons facing up. With your foot off the brake pedal, press and release the push button ignition switch.
3. Wait five seconds and then press and release the push button ignition switch again.
4. Remove the remote control.

5. Within 10 seconds, place a second programmed remote control in the backup slot. Press and release the push button ignition switch.
6. Wait five seconds and then press and release the push button ignition switch again. Keep the ignition on for at least three seconds, but no more than 10 seconds.
7. Remove the remote control.
8. Place the unprogrammed remote control in the backup slot and press and release the push button ignition switch.

Programming is now complete. With your foot on the brake pedal, press the push button ignition switch to verify the remote control functions operate and your vehicle starts with the new remote control.

If programming was not successful, wait 10 seconds and repeat steps 1 through 7. If you are still unsuccessful, take your vehicle to an authorized dealer.

KEYS AND REMOTE CONTROLS AUDIBLE WARNINGS

Key In Reminder

Sounds when the following conditions are met:

- Vehicle is out of park (P).
- You switch the vehicle off.
- You open the driver's door.
- You have left the key inside the vehicle.

Keys and Remote Controls

REMOTE REV (IF EQUIPPED)

WHAT IS REMOTE REV

Allows you to remotely command engine speed using your remote control to enjoy the engine sound from outside of the vehicle.

REMOTE REV LIMITATIONS

The system does not function, or deactivates, in the following conditions:

- The engine is off.
- The remote control is not working.
- The remote control is out of range.
- The transmission is not in park (P).
- The accelerator or brake pedal is pressed.
- The engine oil temperature is too high or too low.
- The engine coolant temperature is too high or too low.
- The catalytic converter temperature is too high or too low.
- The engine speed is not at stable idle condition.
- The automatic engine shutdown is activated.
- Any system fault is detected.

USING REMOTE REV



WARNING: Do not start the engine in a closed garage or in other enclosed areas. Exhaust fumes are toxic. Always open the garage door before you start the engine. Failure to follow this instruction could result in personal injury or death.

1. Start the engine.

Note: Remote Rev is not available until system reaches optimal temperature after a cold start. For ambient temperatures of 41°F (5°C) and above, it may take up to one minute to reach the appropriate system temperatures to enable the feature. For ambient temperatures lower than 41°F (5°C) the system takes longer to reach the appropriate temperature, depending on the ambient temperature.

- 2.



Press the unlock button on the remote control.

- 3.



Within three seconds, press the lock button on the remote control.

Note: Engine RPM quickly increases to confirm that the feature is enabled.

- 4.



With remote rev enabled, press the unlock button on the remote control.

- 5.



Within three seconds, press the lock button on the remote control.

Note: The engine accelerates strongly.

Note: You can still lock or unlock your vehicle when using the feature.

Note: If your vehicle has active exhaust, it automatically switches to track position to enhance engine sound and feature experience. It returns to the initial position once the feature is disabled.

Keys and Remote Controls

KEYS AND REMOTE CONTROLS – TROUBLESHOOTING

KEYS AND REMOTE CONTROLS – INFORMATION MESSAGES

Message	Action
Key Battery Low Replace Soon	Replace remote control battery.

Doors and Locks

OPERATING THE DOORS FROM OUTSIDE YOUR VEHICLE

UNLOCKING AND LOCKING THE DOORS USING THE REMOTE CONTROL

You can only use the remote control when your vehicle is stationary.

Unlocking the Doors



Press the button to unlock all doors. One long flash of the turn signal lamps confirms that your vehicle has unlocked.

One-Stage Unlocking



Press the button to unlock all doors.

Two-Stage Unlocking (If Equipped)



Press the button to unlock the driver's door. Press the button again within three seconds to unlock all doors.

Locking the Doors




Press the button to lock all doors. One short flash of the turn signal lamps confirms your vehicle is locked.

A tone sounds when you press the lock button twice within three seconds on the remote control confirms your vehicle is locked.

Note: For more information on operating the doors from outside your vehicle See **Keyless Entry** (page 82).

UNLOCKING AND LOCKING THE DOORS USING THE KEY BLADE

If there is a power door lock fault you can use the key blade to lock and unlock the doors.

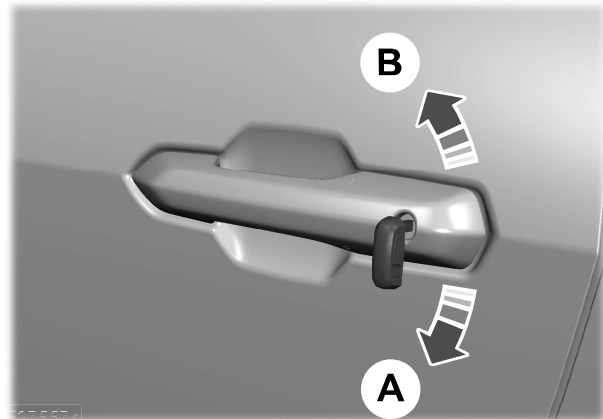

- A Lock.
- B Unlock.

OPERATING THE DOORS FROM INSIDE YOUR VEHICLE

UNLOCKING AND LOCKING THE DOORS USING THE CENTRAL LOCKING

The power door lock control is on the front doors.



Press the button to unlock all doors.



Press the button to lock all doors.

Note: The central locking only operates if the front doors are fully closed.

Doors and Locks

OPENING THE DOORS FROM INSIDE YOUR VEHICLE

Pull the interior door handle to unlock and open a door.

AUTOUNLOCK

WHAT IS AUTOUNLOCK

Autounlock is a feature that centrally unlocks the vehicle doors when your vehicle comes to a stop and you open the driver door.

AUTOUNLOCK REQUIREMENTS

Autounlock unlocks all the doors after:

1. The vehicle speed exceeds 12 mph (20 km/h).
2. Your vehicle comes to a stop.
3. You open the driver door.

Note: *Autounlock operates for only 10 minutes after the ignition is switched off.*

SWITCHING AUTOUNLOCK ON AND OFF

1. Press **Settings** on the touchscreen.
2. Press **Vehicle Settings**.
3. Switch **Autounlock** on or off.

AUTOLOCK

WHAT IS AUTOLOCK

Autolock is a locking feature that centrally locks your vehicle doors when driving.

AUTOLOCK REQUIREMENTS

Autolock locks all the doors after:

1. All doors are closed and the ignition is on.
2. Your vehicle speed exceeds 12 mph (20 km/h).

Autolock repeats if:

1. Your vehicle is stopped.
2. Any door is opened and closed again.
3. Your vehicle speed exceeds 12 mph (20 km/h).

MISLOCK

WHAT IS MISLOCK

Mislock is a locking feature that warns you if your vehicle has not locked.

MISLOCK LIMITATIONS

The turn signals will not flash when you press the lock button once and the hood or any door is open.

If you switch mislock off, the horn does not sound if you press the lock button on the remote control when a door is open.

SWITCHING MISLOCK ON AND OFF

1. Press **Settings** on the touchscreen.
2. Press **Vehicle Settings**.
3. Switch **Mislock Chirp** on or off.

DOORS AND LOCKS AUDIBLE WARNINGS

Door Ajar Audible Warning

Sounds when any front door is not fully closed and your vehicle is moving.

Doors and Locks

DOORS AND LOCKS – TROUBLESHOOTING

DOORS AND LOCKS – WARNING LAMPS

Door Ajar Warning Lamp



Illuminates when you switch the ignition on and remains on if any door or the hood is open.

DOORS AND LOCKS – INFORMATION MESSAGES

Message	Details
Driver Door Ajar	Displays if a door is open. Fully close the door.
Passenger Door Ajar	
Rear Left Door Ajar	
Rear Right Door Ajar	
Hood Ajar	Displays if a hood is open. Fully close the hood.

Doors and Locks

DOORS AND LOCKS – FREQUENTLY ASKED QUESTIONS

Can accessories such as steps or handles be used with the latch assembly?

- Do not use the door latch assembly to attach any accessory, such as handles or steps, as this can cause damage to your vehicle.

Keyless Entry

KEYLESS ENTRY LIMITATIONS


Make sure your remote control is within 3 ft (1 m) from the front door handles and the luggage compartment.

The system could not function if:

- The remote control remains stationary for about a minute.
- The vehicle battery has no charge.
- The remote control battery has no charge.
- There is interference causing issues with the remote control frequencies.
- The remote control is too close to metal objects or electronic devices, for example keys or a cell phone.


USING KEYLESS ENTRY

Unlocking the Doors

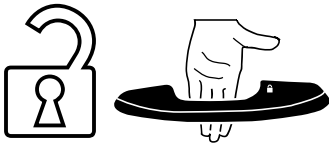

With your passive key or authorized phone within 3 ft (1 m) of your vehicle, gently press the touchpad on the door window trim to unlock and open the door.

Opening the Luggage Compartment with Passive Key (If Equipped)

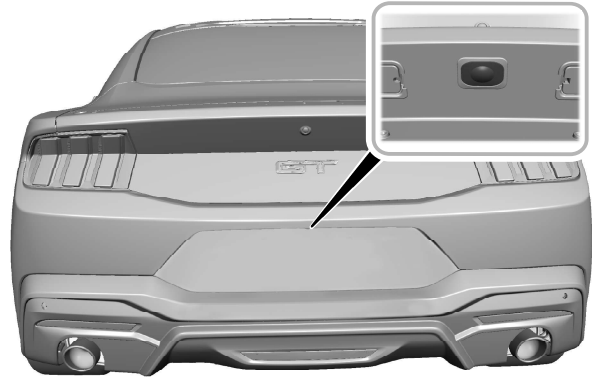

Press the exterior luggage compartment release button of the luggage compartment handle. The luggage compartment unlocks and opens. See **Opening the Rear Luggage Compartment from Outside Your Vehicle** (page 268).

Locking the Doors



With your remote control or authorized phone within 3 ft (1 m) of your vehicle, touch the lock icon on the door window trim to lock the door. The keyless entry system requires a brief delay to authenticate your device.

Note: The door activation switch flashes once to indicate the vehicle locks.

Note: Do not use the outside door handle as a roof cargo strap.

Keyless Entry

Double Locking

With your remote control or authorized phone within 3 ft (1 m) of your vehicle, touch the lock icon twice within three seconds to double lock your vehicle.

Easy Entry and Exit

HOW DOES EASY ENTRY AND EXIT WORK

This feature moves the driver seat rearward up to 2 in (5 cm) when you switch the ignition off. The driver seat returns to its previous position when you switch the ignition on.

SWITCHING EASY ENTRY AND EXIT ON AND OFF

1. Press **Settings** on the touchscreen.
2. Press **Vehicle**.
3. Select **Easy Entry/Exit**.

If you press any adjustment or memory button when in easy exit mode, the system cancels the operation.

Security

PASSIVE ANTI-THEFT SYSTEM

WHAT IS THE PASSIVE ANTI-THEFT SYSTEM

The passive anti-theft system prevents someone from starting your vehicle with an incorrectly coded key.

Note: *Do not leave a duplicate coded key in your vehicle. Always take the keys and lock all the doors when leaving your vehicle.*

HOW DOES THE PASSIVE ANTI-THEFT SYSTEM WORK

The passive anti-theft system arms when you switch the ignition off.

It disarms when you switch the ignition on with a correctly coded key.

Note: *The system is not compatible with non-Ford aftermarket remote start systems.*

Note: *Do not leave a duplicate coded key in your vehicle. Always take the keys and lock all doors when leaving your vehicle.*

ANTI-THEFT ALARM SYSTEM

WHAT IS THE ANTI-THEFT ALARM SYSTEM

The anti-theft alarm system warns you of an unauthorized entry to your vehicle.

HOW DOES THE ANTI-THEFT ALARM SYSTEM WORK

When armed, the anti-theft alarm is triggered in any of the following ways:

- If someone opens a door, the liftgate or the hood without a correctly coded key or remote control.
- If you turn the power on without a correctly coded key.
- If the interior sensors detect movement inside your vehicle.
- If the inclination sensors detect an attempt to raise your vehicle.
- If someone disconnects your vehicle's 12V battery or the battery backup alarm.

If the anti-theft alarm is triggered, the alarm horn sounds for 30 seconds and the turn signals flash for 5 minutes.

Any further attempts to carry out one of the above sounds the alarm again.

WHAT IS THE PERIMETER ALARM

The perimeter alarm is designed to detect unauthorized access to your vehicle.

WHAT ARE THE INTERIOR SENSORS (If Equipped)

The interior sensors are designed to detect any movement inside your vehicle.

The interior sensors are in the overhead console.

Note: *Do not cover the interior sensors.*

Security

WHAT ARE THE INCLINATION SENSORS (If Equipped)

The inclination sensor is designed to detect an attempt to raise your vehicle, for example to remove a wheel or to tow it away.

ARMING THE ANTI-THEFT ALARM SYSTEM

The alarm is ready to arm when you switch your vehicle off.

Lock your vehicle with your remote control to arm the alarm.

DISARMING THE ANTI-THEFT ALARM SYSTEM

Disarm the alarm by performing any of the following actions:

- Unlock the doors or luggage compartment with the remote control.
- Switch your vehicle on or start your vehicle.

ANTI-THEFT ALARM SYSTEM SETTINGS (IF EQUIPPED)

WHAT ARE THE ALARM SECURITY LEVELS

You can select two levels of alarm security, all sensors and perimeter sensing.

All Sensors

All sensors is the standard setting.

In all sensors, all equipped sensors are on when you arm the alarm.

Note: *Do not arm the alarm with all sensors if passengers, animals or other moving objects are inside your vehicle.*

Perimeter Sensing

In perimeter sensing, the interior sensors are off when you arm the alarm.

All the other equipped sensors activate when you arm the alarm in this mode.

SETTING THE ALARM SECURITY LEVEL

1. Press **Settings** on the touchscreen.
2. Press **Vehicle**.
3. Press **Alarm System**.
4. Press **Motion Sensors**.
5. Press a setting.

WHAT IS ASK ON EXIT

You can choose which level of security you require after you switch the ignition off.

Note: *If you do not choose a setting, the system defaults to all sensors.*

SWITCHING ASK ON EXIT ON AND OFF

1. Press **Settings** on the touchscreen.
2. Press **Vehicle**.
3. Press **Alarm System**.
4. Switch **Ask on Exit** on or off.

Security

SECURITY – TROUBLESHOOTING

SECURITY – INFORMATION MESSAGES

Message	Details
No Key Detected	The system has not detected a correctly coded key.
Starting System Fault	The system has malfunctioned. Have your vehicle checked as soon as possible.
Vehicle Alarm To Stop Alarm, Start Vehicle.	Displays when the alarm has been triggered due to unauthorized entry.
Alarm	

SECURITY – FREQUENTLY ASKED QUESTIONS

What should I do if there is a potential alarm problem with my vehicle?

- Take all remote controls to an authorized dealer if there is a potential alarm problem with your vehicle.

What should I do if my vehicle is unable to start with a correctly coded key?

- Have your vehicle checked as soon as possible.

Steering Wheel

USING THE CONTROLS ON THE STEERING WHEEL



See **Cruise Control** (page 208).



See **Adaptive Cruise Control** (page 210).



See **Adaptive Cruise Control** (page 210).



See **Cruise Control** (page 208).
See **Adaptive Cruise Control** (page 210). See **Intelligent Speed Limiter** (page 229).



See **Cruise Control** (page 208).
See **Adaptive Cruise Control** (page 210). See **Intelligent Speed Limiter** (page 229).



See **Cruise Control** (page 208).
See **Adaptive Cruise Control** (page 210). See **Intelligent Speed Limiter** (page 229).



See **Lane Centering** (page 218).
See **Lane Keeping System** (page 232).



See **Intelligent Speed Limiter** (page 229).



See **Horn** (page 90).



See **Ford Assistant** (page 411).



See **Adjusting the Volume** (page 388).



See **Adjusting the Volume** (page 388).



See **Audio System** (page 388).



See **Audio System** (page 388).



See **Instrument Cluster Display** (page 114).



See **Instrument Cluster Display** (page 114).



See **Instrument Cluster Display** (page 114).



See **Drive Mode Control** (page 226).



See **Drive Mode Control** (page 226).



See **Drive Mode Control** (page 226).


ADJUSTING THE STEERING WHEEL



WARNING: Do not adjust the steering wheel when your vehicle is moving.

Note: Make sure that you are sitting in the correct position. See **Sitting in the Correct Position** (page 129).

Steering Wheel

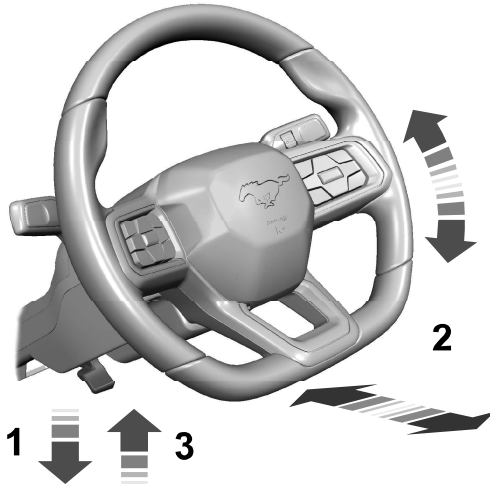

Note: Depending on the remote start settings, the heated steering wheel may remain on after remote starting your vehicle. It may also turn on when you start your vehicle if it was on the last time the engine was switched off.

1. Unlock the steering column.
2. Adjust the steering wheel to the position you prefer.
3. Lock the steering column.

HORN



Press on the center of the steering wheel near the horn icon to activate the horn.

SWITCHING THE HEATED STEERING WHEEL ON AND OFF

(IF EQUIPPED)



To activate the heated steering wheel, press the button on the touchscreen near the climate controls. The button illuminates when the heated steering wheel is on. To turn it off, press the heated steering wheel button again.

Note: The engine must be running to use the heated steering wheel.

Note: A sensor regulates the temperature of the steering wheel.

Wipers and Washers

WIPERS


WIPER PRECAUTIONS

Do not operate the wipers on a dry windshield. This could scratch the glass or damage the wiper blades. Use the windshield washers before wiping a dry windshield.

Fully defrost the windshield before you switch the windshield wipers on.

Switch the windshield wipers off before entering a car wash.

SWITCHING WINDSHIELD WIPERS ON AND OFF

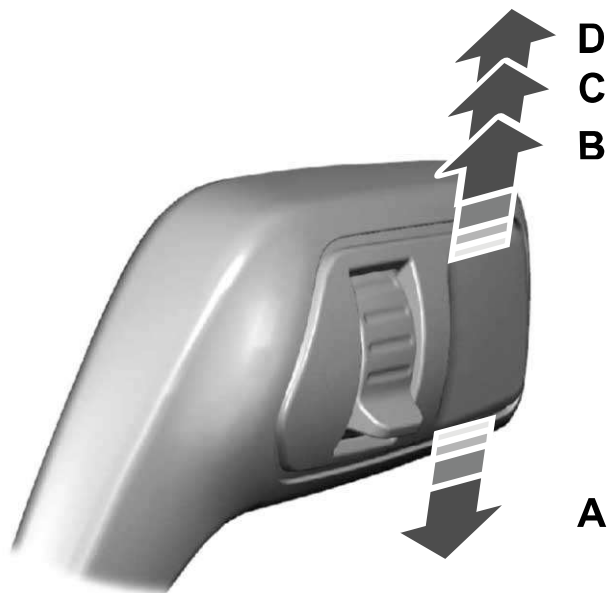

- A Single wipe.
- B Intermittent wipe/Auto wipe.
- C Normal wipe.
- D High-speed wipe.



Push the lever up or down to operate the windshield wipers.

AUTOWIPERS

WHAT ARE AUTOWIPERS

Autowipers turns on and controls the speed and frequency of the windshield wipers.


AUTOWIPERS SETTINGS

1. Press **Settings** on the touchscreen.
2. Press **Vehicle Settings**.
3. Press **Wipers**.
4. Switch **Rain Sensing** on or off.

Note: When you switch the feature off, the wipers do not operate based on the rain sensor. When you switch on the windshield wipers to the intermittent wipe position with the feature off, the wipers use the wipe speed set by the rotary control.

Wipers and Washers

ADJUSTING THE SENSITIVITY OF THE RAIN SENSOR

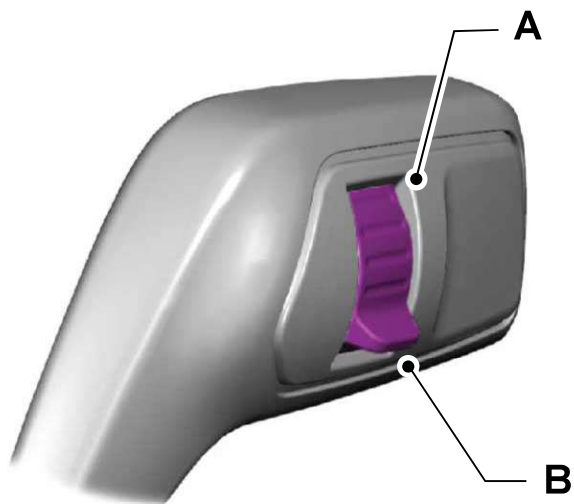


- A High sensitivity.
- B Low sensitivity.

Use the rotary control to set the rain sensor sensitivity.

When you select high sensitivity, the wipers operate when the sensor detects a small amount of water on the windshield.

When you select low sensitivity, the wipers operate when the sensor detects a large amount of water on the windshield.

CHECKING THE WIPER BLADES

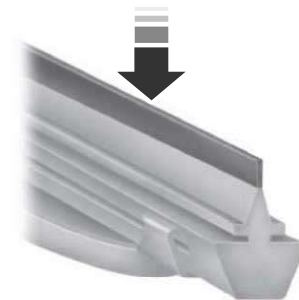


Run the tip of your fingers over the edge of the blade to check for roughness.

REPLACING THE FRONT WIPER BLADES

Make sure your vehicle is off before beginning this procedure.

Note: Do not manually move the wiper arms. To place the wiper arms in a service position, switch your vehicle on in accessory mode, switch on the wipers and switch your vehicle off when the wipers are at their highest position.

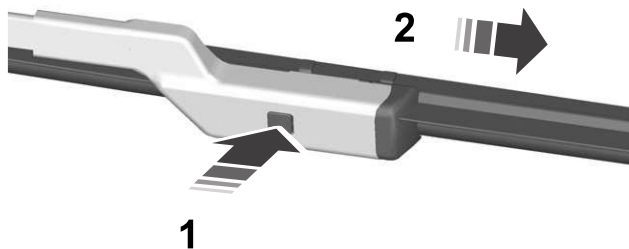

1. Lift the wiper arm and then press the wiper blade locking button.

Note: Do not hold the wiper blade to lift the wiper arm.

2. Remove the wiper blade.

Wipers and Washers

Note: Make sure that the wiper arm does not spring back against the glass when the wiper blade is not attached.

3. To install, reverse the removal procedure.

Note: Make sure that the wiper blade locks into place.

WASHERS

WASHER PRECAUTIONS



WARNING: If you operate your vehicle in temperatures below 41°F (5°C), use washer fluid with antifreeze protection. Failure to use washer fluid with antifreeze protection in cold weather could result in impaired windshield vision and increase the risk of injury or accident.

Do not operate the washers when the washer reservoir is empty. This could cause the washer pump to overheat.

Keep the outside of the windshield clean. The rain sensor is very sensitive and the wipers may operate if dirt, mist or insects hit the windshield.

USING THE WINDSHIELD WASHER



Pull the lever toward you to operate the windshield washer.

Note: A courtesy wipe occurs a short time after the wipers stop to clear any remaining washer fluid when switched on. See **Switching the Courtesy Wipe On and Off** (page 93).


SWITCHING THE COURTESY WIPE ON AND OFF

1. Press **Settings** on the touchscreen.
2. Press **Vehicle Settings**.
3. Press **Wipers**.
4. Switch **Courtesy Wipe** on or off.

Note: When you switch the feature on, the wipers make an additional single wipe at the end of the washer request. When you switch it off, the wipers finish the current washer request.

Wipers and Washers

ADDING WASHER FLUID

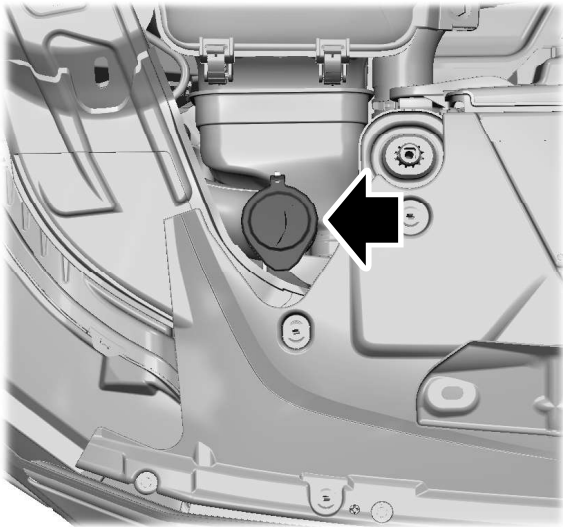

WIPERS AND WASHERS – FREQUENTLY ASKED QUESTIONS

Why are there streaks and smears on the windshield?

- The wiper blades could be dirty, worn or damaged. Check the wiper blades. See **Checking the Wiper Blades** (page 92). If the wiper blades are dirty, clean them with washer fluid or water applied with a soft sponge or cloth. If the wiper blades are worn or damaged, install new ones. See **Replacing the Front Wiper Blades** (page 92).

WASHER FLUID SPECIFICATION

See **Washer Fluid Specification** (page 377).

WIPERS AND WASHERS – TROUBLESHOOTING


WIPERS AND WASHERS – WARNING LAMPS



Illuminates when the windshield washer fluid is low.

Exterior Lighting

EXTERIOR LIGHTING CONTROL

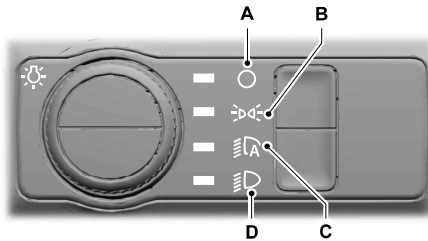


- A Lamps off.
- B Parking lamps on.
- C Autolamps on.
- D Headlamps on.

Rotate the control to make a selection.

Note: The lighting control defaults to autolamps every time you switch your vehicle on.

HEADLAMPS

USING THE HIGH BEAM HEADLAMPS

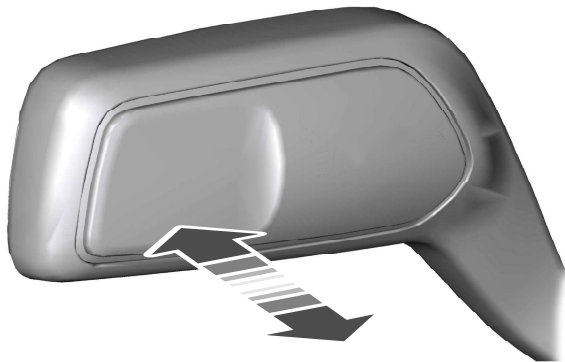

Push the lever away from you to switch the high beams on.

Push the lever forward again or pull the lever toward you to switch the high beams off.

Slightly pull the lever toward you and release it to flash the headlamps.

Note: Continuous activation only with headlamps on.

SWITCHING HEADLAMP EXIT DELAY ON AND OFF

To switch headlamp exit delay on, pull the turn signal lever toward you after switching your vehicle off.

To switch headlamp exit delay off, pull the turn signal lever toward you again or switch your vehicle on.

Note: The headlamps turn off after three minutes with any door open or 30 seconds after the last door closes.

HEADLAMP INDICATORS

Lamps On



Illuminates when you switch the low beam headlamps or the parking lamps on.

Headlamp High Beam



Illuminates when you switch the high beam headlamps on.

Exterior Lighting

HEADLAMPS – TROUBLESHOOTING

HEADLAMPS – FREQUENTLY ASKED QUESTIONS

Why is there condensation in the headlamps?

- Headlamps have vents to accommodate normal changes in air pressure. Condensation can be a natural by-product of this design. When moist air enters the lamp assembly through the vents, there is a possibility that condensation can occur when the temperature is cold. When normal condensation occurs, a fine mist can form on the interior of the lens. The fine mist eventually clears and exits through the vents during normal operation.

How much condensation is acceptable?

- The presence of a fine mist, for example no streaks, drip marks or large droplets. A fine mist covers less than 50% of the lens.

How long does it take for the acceptable condensation to clear?

- Clearing time can take as long as 48 hours under dry weather conditions.

How much condensation is unacceptable?

- A water puddle inside the lamp. Streaks, drip marks or large droplets present on the interior of the lens.

What should I do if unacceptable condensation is present?

- Have your vehicle checked as soon as possible.

Why do my headlamps turn off when I have them switched on when I switch my vehicle off?

- The battery saver turns the headlamps off after a short period of time after you switch your vehicle off.

AUTOLAMPS

WHAT ARE AUTOLAMPS



WARNING: The system does not relieve you of your responsibility to drive with due care and attention. You may need to override the system if it does not turn the headlamps on in low visibility conditions, for example daytime fog.

Autolamps turn the headlamps on in low light situations or when the windshield wipers operate.

AUTOLAMP SETTINGS

1. Press **Settings** on the touchscreen.
2. Press **Vehicle Settings**.
3. Press **Lighting**.
4. Press **Autolamp Delay**.
5. Press a setting.