

Master DTC Chart

- ▶ [ABS \(anti-lock brake system\)](#)
- ▶ [ACM \(audio front control module\)](#)
- ▶ [APIM \(SYNC module\)](#)
- ▶ [BCM \(body control module\)](#)
- ▶ [BCMB \(body control module B\)](#)
- ▼ [BCMC \(body control module C\)](#)

DTC	Description	PINPOINT TEST
B1C55:08	Horn Relay: Bus Signal / Message Failure	C: B1C55:08 (Horn)
B1C55:11	Horn Relay: Circuit Short To Ground	D: B1C55:11 (Horn)
P2CFC:00	A/C Clutch Control Circuit: No Sub Type Information	C: P2CFC:00, P2CFD:00, P2CFE:00 (Climate Control System)
P2CFD:00	A/C Clutch Control Circuit Low: No Sub Type Information	C: P2CFC:00, P2CFD:00, P2CFE:00 (Climate Control System)
P2CFE:00	A/C Clutch Control Circuit High: No Sub Type Information	C: P2CFC:00, P2CFD:00, P2CFE:00 (Climate Control System)
U0100:87	Lost Communication With ECM/PCM 'A': Missing Message	A: U0100:87 (Body Control Module C (BCMC))
U0121:87	Lost Communication With Anti-Lock Brake System (ABS) Control Module 'A': Missing Message	B: U0121:87 OR U0415:81 (Body Control Module C (BCMC))
U0122:87	Lost Communication With Vehicle Dynamics Control Module: Missing Message	C: U0122:87 (Body Control Module C (BCMC))
U0140:87	Lost Communication With Body Control Module: Missing Message	D: U0140:87 (Body Control Module C (BCMC))
U0146:87	Lost Communication With Serial Data Gateway 'A': Missing Message	E: U0146:87 (Body Control Module C (BCMC))
U0164:87	Lost Communication With HVAC Control Module 'A': Missing Message	F: U0164:87 (Body Control Module C (BCMC))
U023A:87	Lost Communication With Image Processing Module A: Missing Message	G: U023A:87 (Body Control Module C (BCMC))
U0415:81	Invalid Data Received from Anti-Lock Brake System (ABS) Control Module 'A': Invalid Serial Data Received	B: U0121:87 OR U0415:81 (Body Control Module C (BCMC))
U1000:00	Solid State Driver Protection Active -Driver Disabled: No Sub Type Information	H: U1000:00 (Body Control Module C (BCMC))
U2100:00	Initial Configuration Not Complete: No Sub Type Information	I: U2100:00 (Body Control Module C (BCMC))
U2200:00	Control Module Configuration Memory Corrupt: No Sub Type Information	J: U3000:49 OR U2200:00 (Body Control Module C (BCMC))
U3000:49	Control Module: Internal Electronic Failure	J: U3000:49 OR U2200:00 (Body Control Module C (BCMC))
U3003:16	Battery Voltage: Circuit Voltage Below Threshold	K: U3003:16 (Body Control Module C (BCMC))
U3003:17	Battery Voltage: Circuit Voltage Above Threshold	L: U3003:17 (Body Control Module C (BCMC))

- ▶ [CCM \(cruise control module\)](#)
- ▶ [DDM \(driver door module\)](#)
- ▶ [DSM \(driver front seat module\)](#)
- ▶ [DSP \(audio digital signal processing module\)](#)

- ▶ [GWM \(gateway module A\)](#)
- ▶ [HCM \(headlamp control module\)](#)
- ▶ [HVAC \(heating, ventilation and air conditioning\)](#)
- ▶ [IPC \(instrument panel cluster\)](#)
- ▶ [IPMA \(image processing module A\)](#)
- ▶ [LDCMA \(Lighting Driver Control Module A\)](#)
- ▶ [LDCMB \(Lighting Driver Control Module B\)](#)
- ▶ [MRCMA \(movable roof control module A\)](#)
- ▶ [MRCMB \(movable roof control module B\)](#)
- ▶ [OCSM \(occupant classification system module\)](#)
- ▶ [PAM \(parking assist control module\)](#)
- ▶ [PCM \(powertrain control module\)](#)
- ▶ [PDM \(passenger door module\)](#)
- ▶ [PSCM \(power steering control module\)](#)
- ▶ [RCM \(restraints control module\)](#)
- ▶ [RTM \(radio transceiver module\)](#)
- ▶ [SCCM \(steering column control module\)](#)
- ▶ [SODL \(side obstacle detection control module LH\)](#)
- ▶ [SODR \(side obstacle detection control module RH\)](#)
- ▶ [TCU \(telematic control unit module\)](#)
- ▶ [VDM \(vehicle dynamics control module\)](#)
- ▶ [WACM \(wireless accessory charging module\)](#)