

## Master DTC Chart

- ▶ [ABS \(anti-lock brake system\)](#)
- ▶ [ACM \(audio front control module\)](#)
- ▶ [APIM \(SYNC module\)](#)
- ▶ [BCM \(body control module\)](#)
- ▶ [BCMB \(body control module B\)](#)
- ▶ [BCMC \(body control module C\)](#)
- ▼ [CCM \(cruise control module\)](#)

DTC	Description	PINPOINT TEST
B142E:78	Forward Looking Sensor Horizontal Alignment: Alignment Or Adjustment Incorrect	<a href="#">D: B142E:78, B1432:78 OR B1433:54</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
B1432:78	Forward Looking Sensor Vertical Alignment: Alignment Or Adjustment Incorrect	<a href="#">D: B142E:78, B1432:78 OR B1433:54</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
B1433:54	Forward Looking Sensor Alignment: Missing Calibration	<a href="#">D: B142E:78, B1432:78 OR B1433:54</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
C1A67:96	Forward Looking Sensor: Component Internal Failure	<a href="#">E: C1A67:96</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
C1A67:97	Forward Looking Sensor: Component or System Operation Obstructed or Blocked	<a href="#">F: C1A67:97</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
C1A67:98	Forward Looking Sensor: Component Or System Over Temperature	<a href="#">G: C1A67:98</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
U2008:08	Sensor Cluster: Bus Signal / Message Failure	<a href="#">H: U2008:08</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
U2100:00	Initial Configuration Not Complete: No Sub Type Information	<a href="#">I: U2100:00 OR U2300:55</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
U2300:55	Central Configuration: Not Configured	<a href="#">I: U2100:00 OR U2300:55</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
U3000:41	Control Module: General Checksum Failure	<a href="#">J: U3000:41, U3000:42, U3000:44 OR U3000:49</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
U3000:42	Control Module: General Memory Failure	<a href="#">J: U3000:41, U3000:42, U3000:44 OR U3000:49</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
U3000:44	Control Module: Data Memory Failure	<a href="#">J: U3000:41, U3000:42, U3000:44 OR U3000:49</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
U3000:49	Control Module: Internal Electronic Failure	<a href="#">J: U3000:41, U3000:42, U3000:44 OR U3000:49</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
U3002:62	Vehicle Identification Number: Signal Compare Failure	<a href="#">K: U3002:62</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
U3003:16	Battery Voltage: Circuit Voltage Below Threshold	<a href="#">L: U3003:16</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)
U3003:17	Battery Voltage: Circuit Voltage Above Threshold	<a href="#">M: U3003:17</a> (Cruise Control - Vehicles With: Adaptive Cruise Control)

- ▶ [DDM \(driver door module\)](#)
- ▶ [DSM \(driver front seat module\)](#)
- ▶ [DSP \(audio digital signal processing module\)](#)
- ▶ [GWM \(gateway module A\)](#)
- ▶ [HCM \(headlamp control module\)](#)
- ▶ [HVAC \(heating, ventilation and air conditioning\)](#)

- ▶ IPC (instrument panel cluster)
- ▶ IPMA (image processing module A)
- ▶ LDCMA (Lighting Driver Control Module A)
- ▶ LDCMB (Lighting Driver Control Module B)
- ▶ MRCMA (movable roof control module A)
- ▶ MRCMB (movable roof control module B)
- ▶ OCSM (occupant classification system module)
- ▶ PAM (parking assist control module)
- ▶ PCM (powertrain control module)
- ▶ PDM (passenger door module)
- ▶ PSCM (power steering control module)
- ▶ RCM (restraints control module)
- ▶ RTM (radio transceiver module)
- ▶ SCCM (steering column control module)
- ▶ SODL (side obstacle detection control module LH)
- ▶ SODR (side obstacle detection control module RH)
- ▶ TCU (telematic control unit module)
- ▶ VDM (vehicle dynamics control module)
- ▶ WACM (wireless accessory charging module)