

## Master DTC Chart

- ▶ [ABS \(anti-lock brake system\)](#)
- ▶ [ACM \(audio front control module\)](#)
- ▶ [APIM \(SYNC module\)](#)
- ▶ [BCM \(body control module\)](#)
- ▶ [BCMB \(body control module B\)](#)
- ▶ [BCMC \(body control module C\)](#)
- ▶ [CCM \(cruise control module\)](#)
- ▶ [DDM \(driver door module\)](#)
- ▶ [DSM \(driver front seat module\)](#)
- ▶ [DSP \(audio digital signal processing module\)](#)
- ▶ [GWM \(gateway module A\)](#)
- ▼ [HCM \(headlamp control module\)](#)

DTC	Description	PINPOINT TEST
B1041:54	Levelling Control: Missing Calibration	<a href="#">U: FRONT OR REAR HEIGHT SENSOR CIRCUIT FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
B14DB:87	Left Headlamp Driver Control System: Missing Message	<a href="#">J: HCM AND HEADLAMP LDCMA OR LDCMB MISSING MESSAGE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
B14DC:87	Right Headlamp Driver Control System: Missing Message	<a href="#">J: HCM AND HEADLAMP LDCMA OR LDCMB MISSING MESSAGE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
B1559:96	Left Headlamp: Component Internal Failure	<a href="#">V: HEADLAMP INTERNAL FAILURES - MULTIPLE HCM DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
B155A:96	Right Headlamp: Component Internal Failure	<a href="#">V: HEADLAMP INTERNAL FAILURES - MULTIPLE HCM DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
B1A59:1C	Sensor 5 Volt Supply: Circuit Voltage Out Of Range	<a href="#">U: FRONT OR REAR HEIGHT SENSOR CIRCUIT FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
C1A03:12	Left Front Height Sensor: Circuit Short To Battery	<a href="#">U: FRONT OR REAR HEIGHT SENSOR CIRCUIT FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
C1A03:14	Left Front Height Sensor: Circuit Short To Ground Or Open	<a href="#">U: FRONT OR REAR HEIGHT SENSOR CIRCUIT FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
C1A03:29	Left Front Height Sensor: Signal Invalid	<a href="#">U: FRONT OR REAR HEIGHT SENSOR CIRCUIT FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
C1A03:64	Left Front Height Sensor: Signal Plausibility Failure	<a href="#">U: FRONT OR REAR HEIGHT SENSOR CIRCUIT FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
C1A05:12	Left Rear Height Sensor: Circuit Short To Battery	<a href="#">U: FRONT OR REAR HEIGHT SENSOR CIRCUIT FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
C1A05:14	Left Rear Height Sensor: Circuit Short To Ground Or Open	<a href="#">U: FRONT OR REAR HEIGHT SENSOR CIRCUIT FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
C1A05:29	Left Rear Height Sensor: Signal Invalid	<a href="#">U: FRONT OR REAR HEIGHT SENSOR CIRCUIT FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>

C1A05:64	Left Rear Height Sensor: Signal Plausibility Failure	<a href="#">U: FRONT OR REAR HEIGHT SENSOR CIRCUIT FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U0100:87	Lost Communication With ECM/PCM 'A': Missing Message	<a href="#">K: U0100:87 (Headlamps)</a>
U0121:87	Lost Communication With Anti-Lock Brake System (ABS) Control Module 'A': Missing Message	<a href="#">L: U0121:87 (Headlamps)</a>
U0122:87	Lost Communication With Vehicle Dynamics Control Module: Missing Message	<a href="#">N: U0122:87 (Headlamps)</a>
U0131:87	Lost Communication With Power Steering Control Module 'A': Missing Message	<a href="#">M: U0131:87 (Headlamps)</a>
U0140:87	Lost Communication With Body Control Module: Missing Message	<a href="#">O: U0140:87 (Headlamps)</a>
U0151:87	Lost Communication With Restraints Control Module: Missing Message	<a href="#">P: U0151:87 (Headlamps)</a>
U0212:87	Lost Communication With Steering Column Control Module: Missing Message	<a href="#">Q: U0212:87 (Headlamps)</a>
U023A:87	Lost Communication With Image Processing Module A: Missing Message	<a href="#">R: U023A:87 (Headlamps)</a>
U0401:00	Invalid Data Received from ECM/PCM A: No Sub Type Information	<a href="#">G: HCM INVALID DATA FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U0415:00	Invalid Data Received from Anti-Lock Brake System (ABS) Control Module 'A': No Sub Type Information	<a href="#">G: HCM INVALID DATA FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U0416:00	Invalid Data Received From Vehicle Dynamics Control Module: No Sub Type Information	<a href="#">G: HCM INVALID DATA FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U0420:00	Invalid Data Received from Power Steering Control Module 'A': No Sub Type Information	<a href="#">G: HCM INVALID DATA FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U0422:00	Invalid Data Received From Body Control Module: No Sub Type Information	<a href="#">G: HCM INVALID DATA FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U0429:00	Invalid Data Received From Steering Column Control Module: No Sub Type Information	<a href="#">G: HCM INVALID DATA FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U0452:00	Invalid Data Received From Restraints Control Module: No Sub Type Information	<a href="#">G: HCM INVALID DATA FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U053B:00	Invalid Data Received From Image Processing Module A: No Sub Type Information	<a href="#">G: HCM INVALID DATA FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U2024:51	Control Module Cal-Config Data: Not Programmed	<a href="#">F: HCM MODULE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U2024:57	Control Module Cal-Config Data: Invalid / Incompatible Software Component	<a href="#">F: HCM MODULE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U202B:61	In-Use Application Signing Key: Signal Calculation Failure	<a href="#">F: HCM MODULE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U202B:62	In-Use Application Signing Key: Signal Compare Failure	<a href="#">F: HCM MODULE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>
U2100:00	Initial Configuration Not Complete: No Sub Type Information	<a href="#">F: HCM MODULE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS) (Headlamps)</a>

U2101:56	Control Module Configuration Incompatible: Invalid / Incompatible Configuration	<a href="#">F: HCM MODULE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS)</a> (Headlamps)
U2200:45	Control Module Configuration Memory Corrupt: Program Memory Failure	<a href="#">F: HCM MODULE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS)</a> (Headlamps)
U3000:41	Control Module: General Checksum Failure	<a href="#">F: HCM MODULE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS)</a> (Headlamps)
U3000:45	Control Module: Program Memory Failure	<a href="#">F: HCM MODULE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS)</a> (Headlamps)
U3000:46	Control Module: Calibration / Parameter Memory Failure	<a href="#">F: HCM MODULE FAULTS - MULTIPLE DIAGNOSTIC TROUBLE CODES (DTCS)</a> (Headlamps)
U3003:16	Battery Voltage: Circuit Voltage Below Threshold	<a href="#">H: U3003:16</a> (Headlamps)
U3003:17	Battery Voltage: Circuit Voltage Above Threshold	<a href="#">I: U3003:17</a> (Headlamps)

- ▶ [HVAC \(heating, ventilation and air conditioning\)](#)
- ▶ [IPC \(instrument panel cluster\)](#)
- ▶ [IPMA \(image processing module A\)](#)
- ▶ [LDCMA \(Lighting Driver Control Module A\)](#)
- ▶ [LDCMB \(Lighting Driver Control Module B\)](#)
- ▶ [MRCMA \(movable roof control module A\)](#)
- ▶ [MRCMB \(movable roof control module B\)](#)
- ▶ [OCSM \(occupant classification system module\)](#)
- ▶ [PAM \(parking assist control module\)](#)
- ▶ [PCM \(powertrain control module\)](#)
- ▶ [PDM \(passenger door module\)](#)
- ▶ [PSCM \(power steering control module\)](#)
- ▶ [RCM \(restraints control module\)](#)
- ▶ [RTM \(radio transceiver module\)](#)
- ▶ [SCCM \(steering column control module\)](#)
- ▶ [SODL \(side obstacle detection control module LH\)](#)
- ▶ [SODR \(side obstacle detection control module RH\)](#)
- ▶ [TCU \(telematic control unit module\)](#)
- ▶ [VDM \(vehicle dynamics control module\)](#)
- ▶ [WACM \(wireless accessory charging module\)](#)

