

Master DTC Chart

- ▶ [ABS \(anti-lock brake system\)](#)
- ▶ [ACM \(audio front control module\)](#)
- ▶ [APIM \(SYNC module\)](#)
- ▶ [BCM \(body control module\)](#)
- ▶ [BCMB \(body control module B\)](#)
- ▶ [BCMC \(body control module C\)](#)
- ▶ [CCM \(cruise control module\)](#)
- ▶ [DDM \(driver door module\)](#)
- ▶ [DSM \(driver front seat module\)](#)
- ▶ [DSP \(audio digital signal processing module\)](#)
- ▶ [GWM \(gateway module A\)](#)
- ▶ [HCM \(headlamp control module\)](#)
- ▶ [HVAC \(heating, ventilation and air conditioning\)](#)
- ▶ [IPC \(instrument panel cluster\)](#)
- ▶ [IPMA \(image processing module A\)](#)
- ▶ [LDCMA \(Lighting Driver Control Module A\)](#)
- ▶ [LDCMB \(Lighting Driver Control Module B\)](#)
- ▶ [MRCMA \(movable roof control module A\)](#)
- ▼ [MRCMB \(movable roof control module B\)](#)

DTC	Description	PINPOINT TEST
B1070:12	Tonneau Lid Piston Out Sensor: Circuit Short To Battery	B: TONNEAU COVER SENSOR FAULTS (Convertible Top)
B1070:14	Tonneau Lid Piston Out Sensor: Circuit Short To Ground Or Open	B: TONNEAU COVER SENSOR FAULTS (Convertible Top)
B1070:29	Tonneau Lid Piston Out Sensor: Signal Invalid	B: TONNEAU COVER SENSOR FAULTS (Convertible Top)
B1268:24	Convertible/Folding Top Activation Down Switch: Signal Stuck High	J: B1267:24, B1268:24, U2013:64 (Convertible Top)
U0140:00	Lost Communication With Body Control Module: No Sub Type Information	K: U0140:00 (Convertible Top)
U0207:00	Lost Communication With Moveable Roof Control Module 'A': No Sub Type Information	O: U0207:00 (Convertible Top)
U0401:00	Invalid Data Received from ECM/PCM A: No Sub Type Information	T: U0401:00 (Convertible Top)
U1000:00	Solid State Driver Protection Active -Driver Disabled: No Sub Type Information	V: U1000-00 (Convertible Top)
U2011:64	Motor: Signal Plausibility Failure	W: U2011:64 (Convertible Top)
U2011:98	Motor: Component Or System Over Temperature	X: U2011:98 (Convertible Top)
U2013:64	Switch Pack: Signal Plausibility Failure	J: B1267:24, B1268:24, U2013:64 (Convertible Top)
U3000:44	Control Module: Data Memory Failure	R: MRCMB U3000.44, U3000.45, U3000.46, U3000.49 (Convertible Top)
U3000:45	Control Module: Program Memory Failure	R: MRCMB U3000.44, U3000.45, U3000.46, U3000.49 (Convertible Top)
U3000:46	Control Module: Calibration / Parameter Memory Failure	R: MRCMB U3000.44, U3000.45, U3000.46, U3000.49 (Convertible Top)
U3000:49	Control Module: Internal Electronic Failure	R: MRCMB U3000.44, U3000.45, U3000.46, U3000.49 (Convertible Top)

- ▶ [OCSM \(occupant classification system module\)](#)
- ▶ [PAM \(parking assist control module\)](#)
- ▶ [PCM \(powertrain control module\)](#)

- ▶ **PDM (passenger door module)**
- ▶ **PSCM (power steering control module)**
- ▶ **RCM (restraints control module)**
- ▶ **RTM (radio transceiver module)**
- ▶ **SCCM (steering column control module)**
- ▶ **SODL (side obstacle detection control module LH)**
- ▶ **SODR (side obstacle detection control module RH)**
- ▶ **TCU (telematic control unit module)**
- ▶ **VDM (vehicle dynamics control module)**
- ▶ **WACM (wireless accessory charging module)**