

Master DTC Chart

- ▶ [ABS \(anti-lock brake system\)](#)
- ▶ [ACM \(audio front control module\)](#)
- ▶ [APIM \(SYNC module\)](#)
- ▶ [BCM \(body control module\)](#)
- ▶ [BCMB \(body control module B\)](#)
- ▶ [BCMC \(body control module C\)](#)
- ▶ [CCM \(cruise control module\)](#)
- ▶ [DDM \(driver door module\)](#)
- ▶ [DSM \(driver front seat module\)](#)
- ▶ [DSP \(audio digital signal processing module\)](#)
- ▶ [GWM \(gateway module A\)](#)
- ▶ [HCM \(headlamp control module\)](#)
- ▶ [HVAC \(heating, ventilation and air conditioning\)](#)
- ▶ [IPC \(instrument panel cluster\)](#)
- ▶ [IPMA \(image processing module A\)](#)
- ▶ [LDCMA \(Lighting Driver Control Module A\)](#)
- ▶ [LDCMB \(Lighting Driver Control Module B\)](#)
- ▶ [MRCMA \(movable roof control module A\)](#)
- ▶ [MRCMB \(movable roof control module B\)](#)
- ▼ [OCSM \(occupant classification system module\)](#)

DTC	Description	PINPOINT TEST
B0061:11	Passenger Seatbelt Tension Sensor: Circuit Short To Ground	<a href="#">BC: B0061:11, B0061:12, B0061:13, B0061:64</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0061:12	Passenger Seatbelt Tension Sensor: Circuit Short To Battery	<a href="#">BC: B0061:11, B0061:12, B0061:13, B0061:64</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0061:13	Passenger Seatbelt Tension Sensor: Circuit Open	<a href="#">BC: B0061:11, B0061:12, B0061:13, B0061:64</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0061:64	Passenger Seatbelt Tension Sensor: Signal Plausibility Failure	<a href="#">BC: B0061:11, B0061:12, B0061:13, B0061:64</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C0:11	Passenger Seat Occupant Classification Sensor 'A': Circuit Short To Ground	<a href="#">BD: OCS CONCERNS</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C0:12	Passenger Seat Occupant Classification Sensor 'A': Circuit Short To Battery	<a href="#">BD: OCS CONCERNS</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C0:16	Passenger Seat Occupant Classification Sensor 'A': Circuit Voltage Below Threshold	<a href="#">BD: OCS CONCERNS</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C0:49	Passenger Seat Occupant Classification Sensor 'A': Internal Electronic Failure	<a href="#">BD: OCS CONCERNS</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C0:7B	Passenger Seat Occupant Classification Sensor 'A': Low Fluid Level	<a href="#">BD: OCS CONCERNS</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B00C2:11	Passenger Seat Occupant Classification Sensor 'C': Circuit Short To Ground	<a href="#">BE: B00C2:11</a> , <a href="#">B00C2:12</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C2:12	Passenger Seat Occupant Classification Sensor 'C': Circuit Short To Battery	<a href="#">BE: B00C2:11</a> , <a href="#">B00C2:12</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1193:00	Crash Event Storage Full and Locked: No Sub Type Information	<a href="#">BF: B1193:00</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0100:00	Lost Communication With ECM/PCM 'A': No Sub Type Information	<a href="#">BG: U0100:00</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0151:00	Lost Communication With Restraints Control Module: No Sub Type Information	<a href="#">BH: U0151:00</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0401:00	Invalid Data Received from ECM/PCM A: No Sub Type Information	<a href="#">BI: U0401:00</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U3000:41	Control Module: General Checksum Failure	<a href="#">BJ: U3000:41</a> , <a href="#">U3000:42</a> , <a href="#">U3000:46</a> , (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U3000:42	Control Module: General Memory Failure	<a href="#">BJ: U3000:41</a> , <a href="#">U3000:42</a> , <a href="#">U3000:46</a> , (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U3000:46	Control Module: Calibration / Parameter Memory Failure	<a href="#">BJ: U3000:41</a> , <a href="#">U3000:42</a> , <a href="#">U3000:46</a> , (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U3000:54	Control Module: Missing Calibration	<a href="#">BK: U3000:54</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U3003:16	Battery Voltage: Circuit Voltage Below Threshold	<a href="#">BB: U3003:16 AND U3003:17</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U3003:17	Battery Voltage: Circuit Voltage Above Threshold	<a href="#">BB: U3003:16 AND U3003:17</a> (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

- ▶ [PAM \(parking assist control module\)](#)
- ▶ [PCM \(powertrain control module\)](#)
- ▶ [PDM \(passenger door module\)](#)
- ▶ [PSCM \(power steering control module\)](#)
- ▶ [RCM \(restraints control module\)](#)
- ▶ [RTM \(radio transceiver module\)](#)
- ▶ [SCCM \(steering column control module\)](#)
- ▶ [SODL \(side obstacle detection control module LH\)](#)
- ▶ [SODR \(side obstacle detection control module RH\)](#)
- ▶ [TCU \(telematic control unit module\)](#)
- ▶ [VDM \(vehicle dynamics control module\)](#)
- ▶ [WACM \(wireless accessory charging module\)](#)

