

## Master DTC Chart

- ▶ [ABS \(anti-lock brake system\)](#)
- ▶ [ACM \(audio front control module\)](#)
- ▶ [APIM \(SYNC module\)](#)
- ▶ [BCM \(body control module\)](#)
- ▶ [BCMB \(body control module B\)](#)
- ▶ [BCMC \(body control module C\)](#)
- ▶ [CCM \(cruise control module\)](#)
- ▶ [DDM \(driver door module\)](#)
- ▶ [DSM \(driver front seat module\)](#)
- ▶ [DSP \(audio digital signal processing module\)](#)
- ▶ [GWM \(gateway module A\)](#)
- ▶ [HCM \(headlamp control module\)](#)
- ▶ [HVAC \(heating, ventilation and air conditioning\)](#)
- ▶ [IPC \(instrument panel cluster\)](#)
- ▶ [IPMA \(image processing module A\)](#)
- ▶ [LDCMA \(Lighting Driver Control Module A\)](#)
- ▶ [LDCMB \(Lighting Driver Control Module B\)](#)
- ▶ [MRCMA \(movable roof control module A\)](#)
- ▶ [MRCMB \(movable roof control module B\)](#)
- ▶ [OCSM \(occupant classification system module\)](#)
- ▼ [PAM \(parking assist control module\)](#)

DTC	Description	PINPOINT TEST
U0401:00	Invalid Data Received from ECM/PCM A: No Sub Type Information	<a href="#">B: NEUTRAL POSITION SENSOR SIGNAL MISMATCH FAULTS</a> (Manual Transmission - 6-Speed Manual Transmission – MT82)

- ▶ [PCM \(powertrain control module\)](#)
- ▶ [PDM \(passenger door module\)](#)
- ▶ [PSCM \(power steering control module\)](#)
- ▶ [RCM \(restraints control module\)](#)
- ▶ [RTM \(radio transceiver module\)](#)
- ▶ [SCCM \(steering column control module\)](#)
- ▶ [SODL \(side obstacle detection control module LH\)](#)
- ▶ [SODR \(side obstacle detection control module RH\)](#)
- ▶ [TCU \(telematic control unit module\)](#)
- ▶ [VDM \(vehicle dynamics control module\)](#)
- ▶ [WACM \(wireless accessory charging module\)](#)

