

## Master DTC Chart

- ▶ [ABS \(anti-lock brake system\)](#)
- ▶ [ACM \(audio front control module\)](#)
- ▶ [APIM \(SYNC module\)](#)
- ▶ [BCM \(body control module\)](#)
- ▶ [BCMB \(body control module B\)](#)
- ▶ [BCMC \(body control module C\)](#)
- ▶ [CCM \(cruise control module\)](#)
- ▶ [DDM \(driver door module\)](#)
- ▶ [DSM \(driver front seat module\)](#)
- ▶ [DSP \(audio digital signal processing module\)](#)
- ▶ [GWM \(gateway module A\)](#)
- ▶ [HCM \(headlamp control module\)](#)
- ▶ [HVAC \(heating, ventilation and air conditioning\)](#)
- ▶ [IPC \(instrument panel cluster\)](#)
- ▶ [IPMA \(image processing module A\)](#)
- ▶ [LDCMA \(Lighting Driver Control Module A\)](#)
- ▶ [LDCMB \(Lighting Driver Control Module B\)](#)
- ▶ [MRCMA \(movable roof control module A\)](#)
- ▶ [MRCMB \(movable roof control module B\)](#)
- ▶ [OCSM \(occupant classification system module\)](#)
- ▶ [PAM \(parking assist control module\)](#)
- ▶ [PCM \(powertrain control module\)](#)
- ▼ [PDM \(passenger door module\)](#)

DTC	Description	PINPOINT TEST
B108F:23	Cabin Lock/Unlock Switch: Signal Stuck Low	<a href="#">J: THE DOOR LOCKS OPERATE ONLY ONE WAY OR ARE INOPERATIVE</a> (Locks, Latches and Entry Systems)
B1164:11	Right Mirror Heater Output: Circuit Short To Ground	<a href="#">F: ONE OR BOTH HEATED EXTERIOR MIRRORS ARE INOPERATIVE OR ALWAYS ON - FOR VEHICLE WITH DDM / PDM</a> (Rear View Mirrors)
B1164:15	Right Mirror Heater Output: Circuit Short To Battery Or Open	<a href="#">F: ONE OR BOTH HEATED EXTERIOR MIRRORS ARE INOPERATIVE OR ALWAYS ON - FOR VEHICLE WITH DDM / PDM</a> (Rear View Mirrors)
B1165:11	Left Front Puddle Lamp Output: Circuit Short To Ground	<a href="#">E: A PUDDLE LAMP IS INOPERATIVE OR ALWAYS ON</a> (Interior Lighting)
B1165:15	Left Front Puddle Lamp Output: Circuit Short To Battery Or Open	<a href="#">E: A PUDDLE LAMP IS INOPERATIVE OR ALWAYS ON</a> (Interior Lighting)
B1166:11	Right Front Puddle Lamp Output: Circuit Short To Ground	<a href="#">E: A PUDDLE LAMP IS INOPERATIVE OR ALWAYS ON</a> (Interior Lighting)
B1166:15	Right Front Puddle Lamp Output: Circuit Short To Battery Or Open	<a href="#">E: A PUDDLE LAMP IS INOPERATIVE OR ALWAYS ON</a> (Interior Lighting)
B1170:11	Back Light: Circuit Short To Ground	<a href="#">H: ONE OR MORE PDM CONTROLLED ILLUMINATION SOURCE IS INOPERATIVE OR ALWAYS ON</a> (Instrument Panel and Interior Switches Illumination)

B1170:15	Back Light: Circuit Short To Battery Or Open	<a href="#">H: ONE OR MORE PDM CONTROLLED ILLUMINATION SOURCE IS INOPERATIVE OR ALWAYS ON (Instrument Panel and Interior Switches Illumination)</a>
B118D:11	Right Blind Spot Warning Indicator: Circuit Short To Ground	<a href="#">E: AN EXTERIOR MIRROR BLIS@/CTALED IS INOPERATIVE (FOR VEHICLE WITH DDM/PDM) (Blind Spot Information System)</a>
B118D:15	Right Blind Spot Warning Indicator: Circuit Short To Battery Or Open	<a href="#">C: AN EXTERIOR MIRROR BLIS@/CTALED IS ALWAYS ON (FOR VEHICLE WITH DDM/PDM) (Blind Spot Information System)</a>
B118D:15	Right Blind Spot Warning Indicator: Circuit Short To Battery Or Open	<a href="#">E: AN EXTERIOR MIRROR BLIS@/CTALED IS INOPERATIVE (FOR VEHICLE WITH DDM/PDM) (Blind Spot Information System)</a>
B11F7:01	Passenger Folding Mirror Motor: General Electrical Failure	<a href="#">G: THE RIGHT HAND (RH) AND/OR LEFT HAND (LH) POWER FOLDING MIRROR IS INOPERATIVE/DOES NOT OPERATE CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>
B11F7:13	Passenger Folding Mirror Motor: Circuit Open	<a href="#">G: THE RIGHT HAND (RH) AND/OR LEFT HAND (LH) POWER FOLDING MIRROR IS INOPERATIVE/DOES NOT OPERATE CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>
B1C11:01	Passenger Left/Right Mirror Motor: General Electrical Failure	<a href="#">C: A SINGLE MIRROR HORIZONTAL OR VERTICAL OPERATION DOES NOT FUNCTION CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>
B1C11:13	Passenger Left/Right Mirror Motor: Circuit Open	<a href="#">C: A SINGLE MIRROR HORIZONTAL OR VERTICAL OPERATION DOES NOT FUNCTION CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>
B1C12:01	Passenger Up/Down Mirror Motor: General Electrical Failure	<a href="#">C: A SINGLE MIRROR HORIZONTAL OR VERTICAL OPERATION DOES NOT FUNCTION CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>
B1C12:13	Passenger Up/Down Mirror Motor: Circuit Open	<a href="#">C: A SINGLE MIRROR HORIZONTAL OR VERTICAL OPERATION DOES NOT FUNCTION CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>
B1C15:12	Passenger Up/Down Mirror Motor Feedback: Circuit Short To Battery	<a href="#">E: THE EXTERIOR MIRROR MEMORY RECALL FEATURE IS INOPERATIVE/DOES NOT OPERATE CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>
B1C15:14	Passenger Up/Down Mirror Motor Feedback: Circuit Short To Ground Or Open	<a href="#">E: THE EXTERIOR MIRROR MEMORY RECALL FEATURE IS INOPERATIVE/DOES NOT OPERATE CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>
B1C16:12	Passenger Left/Right Mirror Motor Feedback: Circuit Short To Battery	<a href="#">E: THE EXTERIOR MIRROR MEMORY RECALL FEATURE IS INOPERATIVE/DOES NOT OPERATE CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>
B1C16:14	Passenger Left/Right Mirror Motor Feedback: Circuit Short To Ground Or Open	<a href="#">E: THE EXTERIOR MIRROR MEMORY RECALL FEATURE IS INOPERATIVE/DOES NOT OPERATE CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>
B1D06:11	Left Turn Indicator: Circuit Short To Ground	<a href="#">I: ONE EXTERIOR MIRROR TURN SIGNAL LAMP IS INOPERATIVE OR ALWAYS ON, VEHICLES WITH MEMORY MIRRORS, RHD VEHICLES ONLY (Turn Signal and Hazard Lamps)</a>
B1D06:15	Left Turn Indicator: Circuit Short To Battery Or Open	<a href="#">I: ONE EXTERIOR MIRROR TURN SIGNAL LAMP IS INOPERATIVE OR ALWAYS ON, VEHICLES WITH MEMORY MIRRORS, RHD VEHICLES ONLY (Turn Signal and Hazard Lamps)</a>
B1D07:11	Right Turn Indicator: Circuit Short To Ground	<a href="#">H: ONE EXTERIOR MIRROR TURN SIGNAL LAMP IS INOPERATIVE OR ALWAYS ON, VEHICLES WITH MEMORY MIRRORS, LHD VEHICLES ONLY (Turn Signal and Hazard Lamps)</a>
B1D07:15	Right Turn Indicator: Circuit Short To Battery Or Open	<a href="#">H: ONE EXTERIOR MIRROR TURN SIGNAL LAMP IS INOPERATIVE OR ALWAYS ON, VEHICLES WITH MEMORY MIRRORS, LHD VEHICLES ONLY (Turn Signal and Hazard Lamps)</a>
C1B15:11	Sensor Supply Voltage B: Circuit Short To Ground	<a href="#">E: THE EXTERIOR MIRROR MEMORY RECALL FEATURE IS INOPERATIVE/DOES NOT OPERATE CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>
C1B15:15	Sensor Supply Voltage B: Circuit Short To Battery Or Open	<a href="#">E: THE EXTERIOR MIRROR MEMORY RECALL FEATURE IS INOPERATIVE/DOES NOT OPERATE CORRECTLY - FOR VEHICLE WITH DDM / PDM (Rear View Mirrors)</a>

U0140:00	Lost Communication With Body Control Module: No Sub Type Information	<a href="#">P: U0140:00, U0422:00</a> (Locks, Latches and Entry Systems)
U0164:00	Lost Communication With HVAC Control Module 'A': No Sub Type Information	<a href="#">AD: U0164:00</a> (Locks, Latches and Entry Systems)
U0208:00	Lost Communication With Seat Control Module 'A': No Sub Type Information	<a href="#">AE: U0208:00, U0509:00</a> (Locks, Latches and Entry Systems)
U0232:00	Lost Communication With Side Obstacle Detection Control Module 'A': No Sub Type Information	<a href="#">AF: U0232:00</a> (Locks, Latches and Entry Systems)
U0233:00	Lost Communication With Side Obstacle Detection Control Module 'B': No Sub Type Information	<a href="#">AG: U0233:00</a> (Locks, Latches and Entry Systems)
U0294:00	Lost Communication With Powertrain Control Monitor Module: No Sub Type Information	<a href="#">Q: U0294:00</a> (Locks, Latches and Entry Systems)
U0422:00	Invalid Data Received From Body Control Module: No Sub Type Information	<a href="#">P: U0140:00, U0422:00</a> (Locks, Latches and Entry Systems)
U0509:00	Invalid Data Received From Seat Control Module 'A': No Sub Type Information	<a href="#">AE: U0208:00, U0509:00</a> (Locks, Latches and Entry Systems)
U2010:11	Switch Illumination: Circuit Short To Ground	<a href="#">AB: DOOR LOCK INDICATOR IS INOPERATIVE</a> (Locks, Latches and Entry Systems)
U2010:11	Switch Illumination: Circuit Short To Ground	<a href="#">H: ONE OR MORE PDM CONTROLLED ILLUMINATION SOURCE IS INOPERATIVE OR ALWAYS ON</a> (Instrument Panel and Interior Switches Illumination)
U2010:15	Switch Illumination: Circuit Short To Battery Or Open	<a href="#">AB: DOOR LOCK INDICATOR IS INOPERATIVE</a> (Locks, Latches and Entry Systems)
U2010:15	Switch Illumination: Circuit Short To Battery Or Open	<a href="#">H: ONE OR MORE PDM CONTROLLED ILLUMINATION SOURCE IS INOPERATIVE OR ALWAYS ON</a> (Instrument Panel and Interior Switches Illumination)
U2100:00	Initial Configuration Not Complete: No Sub Type Information	<a href="#">R: U2100:00</a> (Locks, Latches and Entry Systems)
U2200:00	Control Module Configuration Memory Corrupt: No Sub Type Information	<a href="#">S: U2200:00, U3000:49</a> (Locks, Latches and Entry Systems)
U3000:49	Control Module: Internal Electronic Failure	<a href="#">S: U2200:00, U3000:49</a> (Locks, Latches and Entry Systems)
U3003:16	Battery Voltage: Circuit Voltage Below Threshold	<a href="#">T: U3003:16</a> (Locks, Latches and Entry Systems)
U3003:17	Battery Voltage: Circuit Voltage Above Threshold	<a href="#">U: U3003:17</a> (Locks, Latches and Entry Systems)

- ▶ [PSCM \(power steering control module\)](#)
- ▶ [RCM \(restraints control module\)](#)
- ▶ [RTM \(radio transceiver module\)](#)
- ▶ [SCCM \(steering column control module\)](#)
- ▶ [SODL \(side obstacle detection control module LH\)](#)
- ▶ [SODR \(side obstacle detection control module RH\)](#)
- ▶ [TCU \(telematic control unit module\)](#)
- ▶ [VDM \(vehicle dynamics control module\)](#)
- ▶ [WACM \(wireless accessory charging module\)](#)

